



PSEN cs5.1 M12/8

PILZ
THE SPIRIT OF SAFETY

- ▶ PSEN sensor technology

This document is the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

| | |
|---|-----------|
| Introduction | 5 |
| Validity of documentation | 5 |
| Using the documentation | 5 |
| Definition of symbols | 5 |
| Safety | 6 |
| Intended use | 6 |
| Safety regulations | 7 |
| Safety assessment | 7 |
| Additional documents that apply | 7 |
| Use of qualified personnel | 7 |
| Warranty and liability | 8 |
| Disposal | 8 |
| For your safety | 8 |
| Unit features | 8 |
| Function description | 9 |
| Basic function | 9 |
| Block diagram | 10 |
| Safety Device Diagnostics | 10 |
| Operating distances | 11 |
| Lateral and vertical offset | 13 |
| Wiring | 19 |
| Important information | 19 |
| Connection to evaluation devices | 20 |
| Single connection | 21 |
| Series connection | 23 |
| Connection to Pilz evaluation devices | 26 |
| Teaching in the actuator | 27 |
| Installation | 27 |
| General | 27 |
| Safety switch | 29 |
| Actuator 5.1 | 30 |
| Actuator 5.1 low profile | 30 |
| Align safety switch and actuator | 33 |
| Use in operating heights higher than 2000 m above sea level | 34 |
| Adjustment | 34 |
| Operation | 35 |
| Normal mode | 35 |
| Error display | 36 |

| | |
|--|-----------|
| Dimensions in mm | 37 |
| Technical details safety switch | 39 |
| Technical details actuator | 43 |
| Classification according to ZVEI, CB24I | 45 |
| Safety characteristic data | 46 |
| Supplementary data | 47 |
| Radio approval..... | 47 |
| Order reference | 47 |
| Safety switch..... | 47 |
| Actuator | 47 |
| Complete systems | 47 |
| Accessories | 48 |
| EC declaration of conformity | 49 |

Introduction

Validity of documentation

This documentation is valid for the product PSEN cs5.1 M12/8 from Version 2.0.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.

**INFORMATION**

This gives advice on applications and provides information on special features.

Safety**Intended use**

The safety functions of the safety switch are:

- ▶ Safe shutdown of safety outputs when the actuator is removed beyond the assured release distance s_{ar} or when the actuator is not detected
- ▶ Remain shut down safely after the actuator has been removed

The safety switch meets the requirements in accordance with:

- ▶ EN 60947-5-3: PDDB with one of the approved actuators
- ▶ EN 62061: SIL CL 3
- ▶ EN ISO 13849-1: PL e (Cat. 4)
- ▶ EN ISO 14119: Coding level Low, type 4

The safety switch may only be used with one of the approved actuators.

The safety level PL e (Cat. 4)/SIL CL 3 is only achieved if

- ▶ the safety outputs use 2-channel processing.

The following is deemed improper use in particular

- ▶ Any component, technical or electrical modification to the product,
- ▶ Use of the product outside the areas described in this manual,
- ▶ Use of the product outside the technical details (see [Technical details](#)  39).

**NOTICE****EMC-compliant electrical installation**

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

Approved actuators:

- ▶ PSEN cs5.1
- ▶ PSEN cs5.1 low profile glue
- ▶ PSEN cs5.1 low profile screw

Safety regulations

Safety assessment

Before using a device it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

Additional documents that apply

Please read and take note of the following documents.

Only for use of the Safety Device Diagnostics (SDD):

- ▶ Operating manual for the fieldbus module, for example SDD ES ETH or SDD ES PROFIBUS
- ▶ System description "Safety Device Diagnostics"

For the use of passive junctions:

- ▶ Operating manual of a passive junction, for example:
 - PSEN ix2 F4 code
 - PSEN ix2 F8 code
 - PDP67 F 4 code
 - PSEN Y junction M12 sensor
 - PSEN Y junction M12 cable

You will need to be conversant with the information in these documents in order to fully understand this operating manual.

Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

Disposal

- ▶ In safety-related applications, please comply with the mission time T_M in the safety-related characteristic data.
- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

For your safety



WARNING!

Loss of safety function due to manipulation of the interlocking device

Manipulation of the interlocking device may lead to serious injury and death.

- You should prevent any possibility of the interlocking device being manipulated through the use of a spare actuator.
- Keep the substitute actuator in a safe place and protect it from unauthorised access.
- If spare actuators are used, these must be installed as described in [Installation](#) [ 27].
- If the original actuators are replaced with substitute actuators, the original actuators must be destroyed before disposal.

- ▶ Do not remove the connector's protective cap until you are just about to connect the unit. This will prevent potential contamination.

Unit features

- ▶ Transponder technology for presence detection
- ▶ Pilz coding type: Coded
- ▶ Dual-channel operation
- ▶ 2 safety inputs for series connection of multiple safety switches
- ▶ 2 safety outputs
- ▶ Safety Device Diagnostics (SDD)
 - Safety Device Diagnostics can be used to poll sensor information, to perform actions and to read configuration parameters
 - Manipulation protection in accordance with ISO 14119 is possible by verifying the short name of the actuator through the controller via SDD communication

- ▶ Diagnostic input for Y1 for Safety Device Diagnostics (SDD)
- ▶ Signal output/diagnostic output Y32 for Safety Device Diagnostics
- ▶ LED display for:
 - State of actuator detection
 - State of the inputs
 - Supply voltage/fault
- ▶ 4 actuation directions, each with 3 approach directions (see [Explanation of markings](#) [ 11])
 - Square marking for normal operating distance
 - Triangle marking for short operating distance
 - 2 semicircle markings for a lateral approach. Please note the Lateral and vertical offset with the lateral approach to the semicircle marking.

The guaranteed safe operating distances for the specified selections only apply when the actuator approaches the switch vertically. With the other approach directions, the operating distances may sometimes be considerably larger (particularly when approaching the semicircle).

Function description

Basic function

The safety outputs may have a high or low signal, depending on the position of the actuator and the signal status of the safety inputs.

Electrical states of the safety inputs and outputs (when switch is ready for operation: DEVICE LED is green):

| Actuator in the re- sponse range | Safety input S11 | Safety input S21 | Safety out- put 12 | Safety out- put 22 | Signal out- put Y32 (without use of the SDD) |
|--|---------------------|---------------------|-----------------------|-----------------------|---|
| Yes | High | High | High | High | High |
| Yes | Low | Low | Low | Low | High |
| No | x | x | Low | Low | Low |
| Yes | High | Low | High | Low | High |
| Yes | Low | High | Low | High | High |

x: High or low signal

Feasibility monitoring for safety inputs S11 and S21

- ▶ If one safety input switches from high to low, while the other safety input remains high, an unequal status is displayed: **Input LED has quick yellow flashes and Device LED flashes red**
- ▶ If this safety input switches back from low to high, while the other safety input remains high, a feasibility error is displayed and a partial operation lock is triggered: **Input LED flashes yellow and Device LED flashes red**

A switch to a high signal will only lead to normal switch operation if both inputs had a low signal. From this moment on, the switch to high may occur (partial operation lock see [Error display \[36\]](#)).

► Diagnostic input Y1


If a fieldbus module of the SDD is used, the diagnostic input Y1 is automatically activated and data is read.

If no fieldbus module of the SDD is used, the diagnostic input Y1 is not used.

► Signal output/diagnostic output Y32

The status of the actuator is output. If a fieldbus module of the SDD is used, the signal output/diagnostic output for the writing of data is activated.

Block diagram

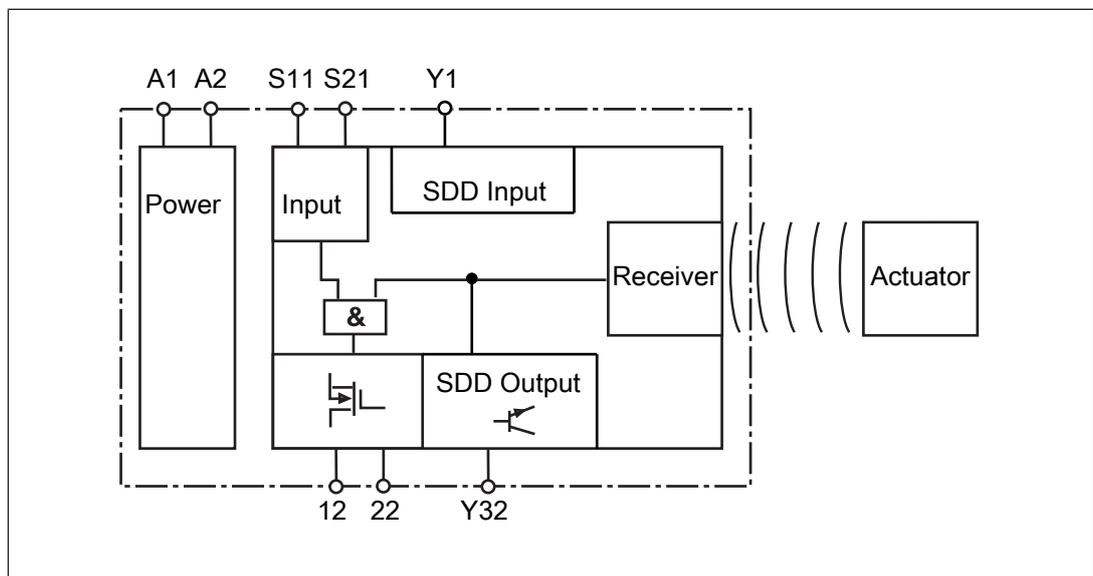

Safety Device Diagnostics

Safety Device Diagnostics is an option that can be selected independently of the safety-related wiring.

When using the Safety Device Diagnostics, up to 16 sensors connected in series can be connected as a subscriber to a fieldbus module.

The communication of the sensors with the fieldbus module is automatically built up again with each new supply of the supply voltage. As a result, a sensor can be exchanged, e.g. when servicing, without the need for special measures.

An exchange can be detected via the fieldbus module e.g. through the serial number.

► With Safety Device Diagnostics there are the following diagnostic options for the fieldbus module:

- Poll information of the sensors (examples: what sensor in the series has switched, at what point could there be an open circuit in the series connection)
- Read configuration parameters of the sensor (examples: Number of teach-in processes remaining, serial number of the sensor)
- Perform actions (example: poll updated actuator name)

The results of the sensor diagnostics can be checked already during the installation phase via the display in the fieldbus module, without the need to connect the fieldbus module to the network.

► With Safety Device Diagnostics there are the following diagnostic options for the fieldbus module for simple wiring:



- Information is passed on via the fieldbus module directly to the network
- Mappings of the signal outputs to the sensor are automated by the SDD.

This prevents wiring errors and an expansion or reduction of the sensors is possible without the need to change existing wiring.


- Wiring in accordance with IP20: Rapid installation in the control cabinet is enabled.
- Wiring in accordance with IP67: Various passive junctions can be used (see [Order references for accessories \[48\]](#)) to connect several sensors with only one cable from the field in the control cabinet.

Further information on Safety Device Diagnostics can be found in [Additional documents that apply \[7\]](#).

Operating distances
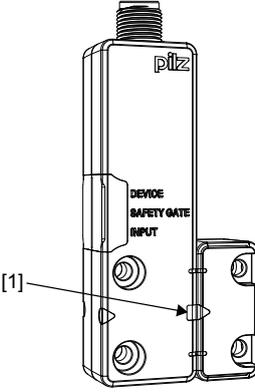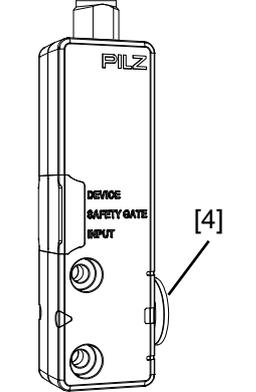
| Actuator PSEN cs5.1 | Actuator PSEN cs5.1 low profile glue or PSEN cs5.1 low profile screw | Operating distances |
|---|---|--|
|  |  | <p>[1] Actuator PSEN cs5.1 aligned to the square marking on the switch</p> <p>S_{ao} Assured operating distance: 8 mm S_{ar} Assured release distance: 20 mm S_o Typical operating distance: 11 mm S_r Typical release distance: 14 mm</p> <p>[4] Actuator PSEN cs5.1 low profile glue or PSEN cs5.1 low profile screw aligned to the square marking on the switch</p> <p>S_{ao} Assured operating distance: 5 mm S_{ar} Assured release distance: 20 mm S_o Typical operating distance: 10 mm S_r Typical release distance: 12 mm</p> |

| | | |
|--|--|--|
| | | <p>[2] Actuator PSEN cs5.1 aligned to the triangle marking on the switch</p> <p>S_{ao} Assured operating distance: 4 mm S_{ar} Assured release distance: 12 mm S_o Typical operating distance: 5 mm S_r Typical release distance: 8 mm</p> <p>The alignment of the actuators PSEN cs5.1 low profile glue or PSEN cs5.1 low profile screw to the triangle marking is not provided for</p> |
| | | <p>[3] Actuator PSEN cs5.1 aligned to the semicircle marking on the switch</p> <p>S_{ao} Assured operating distance: 3 mm S_{ar} Assured release distance: 16 mm S_o Typical operating distance: 6 mm S_r Typical release distance: 8 mm</p> <p>[6] Actuator PSEN cs5.1 low profile glue or PSEN cs5.1 low profile screw aligned to the semicircle marking on the switch</p> <p>S_{ao} Assured operating distance: 2 mm S_{ar} Assured release distance: 14 mm S_o Typical operating distance: 5 mm S_r Typical release distance: 7 mm</p> |





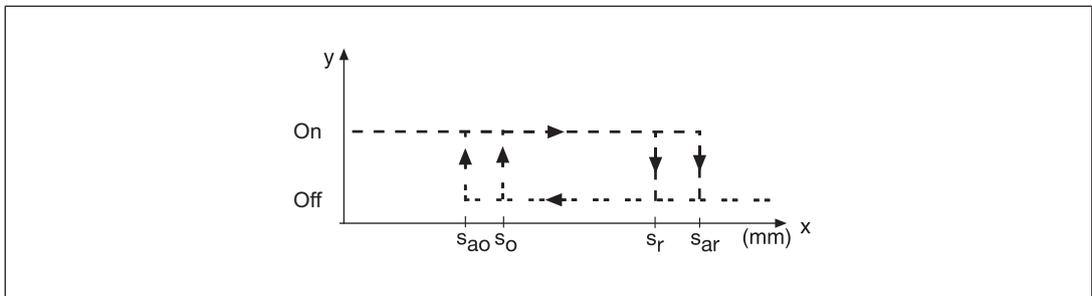


The switching distances of the actuators PSEN cs5.1 low profile glue and PSEN cs5.1 low profile screw were determined under the following conditions:

- ▶ Assured operating distance S_{ao} and assured release distance S_{ar}
 - Measurement over the entire temperature range
 - Installed on various base materials
 - Taking into account product tolerances
- ▶ Typical operating distance S_o and typical release distance S_r
 - Measured at room temperature
 - Installed on plastic

Lateral and vertical offset


Lateral offset when aligning to the triangle or square marking
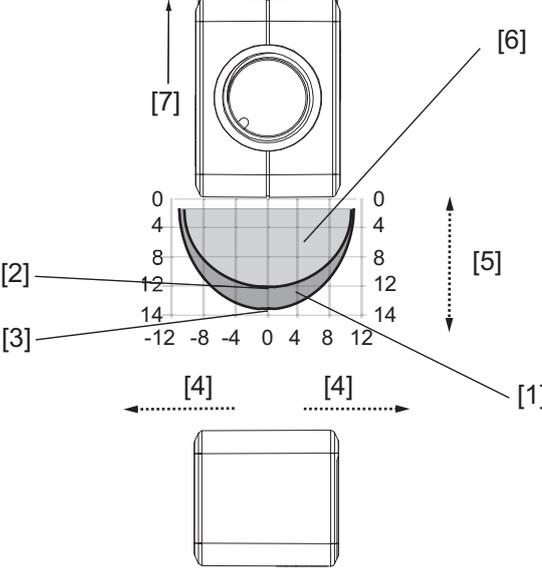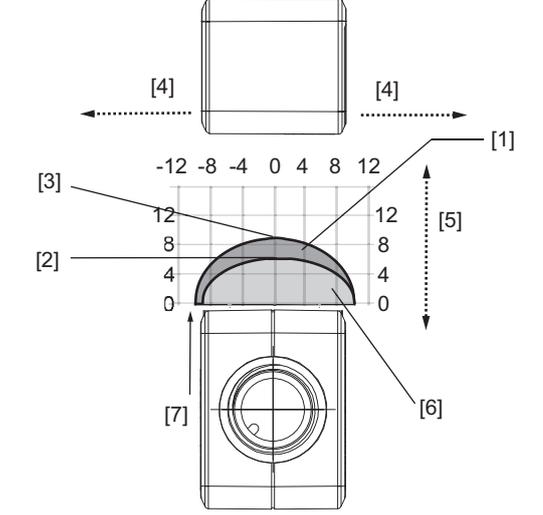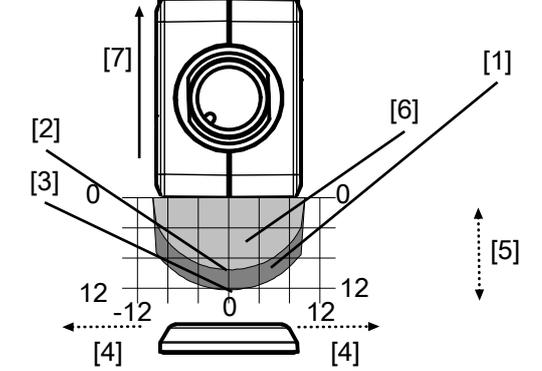
| | Alignment 1: Actuator PSEN cs5.1 aligned to the square marking on the switch | Alignment 2: Actuator PSEN cs5.1 aligned to the triangle marking on the switch |
|---|---|--|
|  |  |  |
| | Alignment 1: Actuator PSEN cs5.1 low profile glue or PSEN cs5.1 low profile screw aligned to the square marking on the switch | Alignment 2: Actuator PSEN cs5.1 low profile glue or PSEN cs5.1 low profile screw aligned to the triangle marking on the switch |
|  |  | <p>Actuator PSEN cs5.1 low profile glue or PSEN cs5.1 low profile screw to triangle marking is not suitable because the operating distances are too low.</p> |

Legend

- [1] Hysteresis
- [2] Typical operating distance S_o
- [3] Typical release distance S_r
- [4] Offset in mm
- [5] Operating distance in mm
- [6] Response range
- [7] Status of LED

Lateral offset when aligning to the semicircle marking

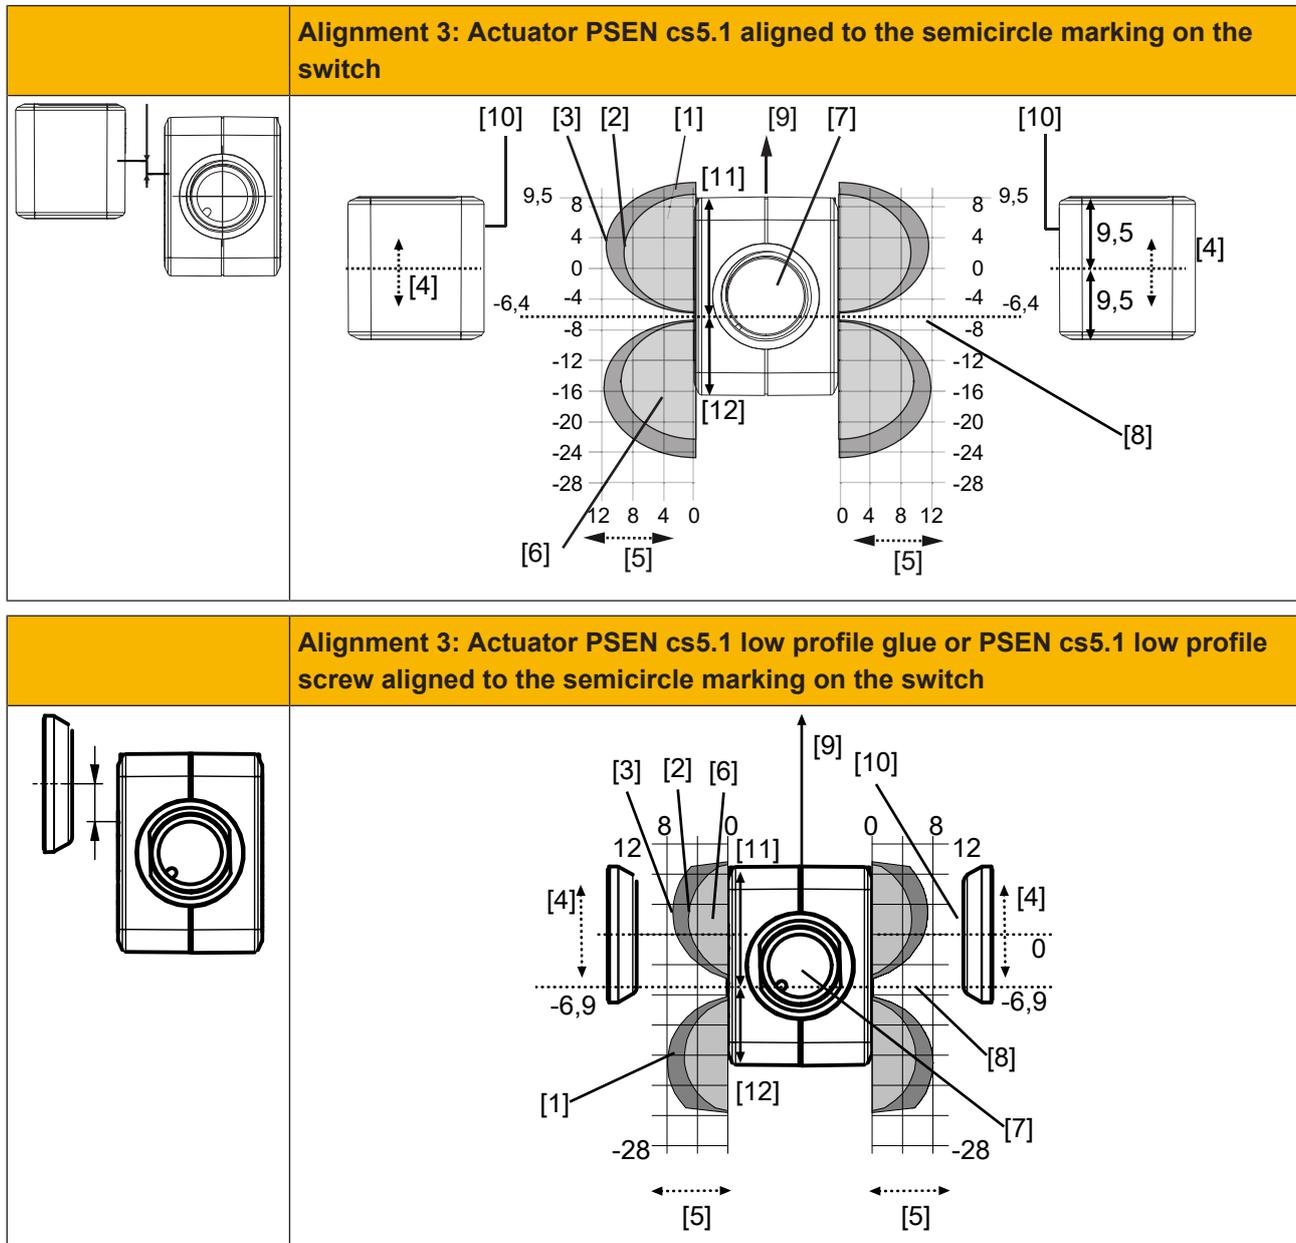


Legend


- [1] Hysteresis
- [2] Typical operating distance S_o
- [3] Typical release distance S_r
- [4] Offset in mm (distance of the middle of the actuator to the zero line in the grid)
- [5] Operating distance in mm
- [6] Response range
- [7] Connector on the safety switch
- [8] Limit of response range, position of gate hinge
- [9] Status of LED
- [10] Sensing face of the actuator, labelled with Pilz logo
- [11] Distance from the front edge of the safety switch to the limit of the response range (position of the gate end stop) = 15.9 mm

[12] Distance from the rear edge of the safety switch to the limit of the response range (position of the gate end stop) = 10.5 mm

Vertical offset when aligning to the triangle or square marking

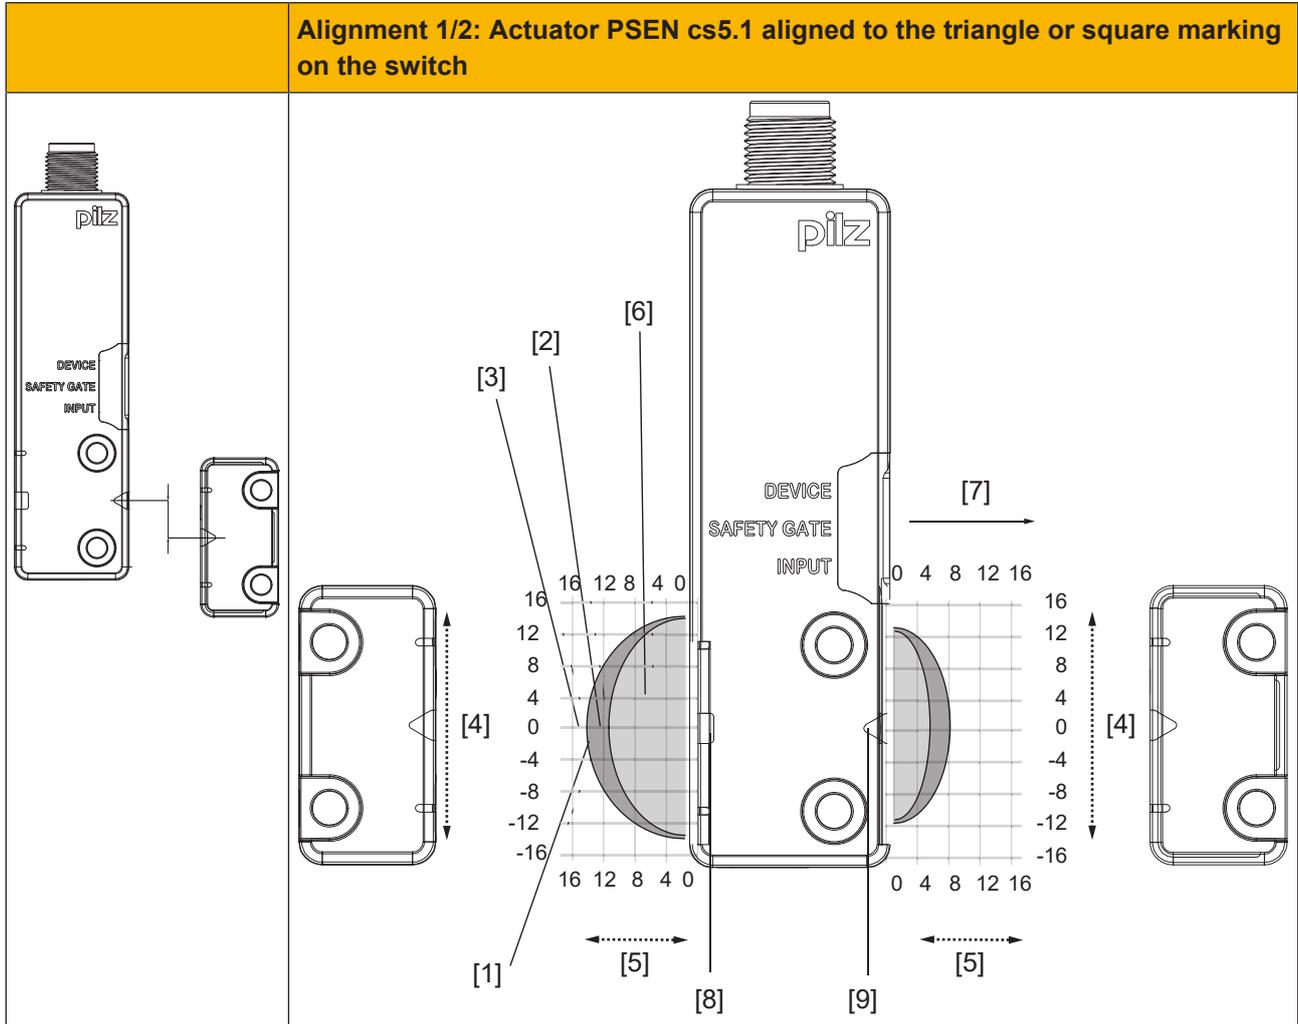


Alignment 1/2: Actuator PSEN cs5.1 low profile glue or PSEN cs5.1 low profile screw aligned to the square marking on the switch

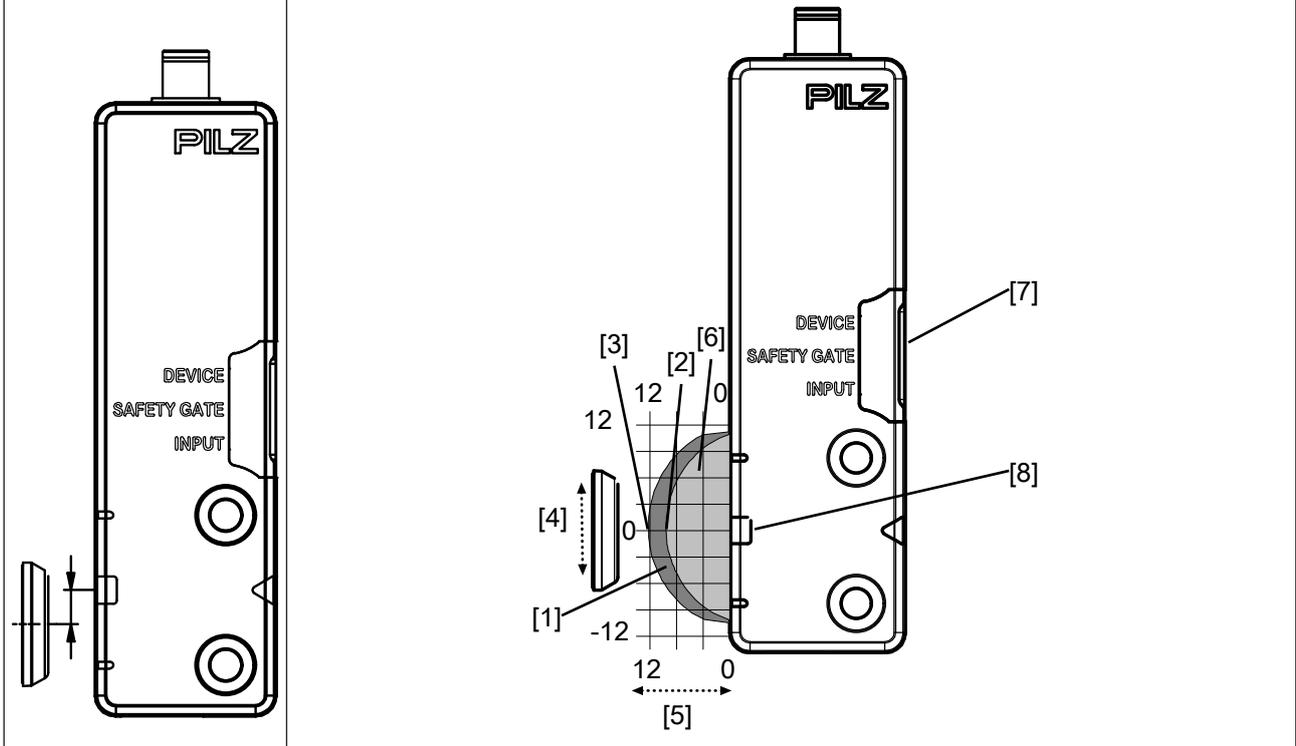


Legend

- [1] Hysteresis
- [2] Typical operating distance S_o
- [3] Typical release distance S_r
- [4] Offset in mm
- [5] Operating distance in mm
- [6] Response range
- [7] Status of LED
- [8] Square marking
- [9] Triangle marking

Vertical offset when aligning to the semicircle marking

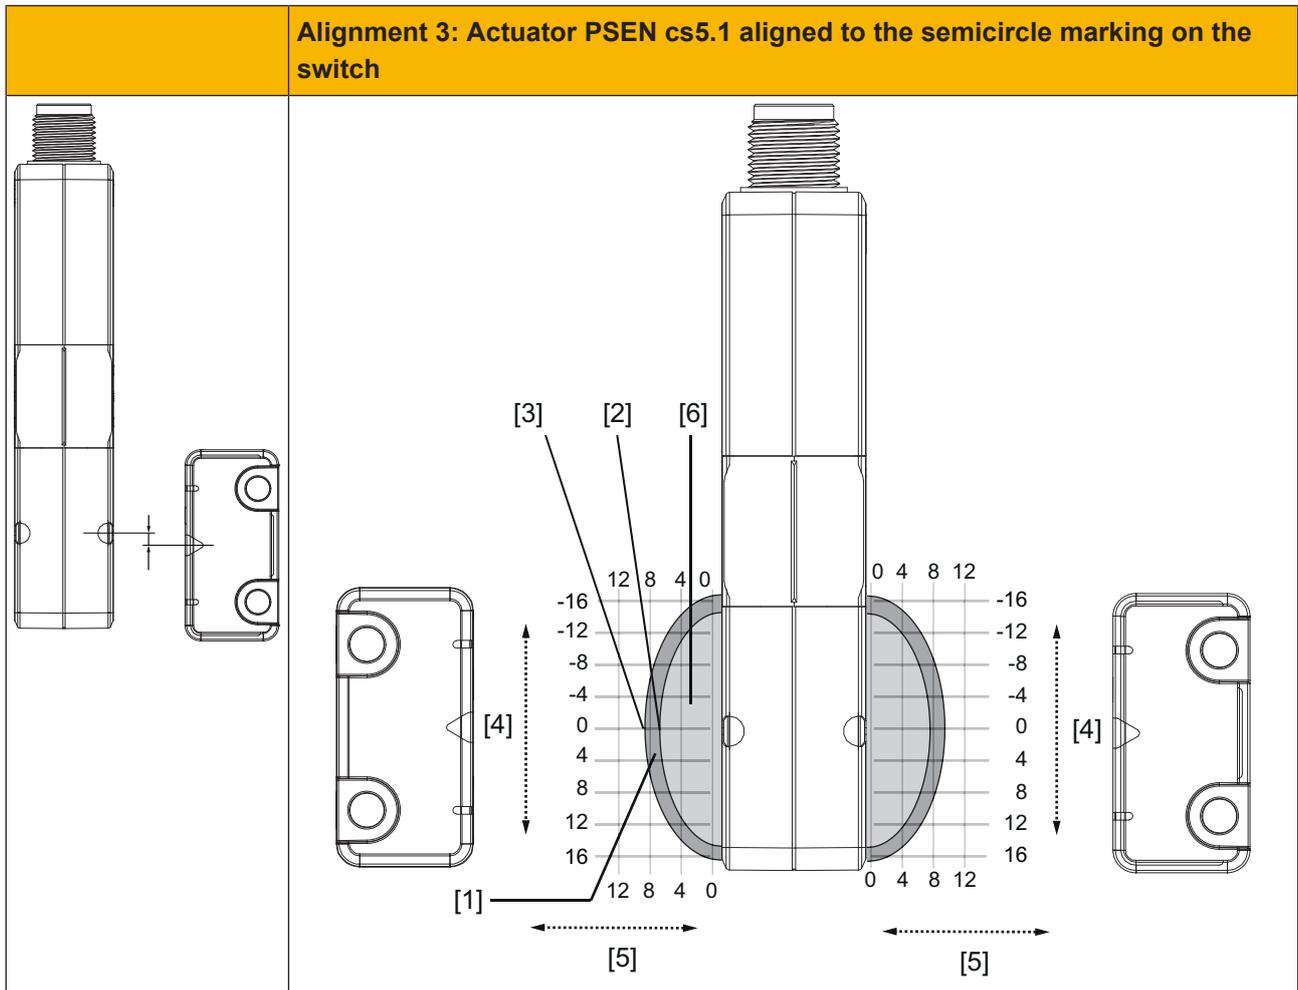

Alignment 3: Actuator PSEN cs5.1 low profile glue or PSEN cs5.1 low profile screw aligned to the semicircle marking on the switch

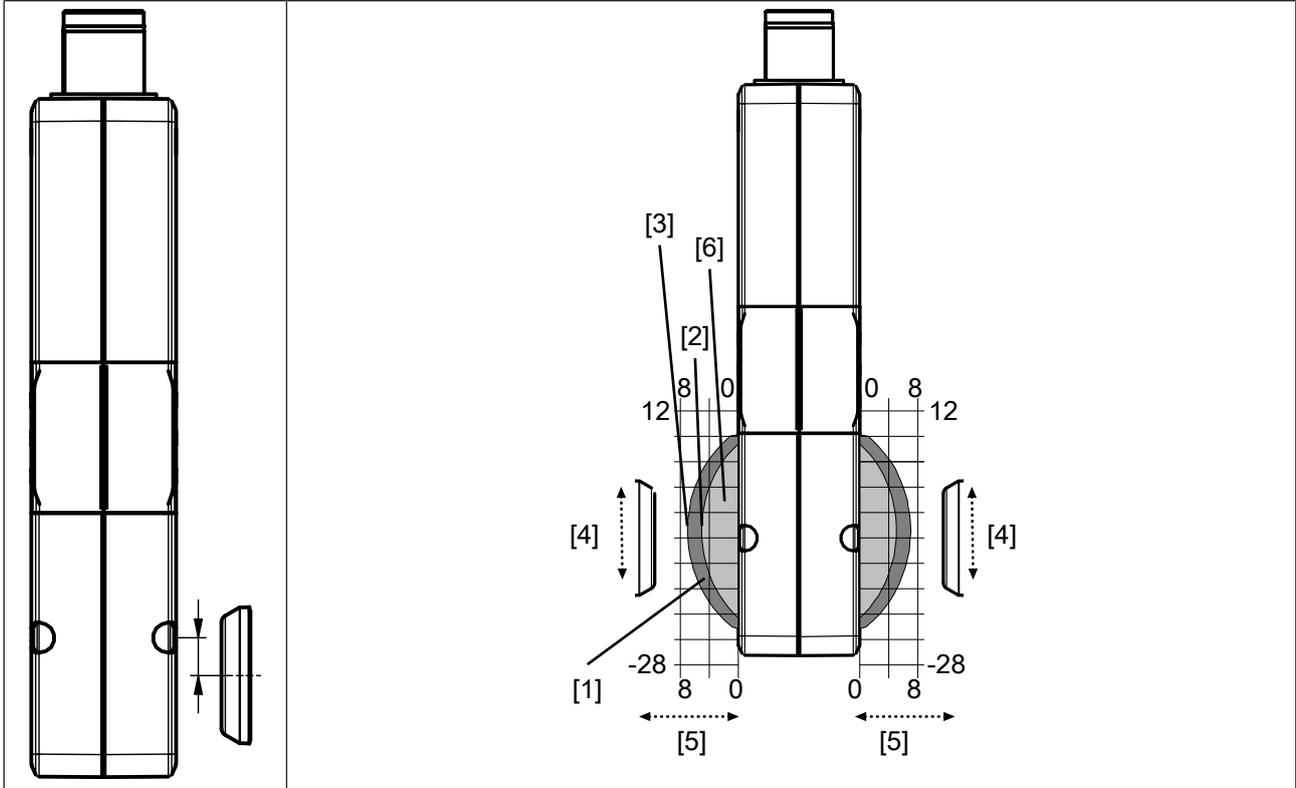

Legend

- [1] Hysteresis
- [2] Typical operating distance S_o
- [3] Typical release distance S_r
- [4] Offset in mm
- [5] Operating distance in mm
- [6] Response range

Wiring

Important information

- ▶ Information given in the [Technical details \[39\]](#) must be followed.
- ▶ Switch off the supply voltage before disconnecting the plug-in connection.
- ▶ Make sure that when connecting or separating the connector the pollution degree 1 or 2 is maintained.
- ▶ The max. cable length l_{\max} in the input circuit is calculated from
 - the max. cable capacitance at the safety outputs (see [Technical data \[39\]](#)).
 - the minimum permitted supply voltage at the safety switch (19.2 V).
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).
- ▶ The inputs and outputs of the safety switch must have a protective separation to voltages over 60 VDC.




INFORMATION

Only use safety relays with a 24 VDC supply voltage. Safety relays with a wide-range power supply or in AC device versions have internal potential isolation and are not suitable as evaluation devices.

- ▶ The supply voltage to the safety switch must be protected with a 2 A to 4 A quick-acting fuse.
- ▶ Ensure the wiring and EMC requirements of EN 60204-1 are met.
- ▶ When connecting in series, consider the requirements of manipulation protection and the protection against bypassing or from overriding the safety switch (EN ISO 14119).
- ▶ When the safety inputs of the safety switch are controlled by an upstream device, and they are not wired with 24 V,
 - They must be monitored for shorts across contacts (e.g. by PSEN cs, PSEN ml, PSEN sg or PSEN sl) **or**
 - The faults at the safety inputs that can occur by shorts across contact will have to be excluded by suitable measures (e.g. wiring in accordance with EN 602041).

Pin assignment, connector and cable

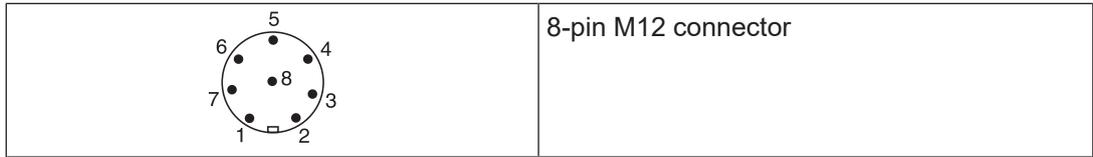

| PIN | Connection designation | Function | Wire colour |
|-----|------------------------|---------------------------------|-------------|
| 1 | S21 | Input, channel 2 | white |
| 2 | A1 | +24 VUB | brown |
| 3 | 12 | Output, channel1 | green |
| 4 | 22 | Output, channel2 | yellow |
| 5 | Y32 | Signal output/diagnostic output | grey |
| 6 | S11 | Input, channel 1 | pink |
| 7 | A2 | 0 V UB | blue |
| 8 | Y1 | Diagnostics input | red |

The wire colour also applies for the cable available from Pilz as an accessory.



NOTICE

The inputs S11 and S21 may only be used for the series connection with Pilz sensors.

Connection to evaluation devices

Make sure that the selected evaluation device has the following property:

- ▶ OSSD signals are evaluated through 2 channels with plausibility monitoring

Please note:

- ▶ Information given in the [Technical details \[39\]](#) must be followed.
- ▶ The use of Safety Device Diagnostics is described in the System Description "Safety Device Diagnostics".




CAUTION!

Do not connect the signal output to 0 V!


If the signal output Y32 is connected to 0 V, the safety switch may be damaged as a result. Connect the signal output Y32 to a consumer, e.g. to the input on a control system, or leave the signal output unconnected. Also note the max. current (see [Technical details \[39\]](#)).

Single connection

Connection diagram, single connection without SDD

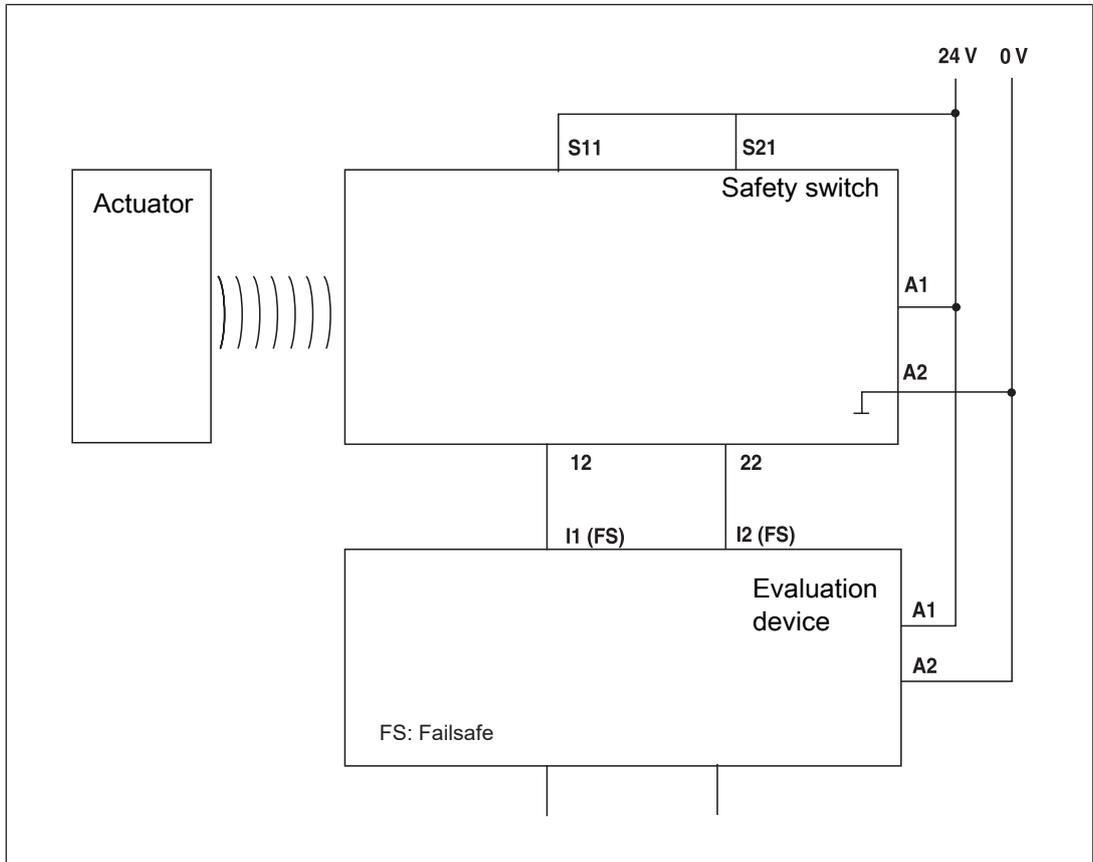

Connection diagram, single connection with SDD

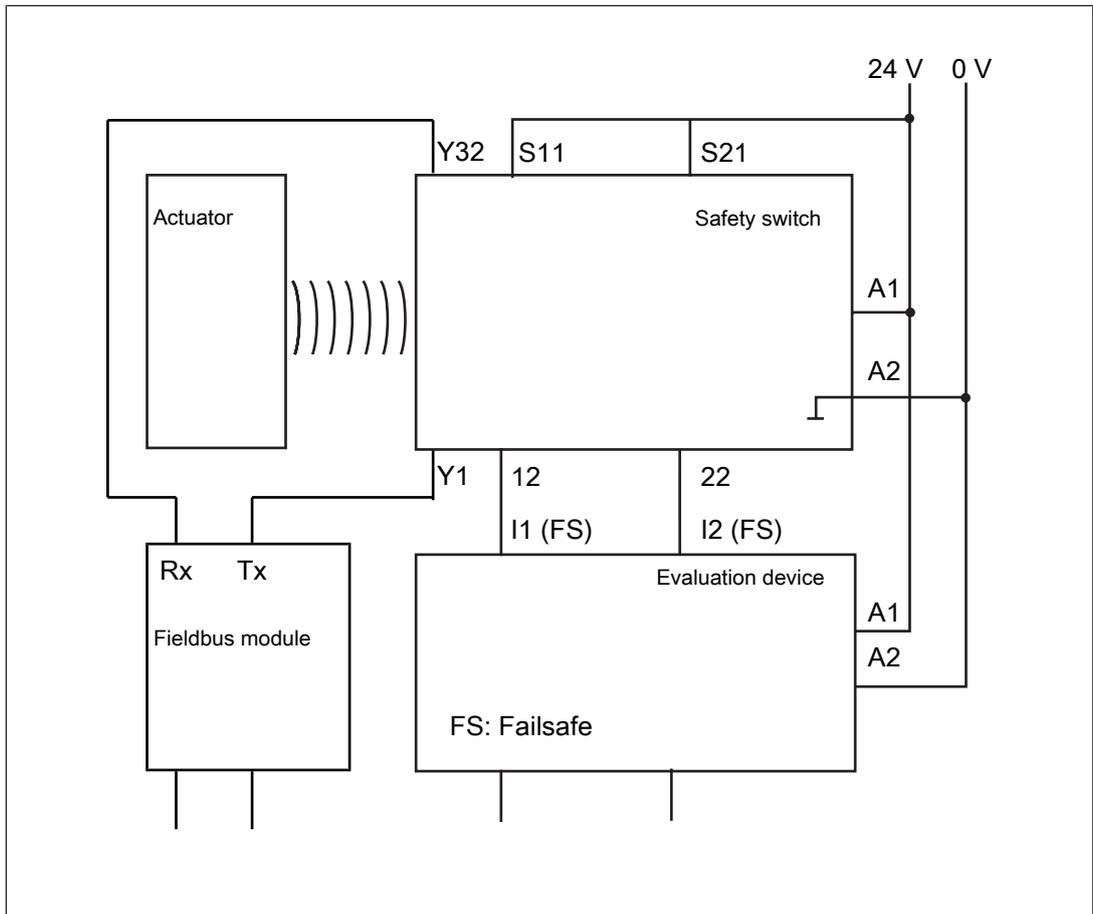

Series connection

The safety sensors PSENcode are also suitable for series connection with other sensors.

The series connection of maximum 32 sensors PSENcs 5.x and PSENcs 6.x is approved for SIL CL 3 without using the SDD.

When using the SDD, the series connection of maximum 16 sensors PSENcs 5.x and PSENcs 6.x is approved

In series connections with use of the SDD, use only use sensors that are suitable for SDD.

In practice, the maximum possible number will be limited by the following parameters, among others:

- ▶ The required SIL level (e.g. SIL CL 3),
- ▶ the required performance level (e.g. PL e (Cat. 4)),
- ▶ the maximum delay or risk time permitted by the application.

Ensure there is sufficient supply voltage, taking inrush currents and fusing into consideration.



CAUTION!

Extension of delay-on de-energisation

When several (n) devices are connected in series, the delay-on de-energisation time adds with the number of interconnected safety switches.


The max. delay-on de-energisation is made up of the risk time (see [Technical details \[39\]](#))

+ (n-1) x max. delay-on de-energisation of the inputs


+ max. delay-on de-energisation of the evaluation device

- ▶ When making series connections using SDD, only use the following passive junctions.
 - PSEN ix2 F4 code
 - PSEN ix2 F8 code
 - PSEN Y junction M8-M12/M12 PIGTAIL
 - PSEN Y junction M12-M12/M12 PIGTAIL
 - PSEN Y junction M12 SENSOR
 - PSEN Y junction M12 cable channel

Connection diagram, series connection without SDD

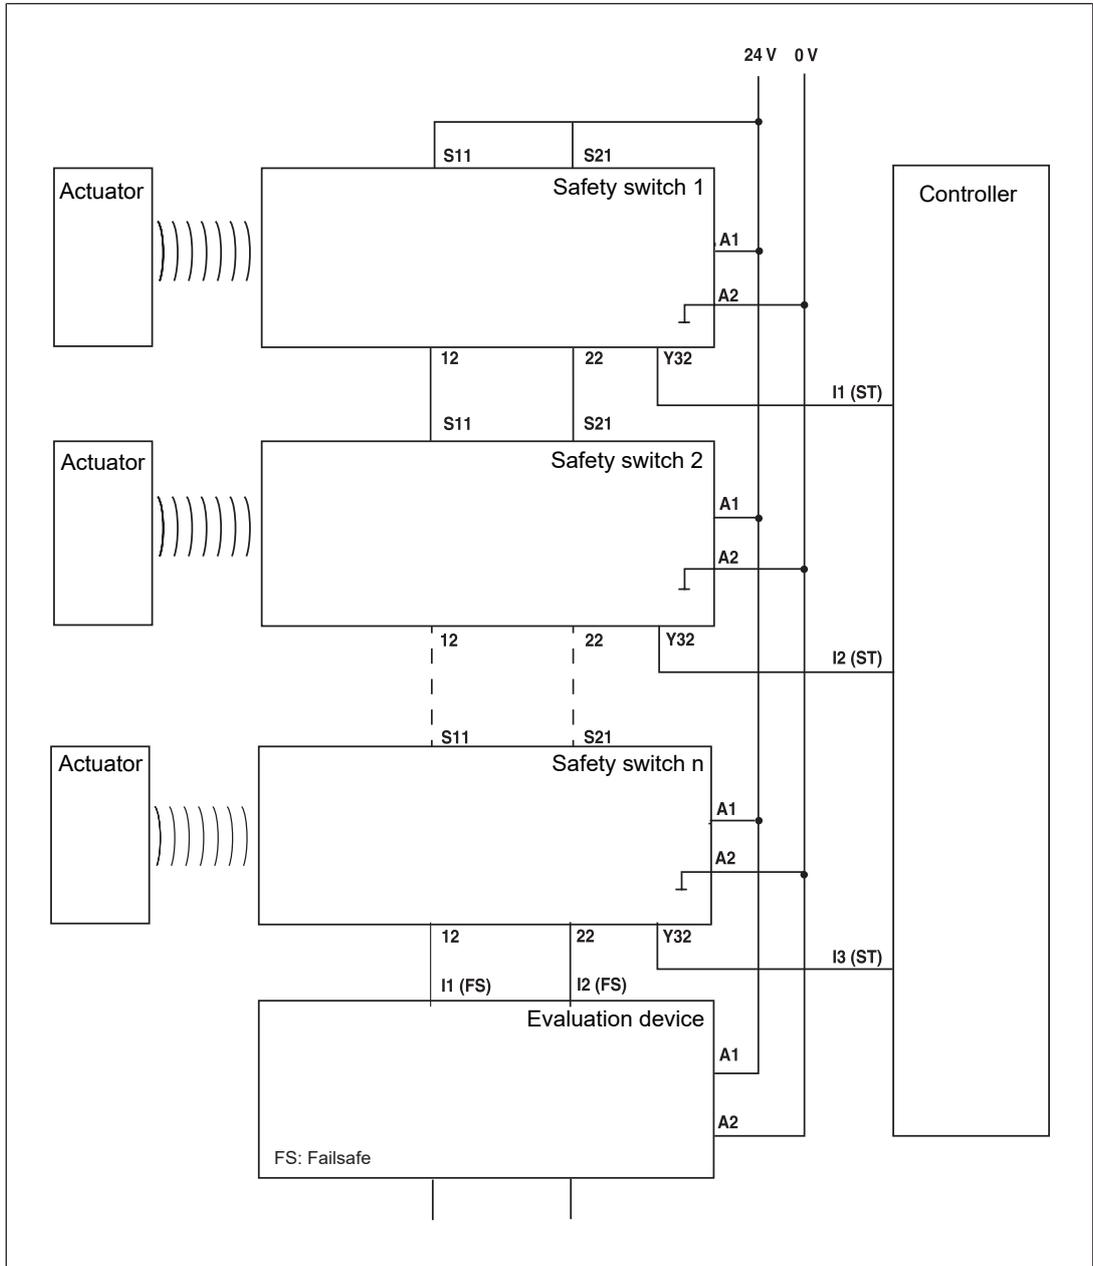

Connection diagram, series connection with SDD

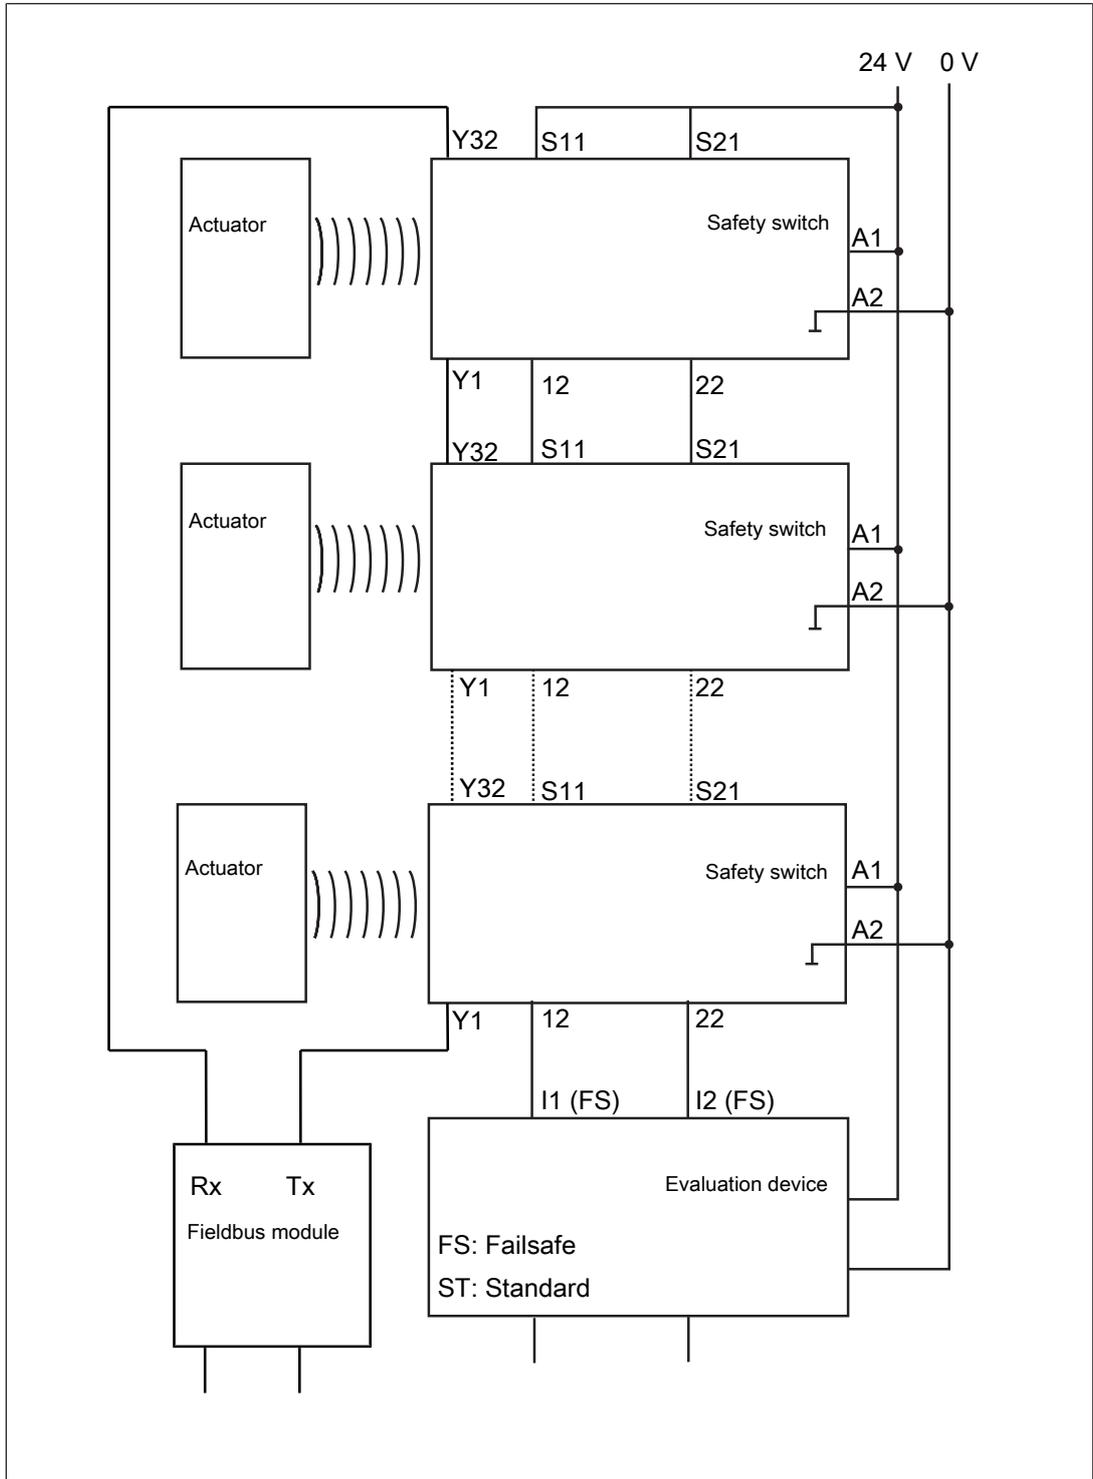

Connection to Pilz evaluation devices

The safety switch PSEN cs5.1 M12/8 can be connected to Pilz evaluation devices, for example.

Suitable Pilz evaluation devices are, for example:

- ▶ PNOZelog for safety gate monitoring
- ▶ PNOZpower for safety gate monitoring
- ▶ PNOZsigma for safety gate monitoring
- ▶ PNOZ X for safety gate monitoring
- ▶ PNOZmulti for safety gate monitoring


Configure the safety switch in the PNOZmulti Configurator with switch type 3.


- ▶ PSS for safety gate monitoring with standard function block SB064, SB066 or FS_Safety Gate

The correct connection to the respective evaluation device is described in the operating manual for the evaluation device. Make sure that the connection is made in accordance with the specifications in the operating manual for the selected evaluation device.

The connections to two evaluation devices are shown on the following pages, by way of example:

- ▶ PNOZ s3 and
- ▶ PNOZmulti

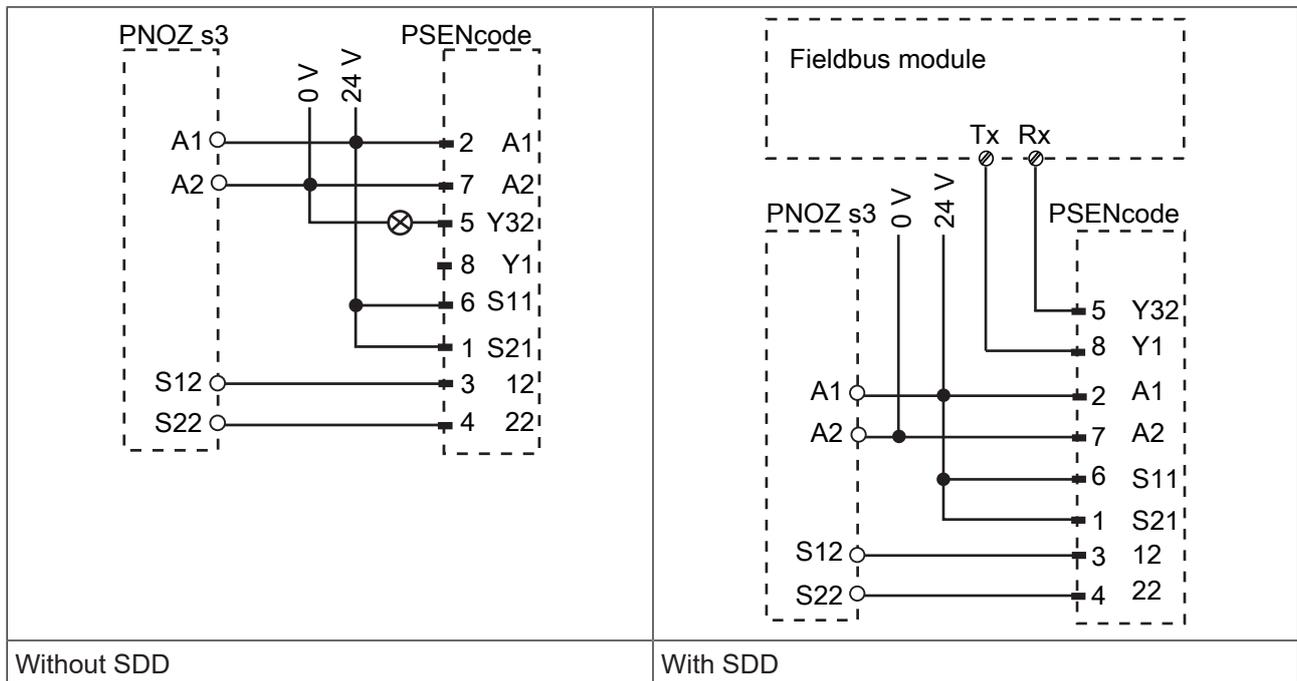

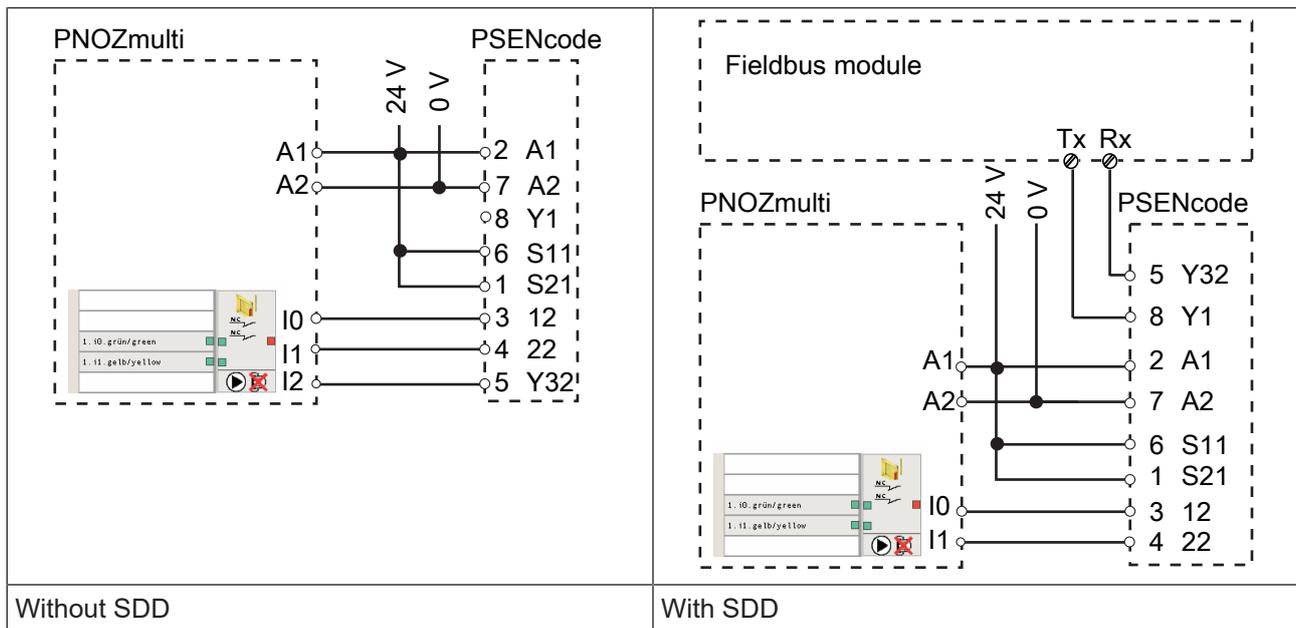

Teaching in the actuator

Any approved Pilz actuator (see Intended use) is detected as soon as it is brought into the response range.

Installation

General




CAUTION!

Potential loss of safety function due to changed device properties

The unit's properties may be affected if installed in an environment containing electrically or magnetically conductive material.

- Please check the operating distances and the assured release distance.

- ▶ The safety switch and actuator should be installed opposite each other in parallel. Make sure that the actuator is aligned to the marking on the safety switch that guarantees the operating distance required by the plant design (see [Operating distances \[11\]](#)).
- ▶ Torque setting: Please note the information provided under [Technical details \[39\]](#).
- ▶ The distance between two safety switches must be maintained (see [Technical details \[39\]](#)).
The distance can be undershot in certain application cases (see diagrams).

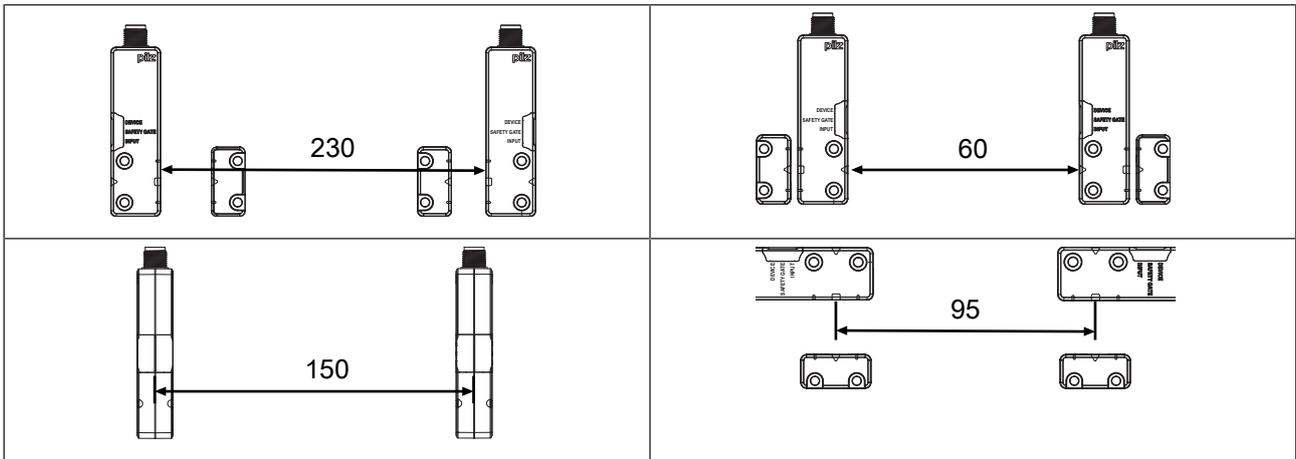

- ▶ Make sure that the safety switch and actuator cannot be used as an end stop.
- ▶ Please note the installation measures in accordance with EN ISO 14119 for a safety switch design 4 and with level of coding Low.
- ▶ Please note the permitted bending radii for the cable (see [Technical details](#) [📖 39]), to avoid excessive force on the individual strands.
- ▶ Make sure that the bend protection is not damaged. Such damage can cause the whole product to fail.
- ▶ For simpler installation, the mounting brackets (see [Order reference for Accessories](#) [📖 48]) can be used.




WARNING!

Loss of safety function due to non-permitted enlargement of the assured release distance when using both switching lobes (aligned at semicircle marking)

Depending on the application, serious injury or death may result.

- Install a mechanical stop when using the response range at the semicircle marking, to avoid unintended switching off at the limit of the response range and to prevent the maximum release distance from enlarging impermissibly by using both switching lobes.

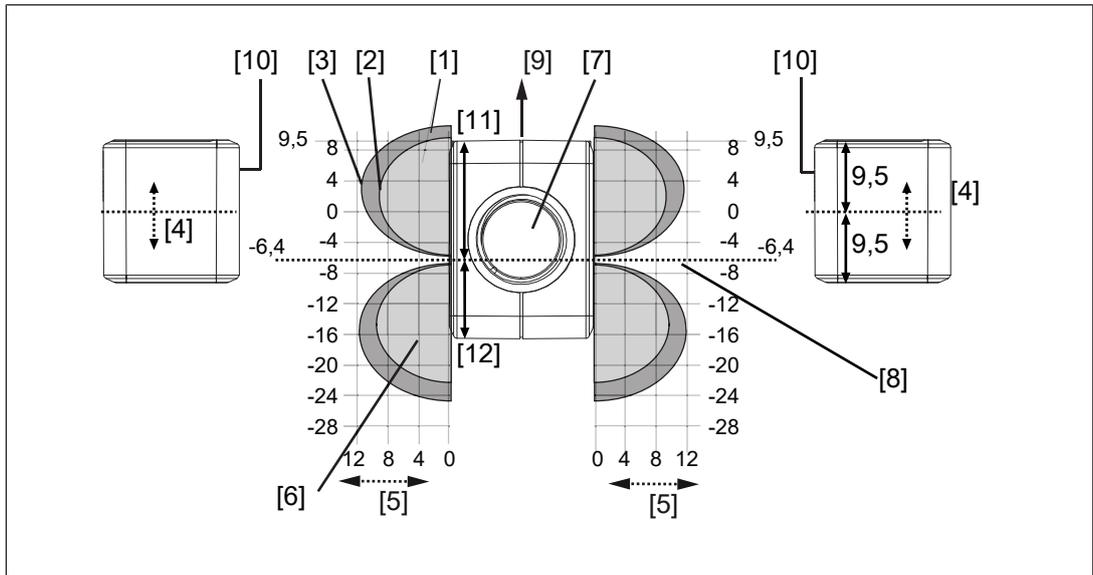

Legend

- [1] Hysteresis
- [2] Typical operating distance S_o
- [3] Typical release distance S_r
- [4] Offset in mm (distance of the middle of the actuator to the zero line in the grid)
- [5] Operating distance in mm
- [6] Response range
- [7] Connector on the safety switch
- [8] Limit of response range, position of gate hinge
- [9] Status of LED
- [10] Sensing face of the actuator, labelled with Pilz logo
- [11] Distance from the front edge of the safety switch to the limit of the response range (position of the gate end stop) = 15.9 mm
- [12] Distance from the rear edge of the safety switch to the limit of the response range (position of the gate end stop) = 10.5 mm

Safety switch

- ▶ Safety switches should only be secured using M4 screws with a flat head (e.g. M4 cheese-head or pan head screws).

Procedure:

1. Provide the mounting surface with two drill holes for fastening the safety switch (see [Dimensions in mm](#)  37).
2. Use a screw to fix the safety switch to the mounting surface.
Make sure that the safety switch marking that is to be used for operation can be operated using the actuator from the right side.
3. Do not fully tighten the second screw on the safety switch.

Actuator 5.1

Procedure actuator PSEN cs5.1

1. Provide the mounting surface with two drill holes for fastening the actuator (see [Dimensions](#) [ 37]).
2. Use a screw to fix the actuator to the mounting surface.
Make sure that the actuator with the marking (triangle) points towards the marking on the safety switch.
3. Do not fully tighten the second screw on the actuator.

Actuator 5.1 low profile



WARNING!

Loss of the manipulation protection by inadequate environmental conditions

The loss of the manipulation protection can allow manipulation of the interlocking device and it may lead to serious injury or death.

- Make sure that the actuator has no direct or repetitive contact with materials such as methyl ethyl ketone (MEK), petrol or isopropanol.

- ▶ The actuator is secured against unauthorised removal, and against contamination by the sealing. The seal should be regarded as equivalent to using permanent fastenings in accordance with EN ISO 14119.
- ▶ By removing the actuator, the actuator will be destroyed.
- ▶ The actuator's adhesive force on the materials aluminium, stainless steel, polycarbonate and glass was checked. For deviating surface materials check the adhesive force on the surface.
- ▶ After a cure time of 24 hours, 90 % of the final adhesive force are achieved. The hardening must take place at min. 20 °C. With lower temperatures the cure time is clearly extended.
- ▶ No continuous force must affect the actuator.

Procedure actuator PSEN cs5.1 low profile glue:

1. To seal the low profile actuators correctly, it is necessary to prepare the surface to which the actuator is to be attached.

The surface must be clean, dry and free of grease.

Wipe off any solved grease and contaminations with a new, dry paper cloth.

Clean the surface with 70% isopropanol. Use lint-free paper cloths and change the paper cloths frequently.

The adhesive surface is clean when the paper remains clean.

The cleaned surfaces must be sealed immediately to prevent any new contamination by dust and fingerprints.

2. Remove the protective foil from the assembly aid and fix it flush with the sides (see diagram) to the required sensing area of the safety switch.
3. Place the actuator into the assembly aid so that the actuator's covered adhesive surface is on the surface.

Make sure that the actuator's centre is on the same level as the orientation arrows of the sensor and in the centre of the sensor.

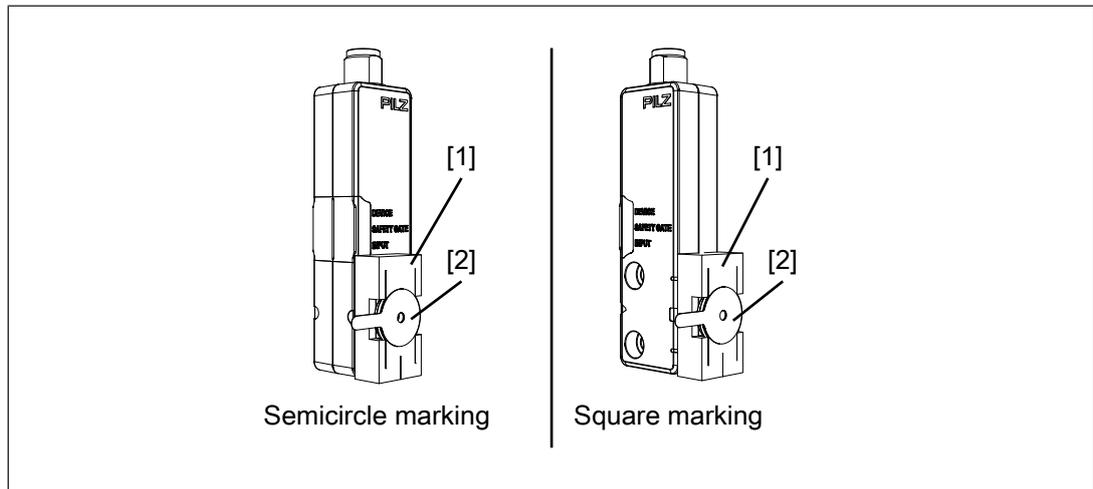


Fig.: Safety switch with assembly aid and low profile actuator oriented to semicircle and square marking

Legend

- [1] Assembly aid for low profile actuator
- [2] low profile actuator

4. Remove the protective foil from the adhesive foil of the actuator.
Do not touch the adhesive foil after removing the protective foil!
5. Then press the actuator firmly to the gluing position.
6. Press on the actuator for at least 3 seconds with approx. 50 N.
After this time, an adhesive force of approx. 50 % is achieved. The full adhesive force is achieved after 72 hours at an ambient temperature of at least 20 °C.
7. Check the adhesive force of the glue after 10 minutes.
The actuator must not move when pressed sideways.
8. Remove the assembly aid from the safety switch and clean the sensing area of the safety switch.

Procedure actuator PSEN cs5.1 low profile screw

1. Provide the mounting surface with a drill hole for an additional screw connection of the actuator (see [Dimensions in mm](#)  37]).
2. To seal the low profile actuators correctly, it is necessary to prepare the surface to which the actuator is to be attached.
The surface must be clean, dry and free of grease.
Wipe off any solved grease and contaminations with a new, dry paper cloth.

Clean the surface with 70% isopropanol. Use lint-free paper cloths and change the paper cloths frequently.

The adhesive surface is clean when the paper remains clean.

The cleaned surfaces must be sealed immediately to prevent any new contamination by dust and fingerprints.

3. Remove the protective foil from the adhesive foil of the actuator.

Do not touch the adhesive foil after removing the protective foil!

4. Insert the screw into the actuator's hole and position the screw at the hole on the mounting surface.

To screw on the actuator, use the supplied plastic M3 countersunk screw.

When using a screw made from metal the operating distance change, please note the **Warning**  27].

5. Tighten the M3 plastic screw to 1 Nm.

6. Press on the actuator for at least 3 seconds with approx. 50 N.

After this time, an adhesive force of approx. 50 % is achieved. The full adhesive force is achieved after 72 hours at an ambient temperature of at least 20 °C.


7. Check the adhesive force of the glue after 10 minutes.

The actuator must not move when pressed sideways.

Align safety switch and actuator

- ▶ The actuator should only be secured using M4 screws with a flat head (e.g. M4 cheese-head or pan head screws).

The actuator should be protected from unauthorised removal and from contamination. Close the mounting holes using the seals provided. The use of seals should be regarded as equivalent to using permanent fastenings in accordance with EN ISO 14119.

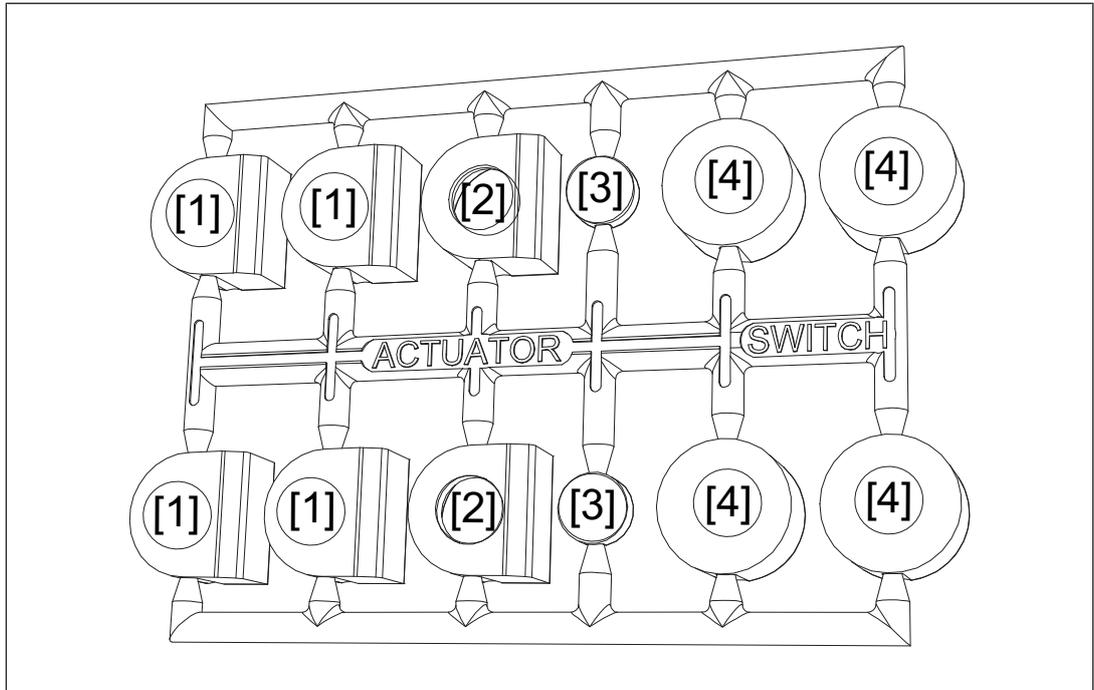

Legend

- [1] 4 seals for actuators
- [2] Unused seals
- [3] 2 seals for actuators
- [4] 2 seals for switches, 2 seals unused

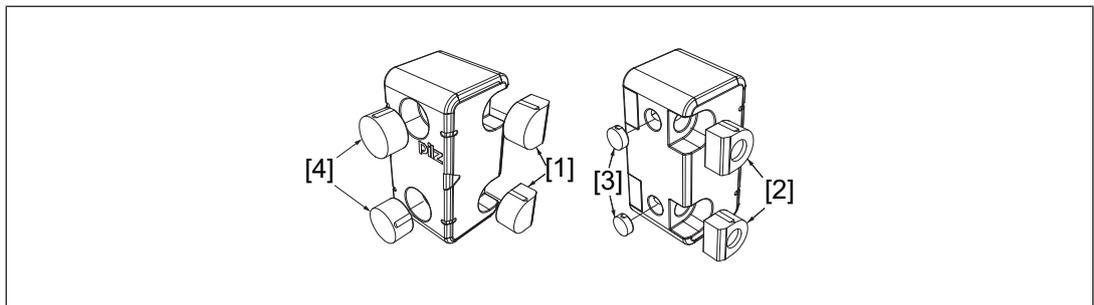


Fig.: Applying the screw covers [1] and [3] on the actuator

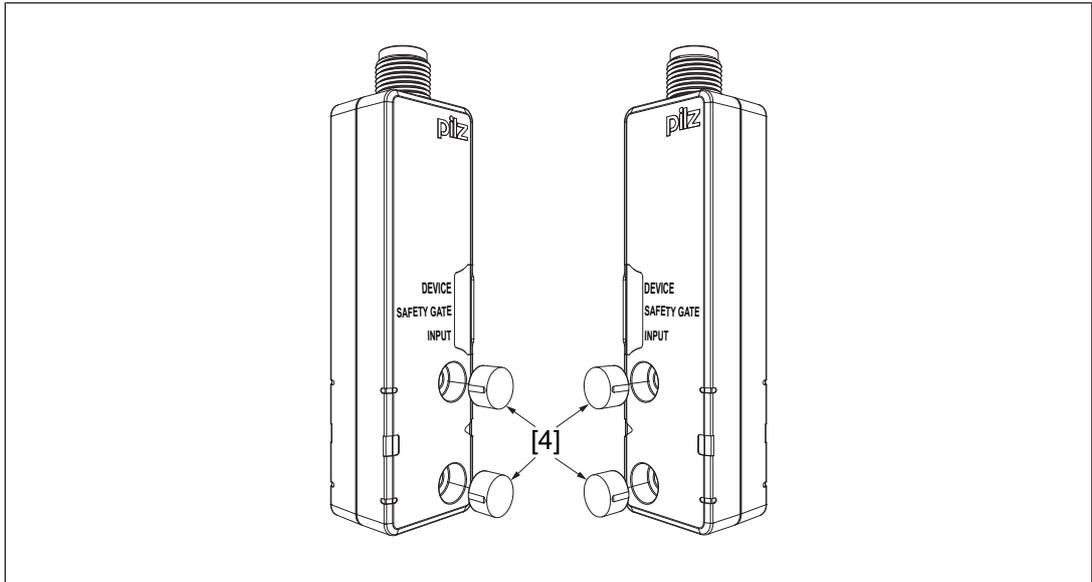


Fig.: Applying the screw cover [4] on the switch

Procedure:

1. Align the safety switch and tighten the screws.
2. Actuator PSEN cs5.1
Align the actuator and tighten the screws.
3. Use the seals to close the mounting holes on the sensing face of the safety switch (see diagram, [4]).

Use in operating heights higher than 2000 m above sea level

When using the PSEN cs5.1 M12/8 note the reduced max. ambient temperature of +60 °C at a height of 2000 m to 4000 m.

Adjustment

- ▶ The stated operating distances (see [Technical details \[39\]](#)) only apply when the safety switch and actuator are installed facing each other in parallel. Operating distances may deviate if other arrangements are used.
- ▶ Note the maximum permitted lateral and vertical offset (see [Operating distances \[11\]](#) and [Lateral and vertical offset \[13\]](#)).

Operation



NOTICE

The safety function should be checked after initial commissioning and each time the plant/machine is changed. The safety functions may only be checked by qualified personnel.

Status indicators:

Legend

- LED off
- ☀ LED on
- ☀ LED flashes (500 ms on, 500 ms off)
- ⚡ LED flashes quickly (50 ms on, 950 ms off)

Normal mode

| LED status | | Switch status |
|-------------|----------|--|
| Device | ☀ Green | Ready for operation |
| Safety Gate | ☀ yellow | Actuator is within the response range |
| | ● Off | Actuator is outside the response range |
| Input | ☀ yellow | Both safety inputs are high |
| | ● Off | Both safety inputs are low |

Error display





| LED status | | | Switch status | Remedy / measure |
|---|--|--|---|---|
| Device | Safety Gate | Input | | |
|  Red |  off |  off | Internal error on switch | Change the switch. |
|  Red |  Yellow |  Yellow | Supply voltage is outside the tolerance range | Ensure the voltage supply corresponds to the Technical details [39] . |
|  Yellow | Display not definitive | Display not definitive | Supply voltage is at the limit of the tolerance range | Ensure the voltage supply corresponds to the Technical details [39] . |
|  Red | Display of last status | Display of last status | Outputs in fault condition | Check the outputs and switch the voltage off and then on again. |
|  Green |  Yellow | Display not definitive | Wrong actuator | Only use an appropriate actuator from Pilz. |
|  off |  Yellow |  Yellow | Switch doesn't start | Change the switch. |

Dimensions in mm

| Safety switch | |
|---|---|
| <p>Front view of the safety switch. Dimensions: total height 90, mounting height 11.6, width 26.4, distance from bottom to top LED [3] 7.5, distance between LEDs [2] 22, distance from bottom to bottom LED [2] 7.4, and distance from left edge to square marking [1] 7.5. Labels include 'piz', 'DEVICE SAFETY GATE INPUT', and [3].</p> | <p>Side view of the safety switch. Dimensions: total height 101.6 and width 19. Semicircle markings [4] are shown on the side.</p> |
| Actuator | |
| <p>Front view of the actuator. Dimensions: total height 22, width 18, distance from bottom to top hole 7.5, distance from bottom to bottom hole 8.3, and distance from left edge to triangle marking [2] 4. Hole diameter is $\varnothing 4,5$.</p> | <p>Side view of the actuator. Dimensions: total height 37, width 19, distance from bottom to top hole 8.3, distance from bottom to bottom hole 7.5, and distance from left edge to top hole 9.5. Hole diameter is $\varnothing 4,5$.</p> |

Legend:

- [1] Square marking
- [2] Triangle marking
- [3] LEDs
- [4] Semicircle marking
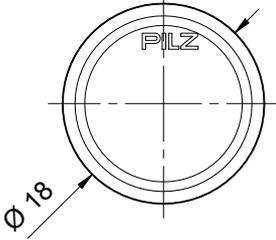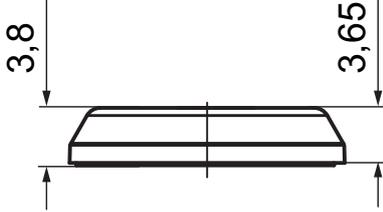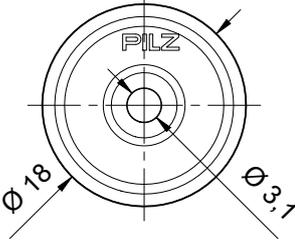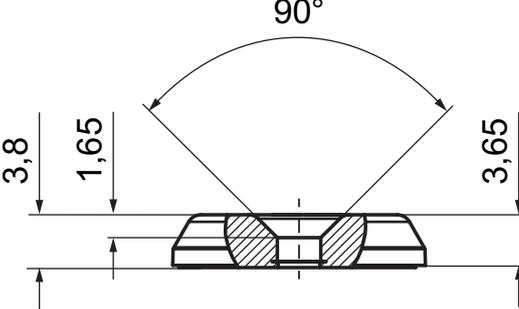
| | |
|--|---|
| <p>Actuator PSEN cs5.1 low profile glue</p> | |
|  <p>Top view of the low profile glue actuator. It is a circular component with a diameter of $\varnothing 18$ mm. The PILZ logo is visible in the center.</p> |  <p>Side view of the low profile glue actuator. The height is 3,8 mm and the width is 3,65 mm.</p> |
| <p>Actuator PSEN cs5.1 low profile screw</p> | |
|  <p>Top view of the low profile screw actuator. It is a circular component with an outer diameter of $\varnothing 18$ mm and a central hole diameter of $\varnothing 3,1$ mm. The PILZ logo is visible in the center.</p> |  <p>Side view of the low profile screw actuator. The height is 3,8 mm and the width is 3,65 mm. The top surface is angled at 90°. The central hole has a diameter of 1,65 mm.</p> |

Technical details safety switch

| General | |
|--|--|
| Certifications | CE, EAC (Eurasian), ECOLAB, FCC, IC, TÜV, cULus Listed |
| Sensor's mode of operation | Transponder |
| Coding level in accordance with EN ISO 14119 | Low |
| Design in accordance with EN ISO 14119 | 4 |
| Classification in accordance with EN 60947-5-3 | PDDB |
| Pilz coding type | Coded |
| Transponder | |
| Frequency band | 122 kHz - 128 kHz |
| Max. transmitter output | 15 mW |
| Electrical data | |
| Supply voltage | |
| Voltage | 24 V |
| Kind | DC |
| Voltage tolerance | -20 %/+20 % |
| Output of external power supply (DC) | 1 W |
| Max. switching frequency | 3 Hz |
| Max. cable capacitance at the safety outputs | |
| No-load, PNOZ with relay contacts | 40 nF |
| PNOZmulti, PNOZelog, PSS | 40 nF |
| Max. inrush current impulse | |
| Current pulse, A1 | 0,5 A |
| No-load current | 25 mA |
| Inputs | |
| Number | 2 |
| Voltage at inputs | 24 V DC |
| Input current range | 1,6 - 3 mA |
| Semiconductor outputs | |
| OSSD safety outputs | 2 |
| Signal outputs | 1 |
| Switching current per output | 100 mA |
| Breaking capacity per output | 2,4 W |
| Potential isolation from system voltage | No |
| Short circuit-proof | yes |
| Residual current at outputs | 400 µA |
| Voltage drop at OSSDs | 1 V |
| Conditional rated short circuit current | 100 A |
| Lowest operating current | 2 mA |
| Utilisation category in accordance with EN 60947-1 | DC-12 |
| Times | |
| Test pulse duration, safety outputs | 150 µs |

Times

| | |
|---------------------|--------------|
| Switch-on delay | |
| after UB is applied | 1 s |
| Inputs typ. | 1 ms |
| Inputs max. | 3 ms |
| Actuator typ. | 30 ms |
| Actuator max. | 50 ms |

| | |
|--------------------------|--------------|
| Delay-on de-energisation | |
| Inputs typ. | 2 ms |
| Inputs max. | 4 ms |
| Actuator typ. | 30 ms |
| Actuator max. | 40 ms |

| | |
|---|---------------|
| Risk time in accordance with EN 60947-5-3 | 150 ms |
|---|---------------|

| | |
|--|--------------|
| Supply interruption before de-energisation | 20 ms |
|--|--------------|

| | |
|------------------------------------|----------|
| Simultaneity, channel 1 and 2 max. | ∞ |
|------------------------------------|----------|

Environmental data

| | |
|---------------------------------------|----------------------|
| Ambient temperature | |
| In accordance with the standard | EN 60068-2-14 |
| Temperature range | -25 - 70 °C |
| Max. at max. operating height | +60 °C |
| Max. at max. operating height <2000 m | +70 °C |

| | |
|---------------------------------|------------------------|
| Storage temperature | |
| In accordance with the standard | EN 60068-2-1/-2 |
| Temperature range | -40 - 85 °C |

| | |
|---------------------------------|----------------------------|
| Climatic suitability | |
| In accordance with the standard | EN 60068-2-30 |
| Humidity | 93 % r. h. at 40 °C |

| | |
|---------------------------------------|---------------|
| Max. operating height above sea level | 4000 m |
|---------------------------------------|---------------|

| | |
|-----|---------------------|
| EMC | EN 60947-5-3 |
|-----|---------------------|

| | |
|---------------------------------|---------------------|
| Vibration | |
| In accordance with the standard | EN 60947-5-2 |
| Frequency | 10 - 55 Hz |
| Amplitude | 1 mm |

| | |
|---------------------------------|---------------------|
| Shock stress | |
| In accordance with the standard | EN 60947-5-2 |
| Acceleration | 30g |
| Duration | 11 ms |

| | |
|----------------------|------------|
| Airgap creepage | |
| Overvoltage category | III |
| Pollution degree | 3 |

| | |
|--------------------------|-------------|
| Rated insulation voltage | 75 V |
|--------------------------|-------------|

| | |
|---------------------------------|-------------|
| Rated impulse withstand voltage | 1 kV |
|---------------------------------|-------------|

| | |
|-----------------|-------------------|
| Protection type | |
| Housing | IP66, IP67 |

Operating distances

Actuator 1

| | |
|---|-------------------|
| Type | PSEN cs5.1 |
| Repetition accuracy switching distances | 3 % |
| Change of operating distance with temperature changes | +0,02mm/°C |

Actuator 2

| | |
|---|------------------------------------|
| Type | PSEN cs5.1 low profile glue |
| Repetition accuracy switching distances | 3 % |
| Change of operating distance with temperature changes | +0,02mm/°C |

Actuator 3

| | |
|---|-------------------------------------|
| Type | PSEN cs5.1 low profile screw |
| Repetition accuracy switching distances | 3 % |
| Change of operating distance with temperature changes | +0,02mm/°C |

Operating distances when the actuator approaches square marking

Actuator 1

| | |
|--------------------------------|-------------------|
| Type | PSEN cs5.1 |
| Assured operating distance Sao | 8 mm |
| Assured release distance Sar | 20 mm |
| Typical operating distance So | 11 mm |
| Typical release distance Sr | 14 mm |
| Typical hysteresis | 2 mm |

Actuator 2

| | |
|--------------------------------|------------------------------------|
| Type | PSEN cs5.1 low profile glue |
| Assured operating distance Sao | 5 mm |
| Assured release distance Sar | 20 mm |
| Typical operating distance So | 10 mm |
| Typical release distance Sr | 12 mm |
| Typical hysteresis | 2 mm |

Actuator 3

| | |
|--------------------------------|-------------------------------------|
| Type | PSEN cs5.1 low profile screw |
| Assured operating distance Sao | 5 mm |
| Assured release distance Sar | 20 mm |
| Typical operating distance So | 10 mm |
| Typical release distance Sr | 12 mm |
| Typical hysteresis | 2 mm |

Operating distances when the actuator approaches triangle marking

| | |
|-------------------------------------|-------------------|
| Actuator 1 | |
| Type | PSEN cs5.1 |
| Assured operating distance S_{ao} | 4 mm |
| Assured release distance S_{ar} | 12 mm |
| Typical operating distance S_o | 5 mm |
| Typical release distance S_r | 8 mm |
| Typical hysteresis | 2 mm |

Operating distances when the actuator approaches semicircle marking

| | |
|-------------------------------------|-------------------|
| Actuator 1 | |
| Type | PSEN cs5.1 |
| Assured operating distance S_{ao} | 3 mm |
| Assured release distance S_{ar} | 16 mm |
| Typical operating distance S_o | 6 mm |
| Typical release distance S_r | 8 mm |
| Typical hysteresis | 2 mm |

| | |
|-------------------------------------|------------------------------------|
| Actuator 2 | |
| Type | PSEN cs5.1 low profile glue |
| Assured operating distance S_{ao} | 2 mm |
| Assured release distance S_{ar} | 14 mm |
| Typical operating distance S_o | 5 mm |
| Typical release distance S_r | 7 mm |
| Typical hysteresis | 2 mm |

| | |
|-------------------------------------|-------------------------------------|
| Actuator 3 | |
| Type | PSEN cs5.1 low profile screw |
| Assured operating distance S_{ao} | 2 mm |
| Assured release distance S_{ar} | 14 mm |
| Typical operating distance S_o | 5 mm |
| Typical release distance S_r | 7 mm |
| Typical hysteresis | 2 mm |

Mechanical data

| | |
|---|--|
| Min. distance between safety switches | 250 mm |
| Sensor flush installation in accordance with EN 60947-5-2 | Yes, follow installation guidelines |
| Connection type | M12, 8-pin male connector |
| Material | PA+GF, PBT, polycarbonate |
| Max. torque setting for fixing screws | 1 Nm |
| Dimensions | |
| Height | 26,4 mm |
| Width | 101,6 mm |
| Depth | 19 mm |
| Weight | 68 g |

Where standards are undated, the 2015-11 latest editions shall apply.

Technical details actuator

Where standards are undated, the 2015-11 latest editions shall apply.

Order no. 542083 PSEN cs5.1

See below for more order numbers

| General | |
|--|--|
| Certifications | CE, EAC (Eurasian), ECOLAB, TÜV, cULus Listed |
| Sensor's mode of operation | Transponder |
| Coding level in accordance with EN ISO 14119 | Low |
| Pilz coding type | Coded |
| Transponder | |
| Frequency band | 122 kHz - 128 kHz |
| Environmental data | |
| Ambient temperature | |
| In accordance with the standard | EN 60068-2-14 |
| Temperature range | -25 - 70 °C |
| Max. at max. operating height | +60 °C |
| Max. at max. operating height <2000 m | +70 °C |
| Storage temperature | |
| In accordance with the standard | EN 60068-2-1/-2 |
| Temperature range | -40 - 85 °C |
| Climatic suitability | |
| In accordance with the standard | EN 60068-2-30 |
| Humidity | 93 % r. h. at 40 °C |
| Max. operating height above sea level | 4000 m |
| EMC | EN 60947-5-3 |
| Vibration | |
| In accordance with the standard | EN 60947-5-2 |
| Frequency | 10 - 55 Hz |
| Amplitude | 1 mm |
| Shock stress | |
| In accordance with the standard | EN 60947-5-2 |
| Acceleration | 30g |
| Duration | 11 ms |
| Protection type | |
| Housing | IP66, IP67 |
| Mechanical data | |
| Material | PBT |
| Max. torque setting for fixing screws | 1 Nm |
| Dimensions | |
| Height | 18 mm |
| Width | 37 mm |
| Depth | 19 mm |
| Weight | 15 g |

Order no. 542087 PSEN cs5.1 low profile glue

Order no. 542088 PSEN cs5.1 low profile screw

| General | 542087 | 542088 |
|--|---------------------------------------|---------------------------------------|
| Certifications | CE, EAC (Eurasian), TÜV, cULus Listed | CE, EAC (Eurasian), TÜV, cULus Listed |
| Sensor's mode of operation | Transponder | Transponder |
| Coding level in accordance with EN ISO 14119 | Low | Low |
| Pilz coding type | Coded | Coded |
| Transponder | 542087 | 542088 |
| Frequency band | 122 kHz - 128 kHz | 122 kHz - 128 kHz |
| Environmental data | 542087 | 542088 |
| Ambient temperature | | |
| In accordance with the standard | EN 60068-2-14 | EN 60068-2-14 |
| Temperature range | -25 - 70 °C | -25 - 70 °C |
| Max. at max. operating height | +60 °C | +60 °C |
| Max. at max. operating height <2000 m | +70 °C | +70 °C |
| Storage temperature | | |
| In accordance with the standard | EN 60068-2-1/-2 | EN 60068-2-1/-2 |
| Temperature range | -40 - 85 °C | -40 - 85 °C |
| Climatic suitability | | |
| In accordance with the standard | EN 60068-2-30 | EN 60068-2-30 |
| Humidity | 93 % r. h. at 40 °C | 93 % r. h. at 40 °C |
| Max. operating height above sea level | 4000 m | 4000 m |
| EMC | EN 60947-5-3 | EN 60947-5-3 |
| Vibration | | |
| In accordance with the standard | EN 60947-5-2 | EN 60947-5-2 |
| Frequency | 10 - 55 Hz | 10 - 55 Hz |
| Amplitude | 1 mm | 1 mm |
| Shock stress | | |
| In accordance with the standard | EN 60947-5-2 | EN 60947-5-2 |
| Acceleration | 30g | 30g |
| Duration | 11 ms | 11 ms |
| Protection type | | |
| Housing | IP67 | IP67 |
| Mechanical data | 542087 | 542088 |
| Material | | |
| Top | PBT | PBT |
| Max. torque setting for fixing screws | – | 0,1 Nm |
| Dimensions | | |
| Height | 3,8 mm | 3,8 mm |
| Width | 18 mm | 18 mm |
| Depth | 18 mm | 18 mm |

| Mechanical data | 542087 | 542088 |
|------------------------|---------------|---------------|
| Weight | 2 g | 2 g |

Classification according to ZVEI, CB24I

The following tables describe the classes and specific values of the product interface and the classes of interfaces compatible with it. The classification is described in the ZVEI position paper "Classification of Binary 24 V Interfaces - Functional Safety aspects covered by dynamic testing".

| Input | |
|-------------------------------------|----------|
| Interfaces | |
| Drain | |
| Class | C2 |
| Source | |
| Class | C2, C3 |
| Drain parameters | |
| Test pulse duration, safety outputs | 450 µs |
| Min. test pulse interval | 1,25 ms |
| Min. input resistance | 9,9 kOhm |
| Max. capacitive load | 1 nF |

| Single-pole output | |
|---------------------------|--------|
| Interfaces | |
| Source | |
| Interface | Sensor |
| Class | C2 |
| Drain | |
| Class | C1, C2 |
| Source parameters | |
| Max. test pulse duration | 150 µs |
| Max. rated current | 0,1 A |
| Max. capacitive load | 40 nF |

Safety characteristic data



NOTICE

You must comply with the safety characteristic data in order to achieve the required safety level for your plant/machine.

| Operating mode | EN ISO 13849-1: 2015 | EN ISO 13849-1: 2015 | EN 62061 SIL CL | EN 62061 PFH _D [1/h] | IEC 61511 SIL | IEC 61511 PFD | EN ISO 13849-1: 2015 |
|----------------|----------------------|----------------------|-----------------|---------------------------------|---------------|---------------|-----------------------|
| | PL | Category | | | | | T _M [year] |
| 2-ch. OSSD | PL e | Cat. 4 | SIL CL 3 | 9,56E-10 | – | 8,51E-06 | 20 |

Explanatory notes for the safety-related characteristic data:

- ▶ The SIL CL value in accordance with EN 62061 corresponds to the SIL value in accordance with EN 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN 61508-6 and IEC 61511 and as the proof test interval and mission time in accordance with EN 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.



INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PASCAL software tool to calculate the safety function's SIL/PL values.

Supplementary data

Radio approval

| |
|--|
| USA/Canada |
|  FCC ID: VT8-PSENCSS5 IC: 7482A-PSENCSS5 |
| <p><u>FCC/IC-Requirements:</u> This product complies with Part 15 of the FCC Rules and with Industry Canada licence-exempt RSS standards. Operation is subject to the following two conditions: 1) this product may not cause harmful interference, and 2) this product must accept any interference received, including interference that may cause undesired operation.</p> <p>Changes or modifications made to this product not expressly approved by Pilz may void the FCC authorization to operate this equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.</p> <p>Le présent produit est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) le produit ne doit pas produire de brouillage, et (2) l'utilisateur de le produit doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.</p> |

Order reference

Safety switch

| Product type | Features | | Order no. |
|-----------------------------|----------------------|---------------------|-----------|
| PSEN cs5.1 M12/8 1switch | Safety switch, coded | 8-pin M12 connector | 542 059 |

Actuator

| Product type | Features | | Order no. |
|--|-------------------------------|--|-----------|
| PSEN cs5.1 M12 1actuator | Actuator, coded | | 542 083 |
| PSEN cs5.1 low pro- file glue 1 actuator | Actuator coded, without screw | | 542 087 |
| PSEN cs5.1 low pro- file screw 1 actuator | Actuator coded, with screw | | 542 088 |

Complete systems

| Product type | Features | | Order no. |
|--|---------------------------|---------------------|-----------|
| PSEN cs5.1 M12/8/ PSEN cs5.1 M12 1unit | Safety gate system, coded | 8-pin M12 connector | 542 009 |

Accessories

Installation materials

| Product type | Features | Order no. |
|------------------------------|--|-----------|
| PSEN bracket | Mounting bracket | 532 110 |
| PSEN mag/cs bracket straight | Mounting aid | 532 111 |
| PSEN screw M4x20 10pcs | Safety screws made from stainless steel with one-way slot | 540 313 |
| PSEN screw M4x26 10pcs | Safety screws made from stainless steel with one-way slot | 540 314 |
| PSEN cs1/2 bracket cable fix | Mechanical protection against defeat, protecting against unauthorised cable disconnection or damage for safety switches PSENcode cs1/2, PSENcode cs5/6 M12, PSENSlock | 532 112 |

Cable

| Product type | Connection 1 | Connection 2 | Length | Order no. |
|-------------------------------|------------------------------|---------------------------|--------|-----------|
| PSEN cable M12-8sf | Straight, M12, 8-pin, socket | Open cable | 3 m | 540 319 |
| | | | 5 m | 540 320 |
| | | | 10 m | 540 321 |
| | | | 20 m | 540 333 |
| | | | 30 m | 540 326 |
| PSEN cable M12-8af | Angled, M12, 8-pin, socket | Open cable | 3 m | 540 322 |
| | | | 5 m | 540 323 |
| | | | 10 m | 540 324 |
| | | | 30 m | 540 325 |
| PSEN cable M12-8sf M12-8sm | straight, M12, 8-pin, socket | straight, M12, 8-pin, pin | 2 m | 540 340 |
| | | | 5 m | 540 341 |
| | | | 10 m | 540 342 |
| | | | 20 m | 540 343 |
| | | | 30 m | 540 344 |

Series connection

| Product type | Connection X1 | Connection X2 | Connection X3 | Order no. |
|-----------------------------------|--------------------|--------------------|--------------------|-----------|
| PSEN Y junction M12 SENSOR | M12, 8-pin, pin | M12, 8-pin, socket | M12, 8-pin, socket | 540 315 |
| PSEN Y junction M12 cable channel | M12, 8-pin, pin | M12, 8-pin, socket | M12, 8-pin, socket | 540 316 |
| PSEN T junction M12 | M12, 8-pin, socket | M12, 8-pin, pin | M8, 4-pin, pin | 540 331 |

| Product type | Connection X1 | Connection X2 | Connection X3 | Order no. |
|---|--|-----------------|---------------------------|-----------|
| PSEN Y junction M8-M12/ M12 PIGTAIL | M12, 8-pin, socket | M12, 8-pin, pin | M8, 8-pin, socket | 540 337 |
| PSEN Y junction M12-M12/ M12 PIGTAIL | M12, 8-pin, socket | M12, 8-pin, pin | M12, 8- pin, socket | 540 338 |
| PDP67 F 4 code | Decentralised passive junction | | | 773 603 |
| PDP67 F 4 code VA | Decentralised passive junction, V2A ring nut | | | 773 613 |

Safety Device Diagnostics

| Product type | Features | Connection type | Order no. |
|------------------|---|------------------------|-----------|
| PSEN ix2 F4 code | Interface for connecting max. 4 PSEN safety sensors | Spring-loaded terminal | 535 111 |
| PSEN ix2 F8 code | Interface for connecting max. 8 PSEN safety sensors | Spring-loaded terminal | 535 112 |
| SDD ES ETH | Fieldbus module Modbus/ TCP for Safety Device Dia- gnostics | Spring-loaded terminal | 540 130 |
| SDD ES Profibus | Fieldbus module Profibus for Safety Device Dia- gnostics | Spring-loaded terminal | 540 132 |
| SDD ES Profinet | Fieldbus module for Safety Device Diagnostics | Spring-loaded terminal | 540 138 |

EC declaration of conformity

This product/these products meet the requirements of the following directives of the European Parliament and of the Council.

- ▶ 2006/42/EC on machines
- ▶ 2014/53/EC on radio equipment

The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/downloads.

Representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

► Support

Technical support is available from Pilz round the clock.

Americas

Brazil
+55 11 97569-2804

Canada
+1 888 315 7459

Mexico
+52 55 5572 1300

USA (toll-free)
+1 877-PILZUSA (745-9872)

Asia

China
+86 21 60880878-216

Japan
+81 45 471-2281

South Korea
+82 31 778 3300

Australia

+61 3 95600621

Europe

Austria
+43 1 7986263-0

Belgium, Luxembourg
+32 9 3217570

France
+33 3 88104003

Germany
+49 711 3409-444

Ireland
+353 21 4804983

Italy, Malta
+39 0362 1826711

Scandinavia

+45 74436332

Spain

+34 938497433

Switzerland

+41 62 88979-32

The Netherlands

+31 347 320477

Turkey

+90 216 5775552

United Kingdom

+44 1536 462203

You can reach our international hotline on:

+49 711 3409-444
support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.

Energy saving by Pilz



We are represented internationally. Please refer to our homepage www.pilz.com for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: info@pilz.com, Internet: www.pilz.com

PILZ
THE SPIRIT OF SAFETY

1003419-EN-07, 2020-03 Printed in Germany
© Pilz GmbH & Co. KG, 2019

CECE®, CHRE®, CMSE®, InduraNET p®, Leansafe®, Master of Safety®, Master of Security®, PAS4000®, PAScall®, PASconfig®, Pilz®, PTT®, PLID®, PMCPirimo®, PMCPiritego®, PMCTendo®, PMD®, PMJ®, PNOZ®, PRBT®, PRCM®, PRCM®, PSEN®, PSEN®, PSENET p®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.