

Model 9438
Low Level Dissolved Oxygen
Monitoring System

Operating Instructions

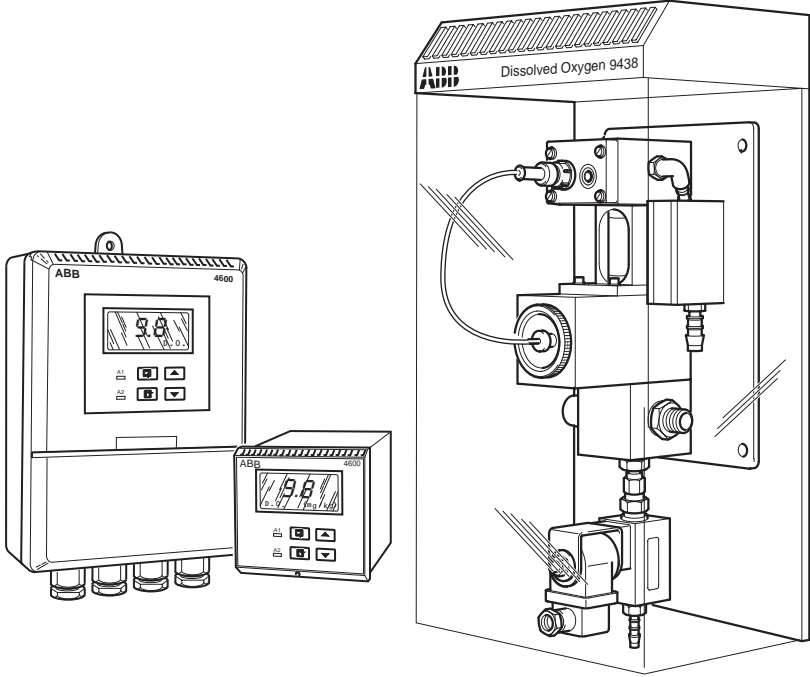


ABB AUTOMATION

The Company

ABB Automation is an established world force in the design and manufacture of instrumentation for industrial process control, flow measurement, gas and liquid analysis and environmental applications.

As a part of ABB, a world leader in process automation technology, we offer customers application expertise, service and support worldwide.

We are committed to teamwork, high quality manufacturing, advanced technology and unrivalled service and support.

The quality, accuracy and performance of the Company's products result from over 100 years experience, combined with a continuous program of innovative design and development to incorporate the latest technology.

The NAMAS Calibration Laboratory No. 0255 is just one of the ten flow calibration plants operated by the Company, and is indicative of ABB Automation's dedication to quality and accuracy.

BS EN ISO 9001



St Neots, U.K. – Cert. No. Q5907
Stonehouse, U.K. – Cert. No. FM 21106

EN 29001 (ISO 9001)



Lenno, Italy – Cert. No. 9/90A



Stonehouse, U.K.

Use of Instructions



Warning.

An instruction that draws attention to the risk of injury or death.



Caution.

An instruction that draws attention to the risk of damage to the product, process or surroundings.



Note.

Clarification of an instruction or additional information.



Information.

Further reference for more detailed information or technical details.

Although **Warning** hazards are related to personal injury, and **Caution** hazards are associated with equipment or property damage, it must be understood that operation of damaged equipment could, under certain operational conditions, result in degraded process system performance leading to personal injury or death. Therefore, comply fully with all **Warning** and **Caution** notices.

Information in this manual is intended only to assist our customers in the efficient operation of our equipment. Use of this manual for any other purpose is specifically prohibited and its contents are not to be reproduced in full or part without prior approval of Marketing Communications Department, ABB Automation.

Health and Safety

To ensure that our products are safe and without risk to health, the following points must be noted:

1. The relevant sections of these instructions must be read carefully before proceeding.
2. Warning labels on containers and packages must be observed.
3. Installation, operation, maintenance and servicing must only be carried out by suitably trained personnel and in accordance with the information given.
4. Normal safety precautions must be taken to avoid the possibility of an accident occurring when operating in conditions of high pressure and/or temperature.
5. Chemicals must be stored away from heat, protected from temperature extremes and powders kept dry. Normal safe handling procedures must be used.
6. When disposing of chemicals ensure that no two chemicals are mixed.

Safety advice concerning the use of the equipment described in this manual or any relevant hazard data sheets (where applicable) may be obtained from the Company address on the back cover, together with servicing and spares information.

CONTENTS

1	INTRODUCTION	2	7	PROGRAMMING AND ELECTRICAL CALIBRATION	18
			7.1	Access to Secure Parameters	18
			7.2	Language Page	18
			7.3	Set Up Parameters Page	18
			7.4	Set Up Alarm Page	19
			7.5	Set Up Retransmission Page	21
			7.6	Electrical Calibration	24
				7.6.1 Equipment Required	24
				7.6.2 Preparation	24
			7.7	Factory Settings Page	25
2	MECHANICAL INSTALLATION	3	8	MAINTENANCE	28
	2.1 Siting Requirements	3		8.1 Introduction	28
	2.1.1 Instruments	3		8.2 Cleaning/Changing the Sensor	28
	2.1.2 Dissolved Oxygen Flowcell	3		8.2.1 Cleaning	28
	2.2 Mounting the Instrument	3		8.2.2 Changing the Sensor	28
	2.2.1 Wall-mounted Instrument	3			
	2.2.2 Panel-mounted Instrument	4			
	2.3 Installing the Dissolved Oxygen Flowcell	5	9	SIMPLE FAULT FINDING	29
	2.3.1 Flowcell Dimensions (Overall)	5		9.1 Diagnostic Messages	29
	2.3.2 Enclosure Dimensions (Optional)	5		9.2 Low Sensor Efficiency/Slow Sensor Cal. or no Response to D.O. Changes	30
	2.3.3 Connecting the Sample Lines	5		9.3 Checking the Temperature Input	30
				9.4 High Sample Readings	30
3	ELECTRICAL CONNECTIONS	6	10	SPECIFICATION	31
	3.1 Access to Terminals	6			
	3.1.1 Wall-mounted Instruments	6			
	3.1.2 Panel-mounted Instruments	6			
	3.2 Connections, General	7	11	SPARES	32
	3.2.1 Relay Contact Protection and Interference Suppression	7		11.1 Strategic Spares	32
	3.2.2 System Wiring Schematic	8			
	3.3 Wall-mounted Instrument Connections	8			
	3.4 Panel-mounted Instrument Connections	9			
	3.5 Selecting the Mains Voltage	10			
	3.5.1 Wall-mounted Instrument	10			
	3.5.2 Panel-mounted Instrument	10			
	3.6 Flowcell Solenoid Valve Connections	11			
4	SETTING UP	12			
	4.1 Fitting the Dissolved Oxygen Sensor	12			
	4.2 Connecting the Flowcell	13			
	4.3 Checking Sample Flow	13			
5	CONTROLS AND DISPLAYS	14			
	5.1 Displays	14			
	5.2 Switch Familiarization	14			
6	START UP AND OPERATION	15			
	6.1 Instrument Start-up	16			
	6.2 Operation – Dissolved Oxygen Measurement Mode	16			
	6.2.1 Operation Page	16			
	6.2.2 Calibration Page	17			
				APPENDIX A – 9438 080 24 V D.C. POWER SUPPLY UNIT (OPTIONAL)	34
				A.1 Description	34
				A.2 PSU Dimensions	34
				A.3 Accessing PSU Terminals	34
				A.4 PSU Connections	35
				A.5 Wiring Schematic	35
				A.6 Specification	35
				APPENDIX B – CALIBRATION DIAGNOSTICS	36
				B.1 During Calibration	36
				B.2 Low Sensor Efficiency	36

1 INTRODUCTION

This manual describes how to install and operate the 9438 Low Level Dissolved Oxygen Monitoring system. Fig. 1.1 shows the main elements of the system. Mechanical and electrical installation details of the optional power supply unit are in Appendix A.

The Dissolved Oxygen (D.O.) transmitters and associated flowcell have been designed for continuous monitoring and control of power station boiler feed water/steam condensate.

Calibration of the sensor can be manually initiated when required, or set to automatic with the programmable frequencies: 1 day, 1 week and 4 weeks.

System status can be assessed remotely using programmable alarm and/or current output diagnostic functions.

The 9438 500 transmitter is a wall-mounted instrument and the 9438 501 model is a panel-mounted, 1/4 DIN-sized instrument. Both instruments have a single programmable D.O. input channel, and a single temperature input channel. The sample temperature is sensed by a Pt1000 resistance thermometer incorporated in the flowcell.

Instrument operation and programming is via four tactile membrane switches located on the front panel. Programs are protected from unauthorized alteration by a five-digit security code.

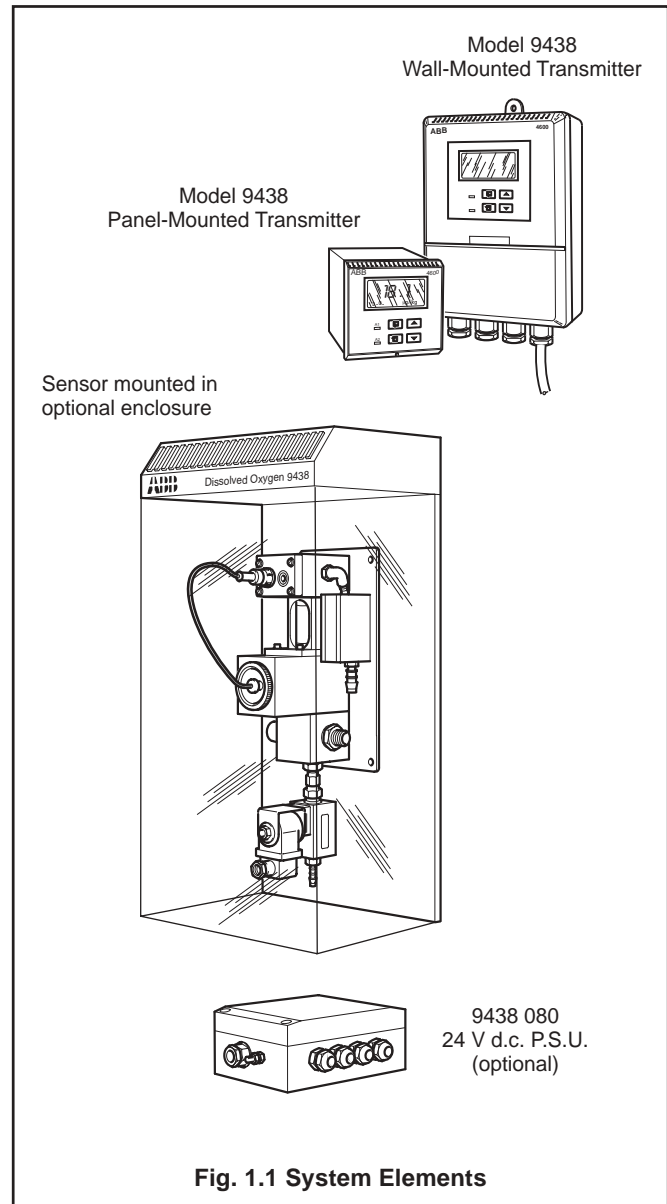


Fig. 1.1 System Elements

2 MECHANICAL INSTALLATION

2.1 Siting Requirements

2.1.1 Instruments – Fig. 2.1




Caution.

- Mount instruments in a location free from excessive vibration.
- Mount away from harmful vapours and/or dripping fluids.



Information. It is preferable to mount the transmitter at eye level thus allowing an unrestricted view of the front panel displays and controls.

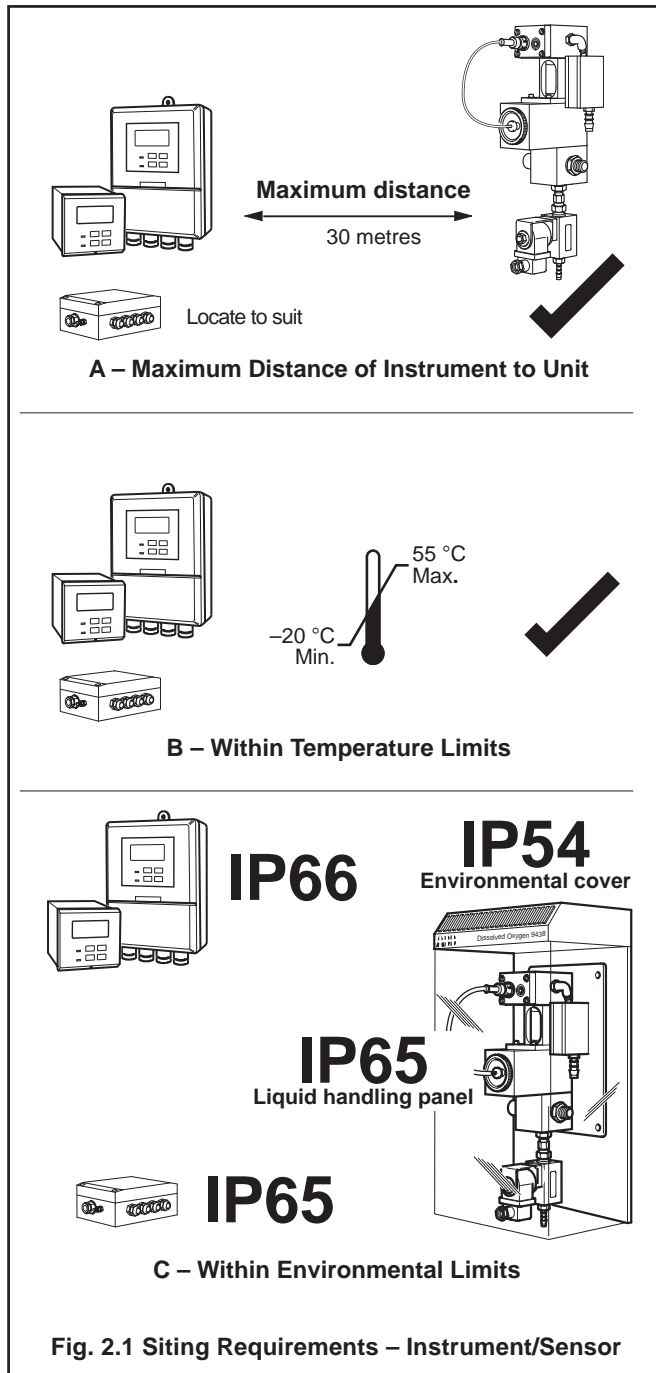

2.1.2 Dissolved Oxygen Flowcell – Fig. 2.7



Allow sufficient clearance (200 mm all around) for easy removal of the flowcell assembly for maintenance when not installed in the optional enclosure – see Section 2.3.1 for overall dimensions of units.



Note. To eliminate the risk of bubbles accumulating at the sensor, and hence giving erroneous readings, the flowcell assembly must be mounted vertically.


2.2 Mounting the Instrument

2.2.1 Wall-mounted Instrument – Figs 2.2 to 2.4

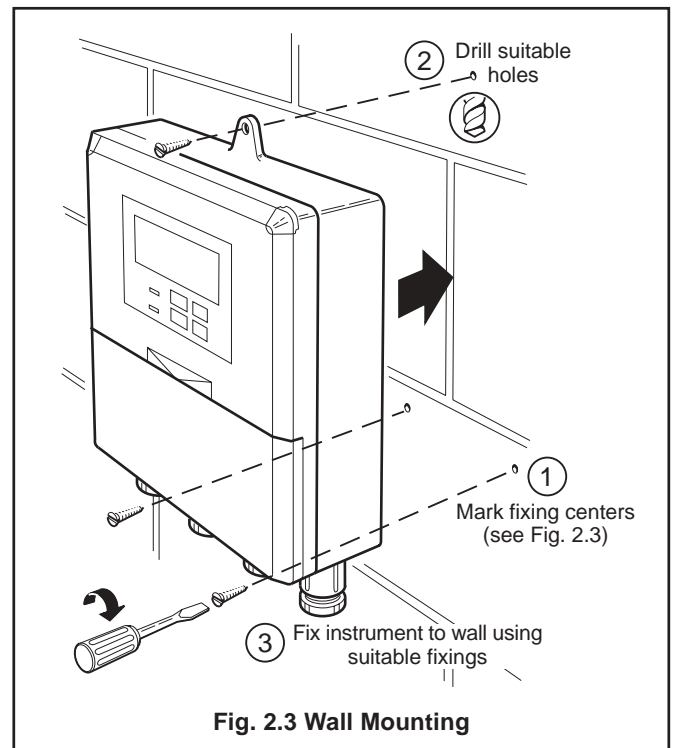
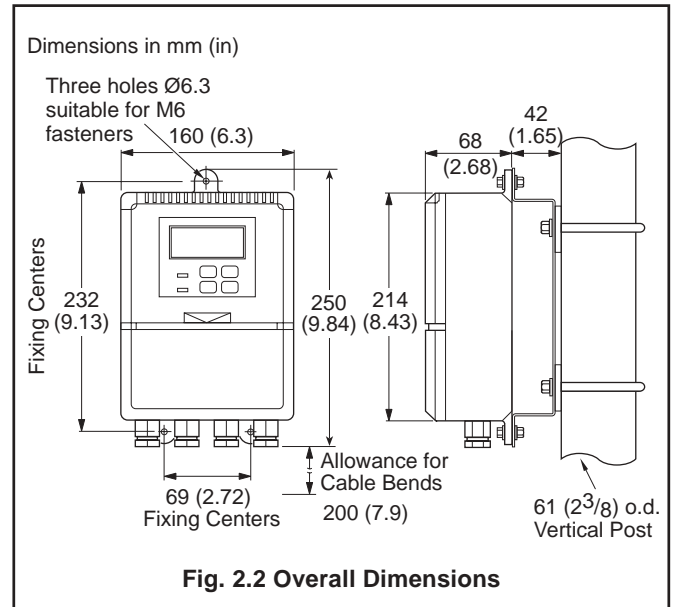


...2 MECHANICAL INSTALLATION

...2.2.1 Wall-mounted Instrument – Fig 2.4

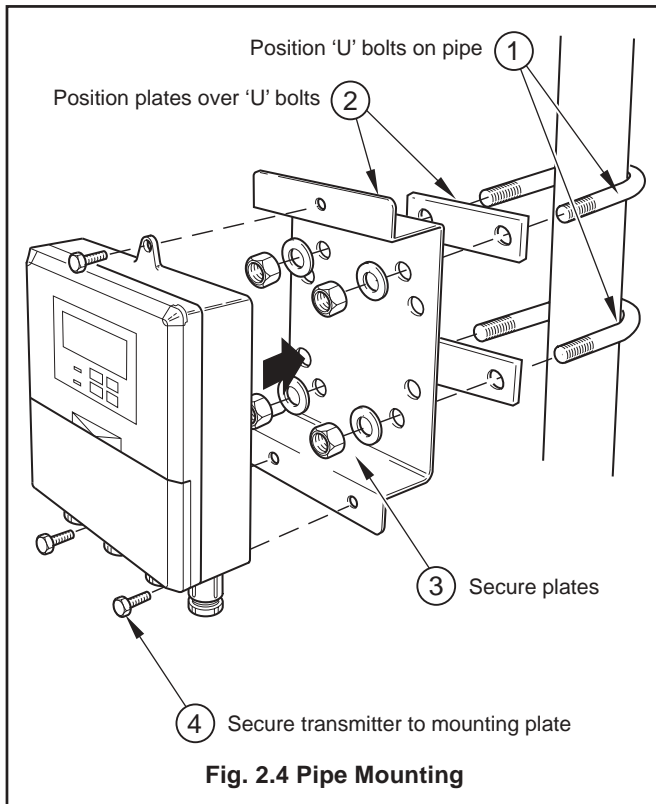


2.2.2 Panel-mounted Instrument – Figs 2.5 and 2.6

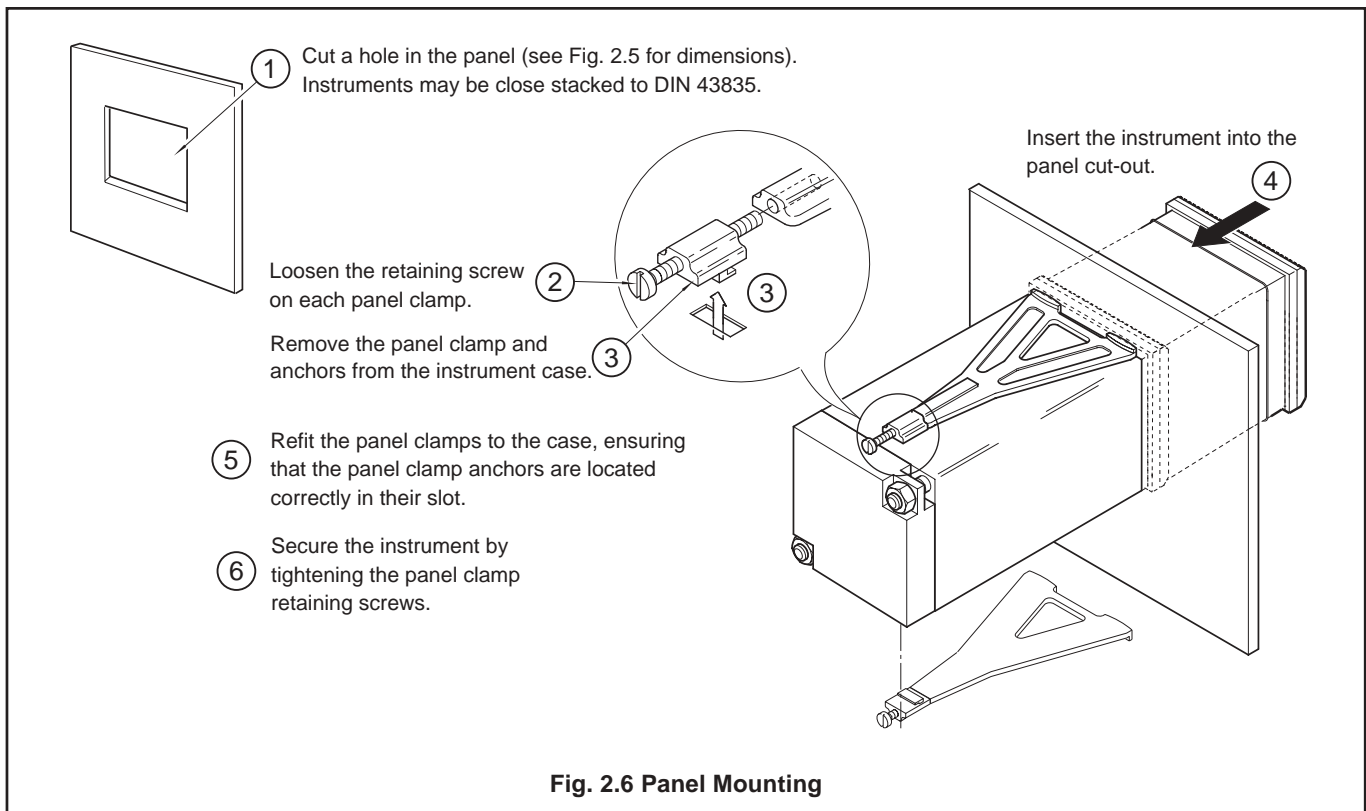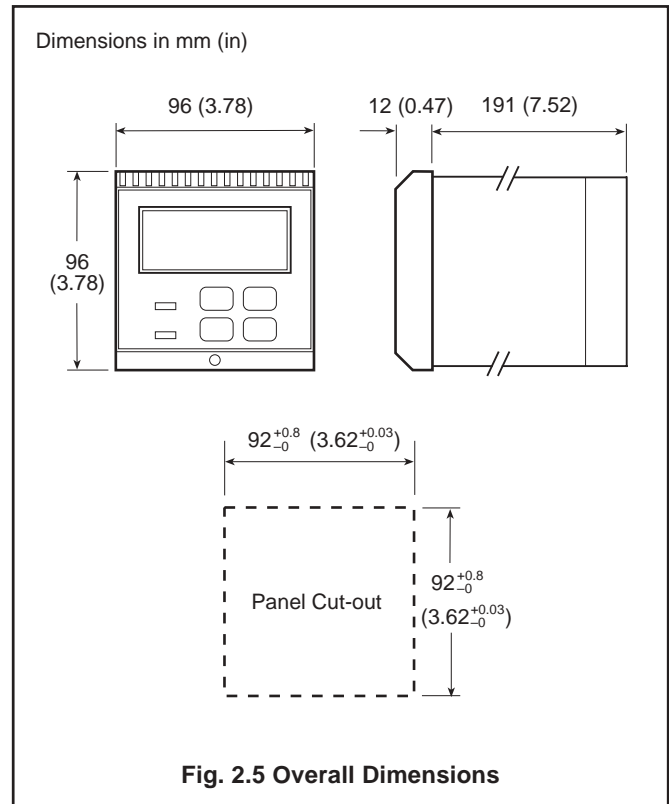


2.3 Installing the Dissolved Oxygen Flowcell

2.3.1 Flowcell Dimensions (Overall) – Fig. 2.7

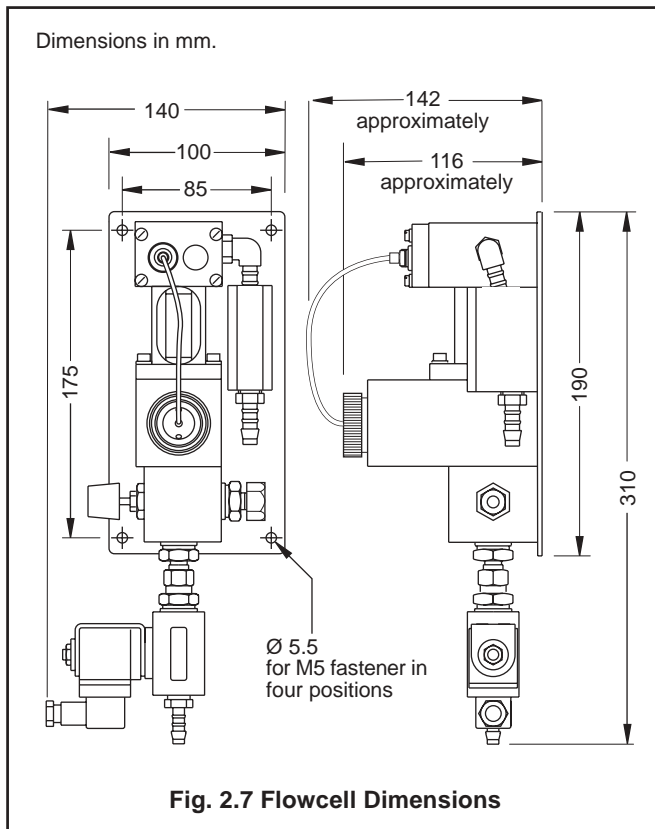

2.3.2 Enclosure Dimensions (Optional) – Fig. 2.8

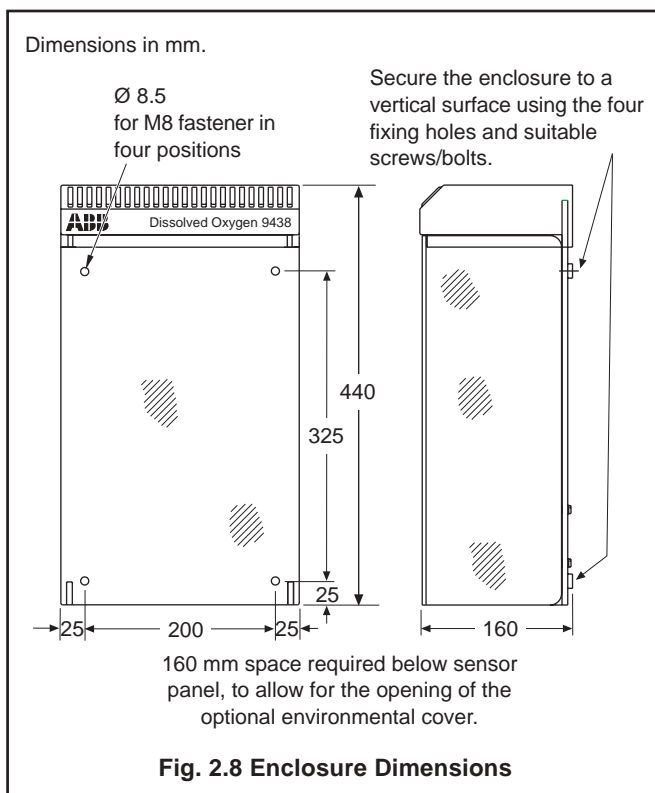


2.3.3 Connecting the Sample Lines – Fig. 2.9

Mount the flowcell vertically (with or without the enclosure) as shown in Figs 2.7 and 2.8. Connect the sample inlet and outlet tubes as shown in Fig. 2.9.



Note.

- The sample flowrate must be between 100 and 400 ml min⁻¹.
- The Company recommends that stainless steel tubing is used for sample inlet lines.
- All sample drains should be kept as short as possible and be vertical to allow the sample to drain freely.

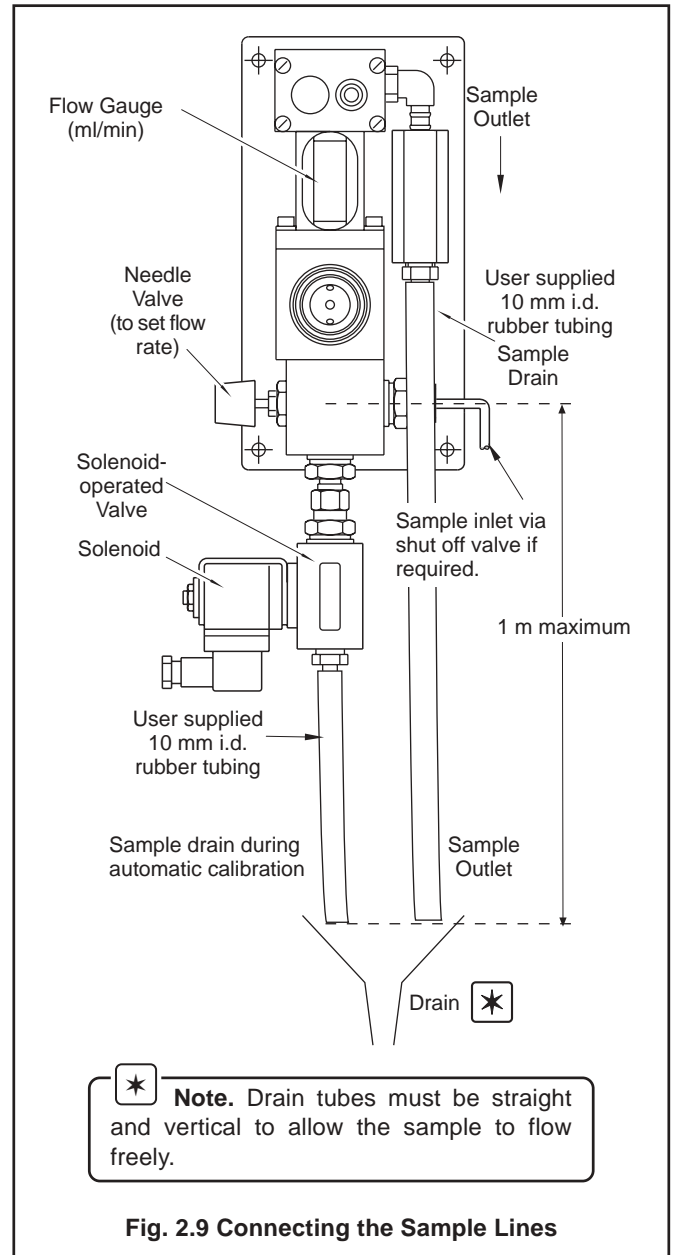

3 ELECTRICAL CONNECTIONS




Warning.


- Before making any connections, ensure that the power supply, any high voltage-operated control circuits and high common mode voltage are switched off.
- Although certain instruments are fitted with internal fuse protection, a suitably rated external protection device, e.g. fuse or miniature circuit breaker (m.c.b.), must also be fitted by the installer.

3.1 Access to Terminals

3.1.1 Wall-mounted Instruments – Fig. 3.1

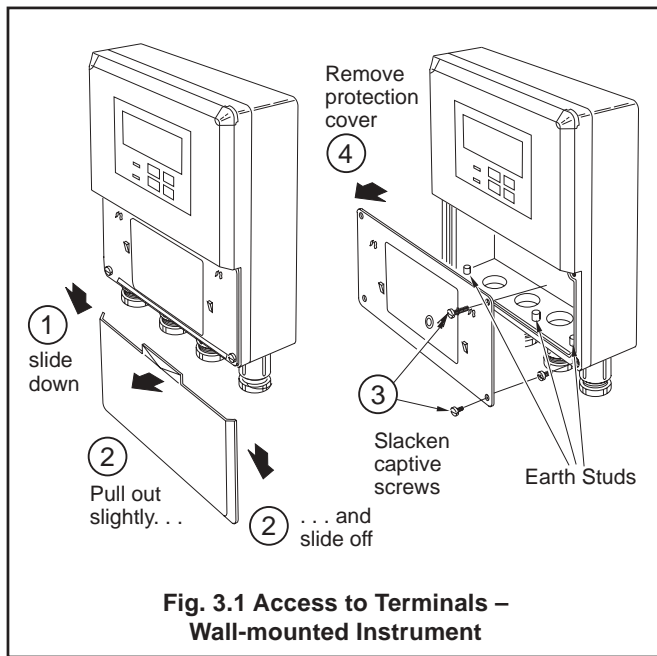

3.1.2 Panel-mounted Instruments – Fig. 3.2

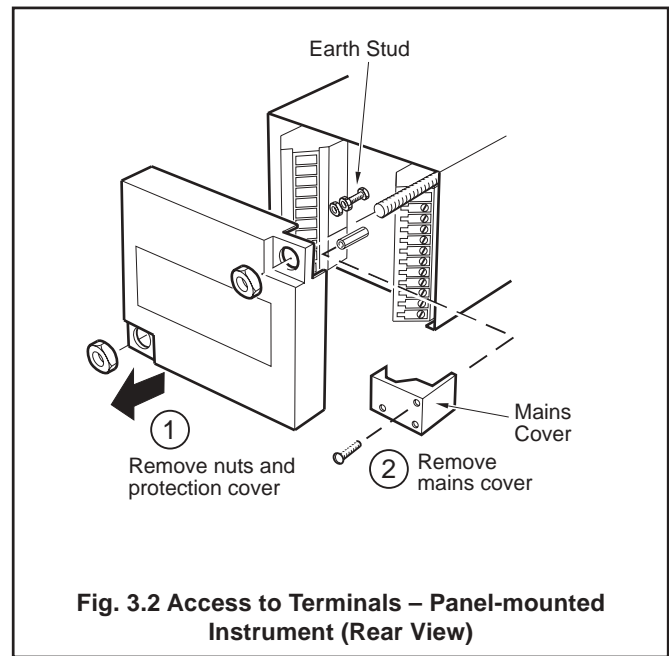

3.2 Connections, General



Information.

- **Earthing (grounding)** – stud terminals are fitted to the transmitter case for bus-bar earth (ground) connection – see Fig. 3.1 or 3.2.
- **Cable lengths** – The cable length between the flowcell and the electronics unit is provided as ordered, and suitably terminated at both ends.
- **Cable routing** – always route the signal cable and mains-carrying/relay cables separately, ideally in earthed metal conduit.

Ensure that the cables enter the transmitter through the glands nearest the appropriate screw terminals and are short and direct. Do not tuck excess cable into the terminal compartment.
- **Cable glands & conduit fittings** – ensure a moisture-tight fit when using cable glands, conduit fittings and blanking plugs/bungs (M20 holes). The M16 glands ready-fitted to wall-mounted instruments accept cable of between 4 and 7 mm diameter.
- **Alarm Relay** –the relay contacts are voltage-free and must be appropriately connected in series with the power supply and the alarm/control device which they are to actuate. Ensure that the contact rating is not exceeded. Refer also to Section 3.2.1 for relay contact protection details when the relays are to be used for switching loads.
- **Retransmission output** – Do not exceed the maximum load specification for the selected current retransmission range – see Section 7.

Since the retransmission output is isolated the –ve terminal **must** be connected to earth (ground) if connecting to the isolated input of another device.

3.2.1 Relay Contact Protection and Interference Suppression – Fig. 3.3

If the relays are used to switch loads on and off, the relay contacts can become eroded due to arcing. Arcing also generates radio frequency interference (RFI) which can result in instrument malfunction and incorrect readings. To minimize the effects of RFI, arc suppression components are required; resistor/capacitor networks for a.c. applications or diodes for d.c. applications. These components can be connected either across the load or directly across the relay contacts. On 4600 Series instruments the RFI components must be fitted to the relay terminal block along with the supply and load wires – see Fig. 3.3.

For **a.c. applications** the value of the resistor/capacitor network depends on the load current and inductance that is switched. Initially, fit a 100R/0.022 μF RC suppressor unit (part no. B9303) as shown in Fig. 3.3A. If the instrument malfunctions (incorrect readings) or resets (display shows 88888) the value of the RC network is too low for suppression – an alternative value must be used. If the correct value cannot be obtained, contact the manufacturer of the switched device for details on the RC unit required.

For **d.c. applications** fit a diode as shown in Fig. 3.3B. For general applications use an IN5406 type (600 V peak inverse voltage at 3 A – part no. B7363)



Note. For reliable switching the minimum voltage must be greater than 12 V and the minimum current greater than 100 mA.

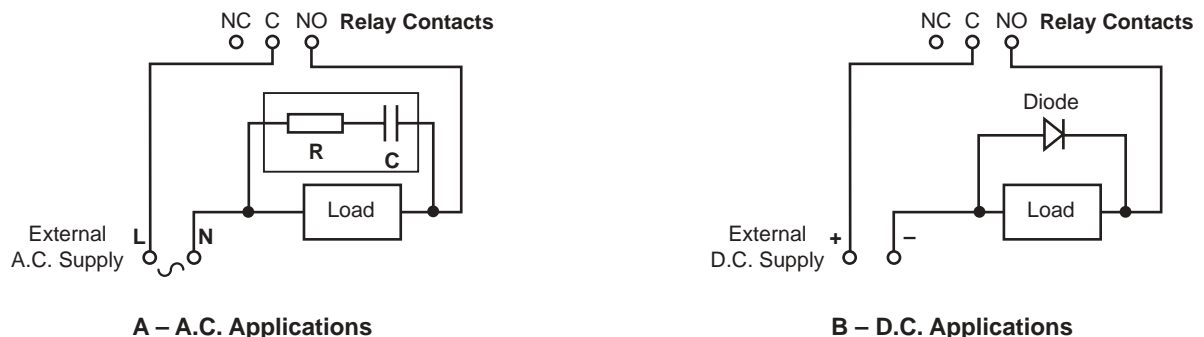



Fig. 3.3 Relay Contact Protection

...3 ELECTRICAL CONNECTIONS

3.2.2 System Wiring Schematic – Fig. 3.4

The wiring of a single solenoid/sensor system from a user-supplied 24 V d.c. supply is shown in Fig. 3.4.


If the 9438 080 power supply unit is employed, refer to Appendix A for wiring details.

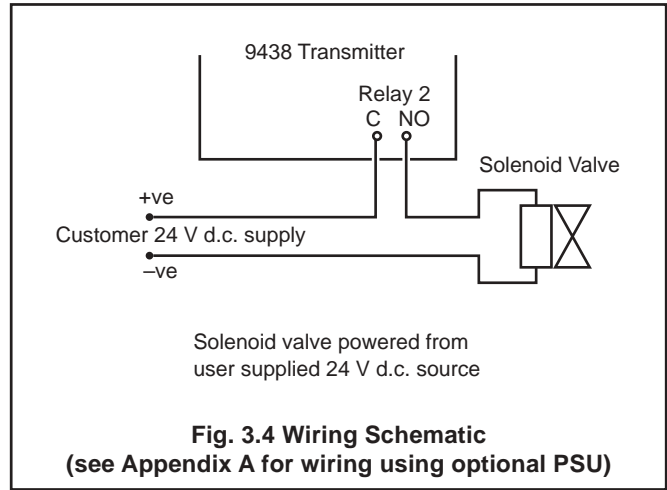

3.3 Wall-mounted Instrument Connections – Fig. 3.5

Note. Refer to Fig. 3.1 for access to terminals.


Caution. Slacken terminal screws fully before making connections.

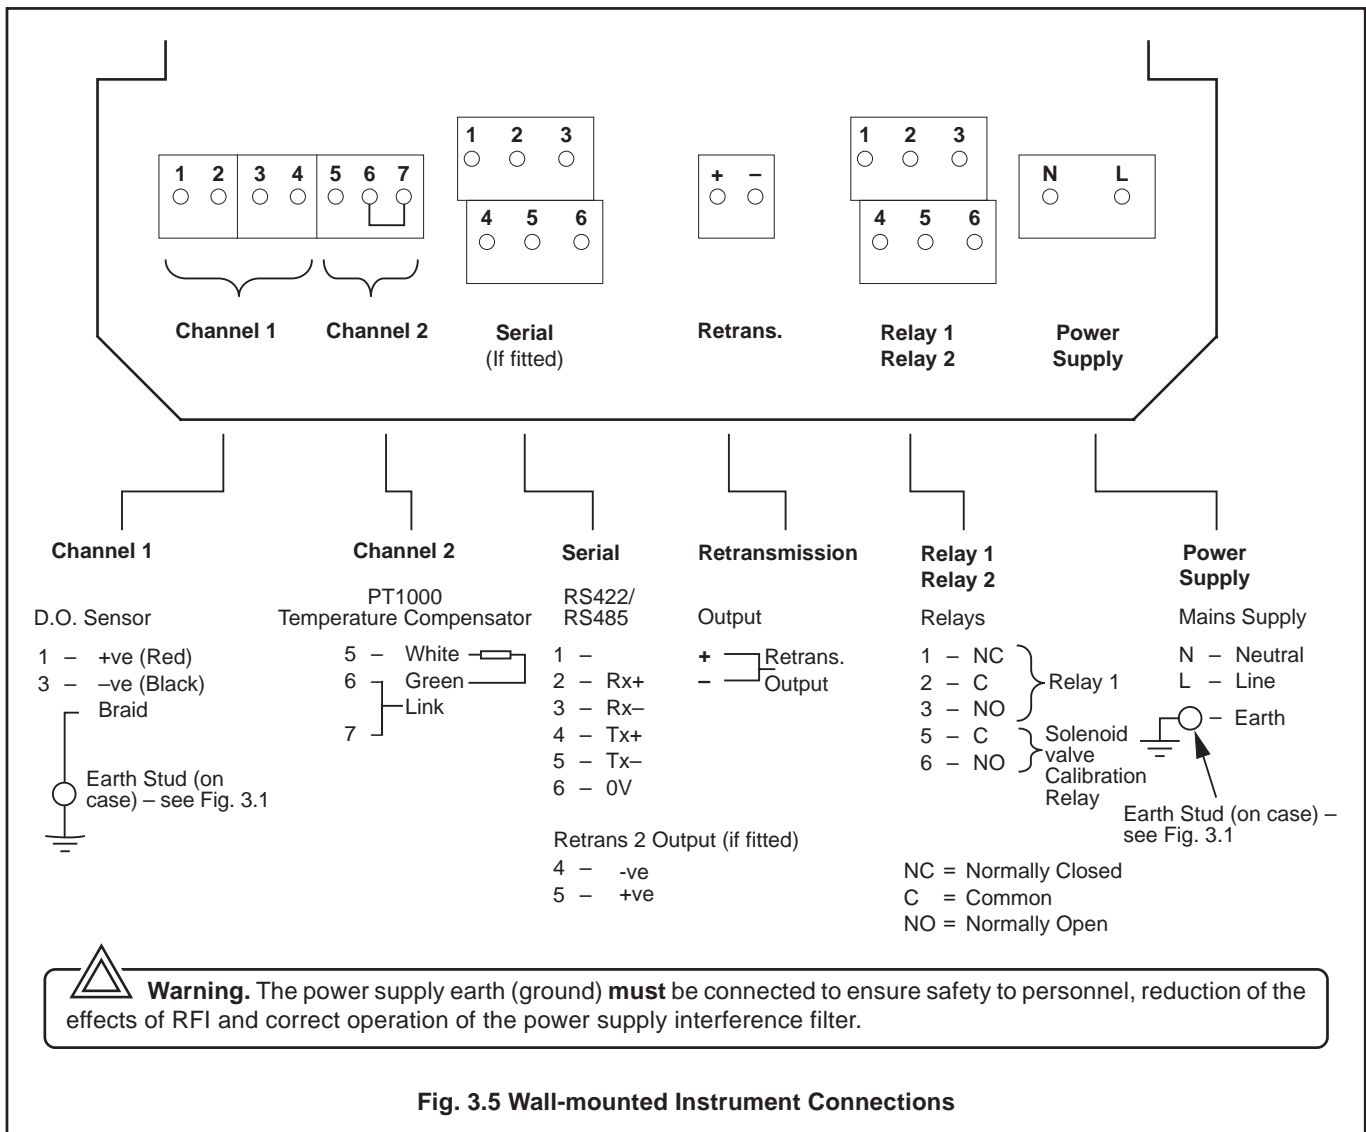

3.4 Panel-mounted Instrument Connections – Fig. 3.6

Note. Refer to Fig. 3.2 for Access to Terminals.

Caution. Slacken terminal screws fully before making connections.

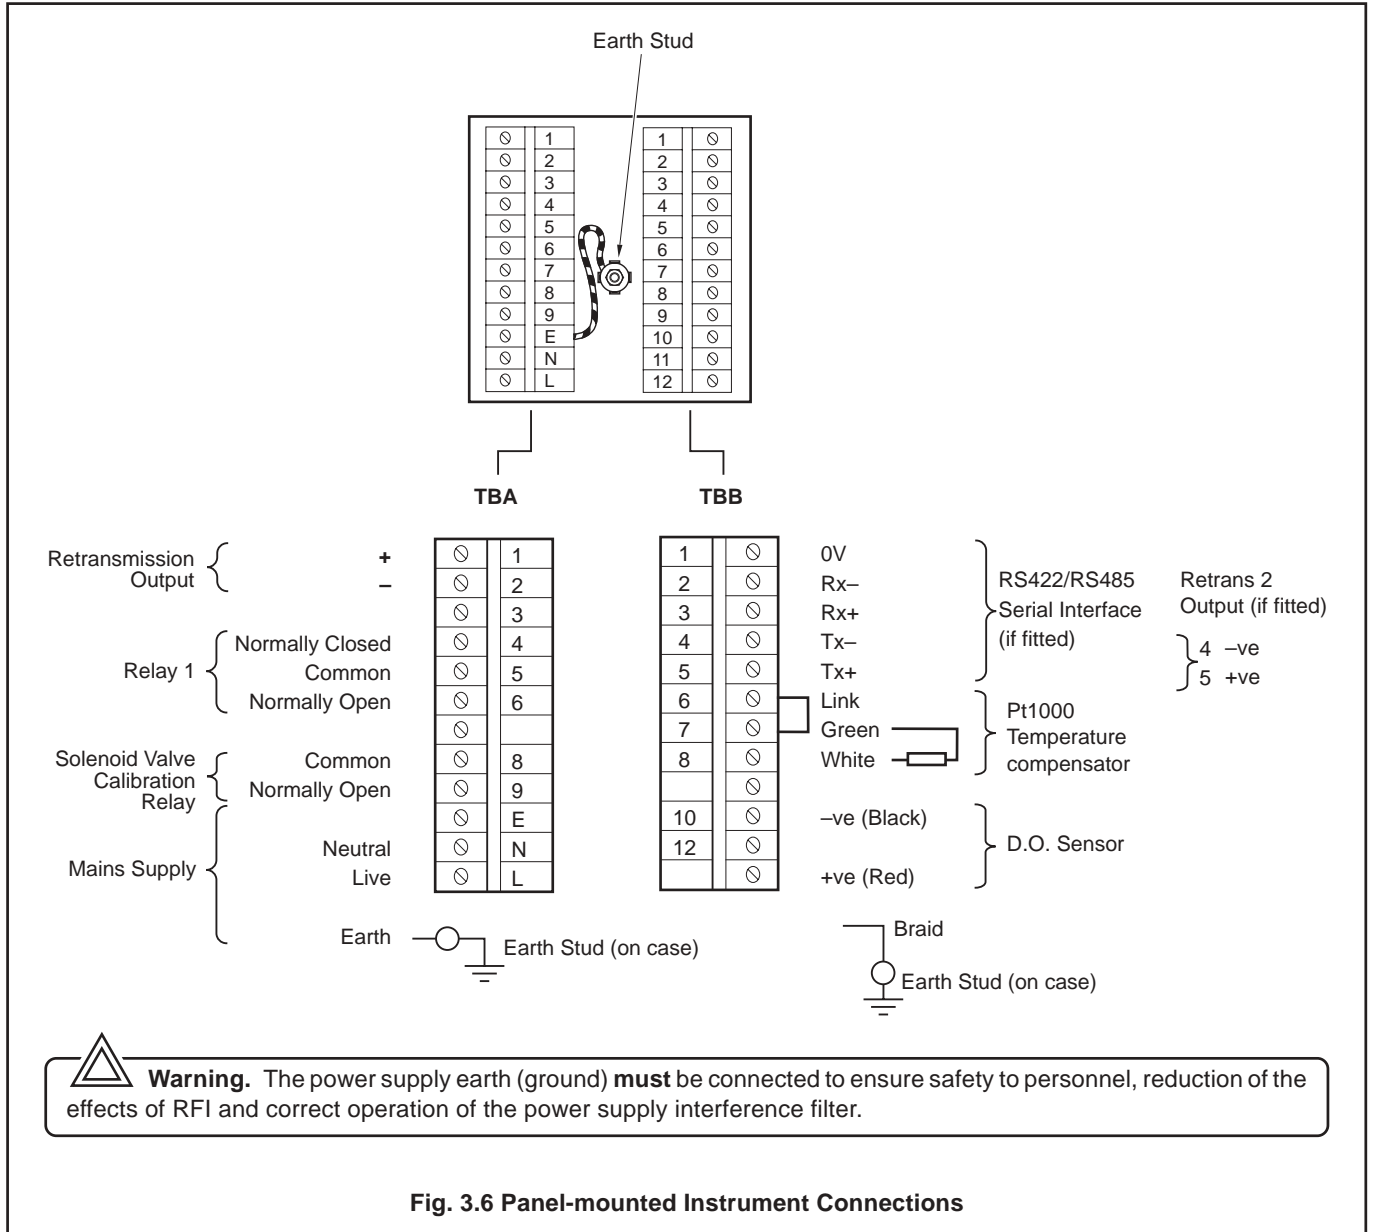


Warning. The power supply earth (ground) **must** be connected to ensure safety to personnel, reduction of the effects of RFI and correct operation of the power supply interference filter.

Fig. 3.6 Panel-mounted Instrument Connections


...3 ELECTRICAL CONNECTIONS

3.5 Selecting the Mains Voltage


3.5.1 Wall-mounted Instrument – Fig. 3.7

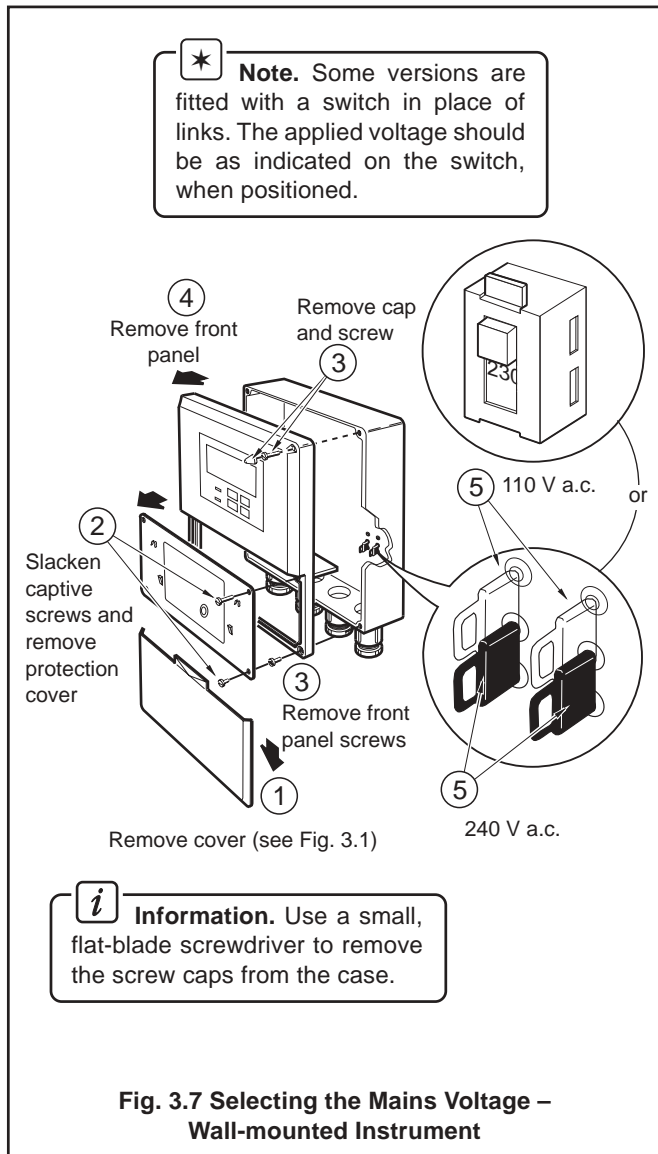

3.5.2 Panel-mounted Instrument – Fig. 3.8

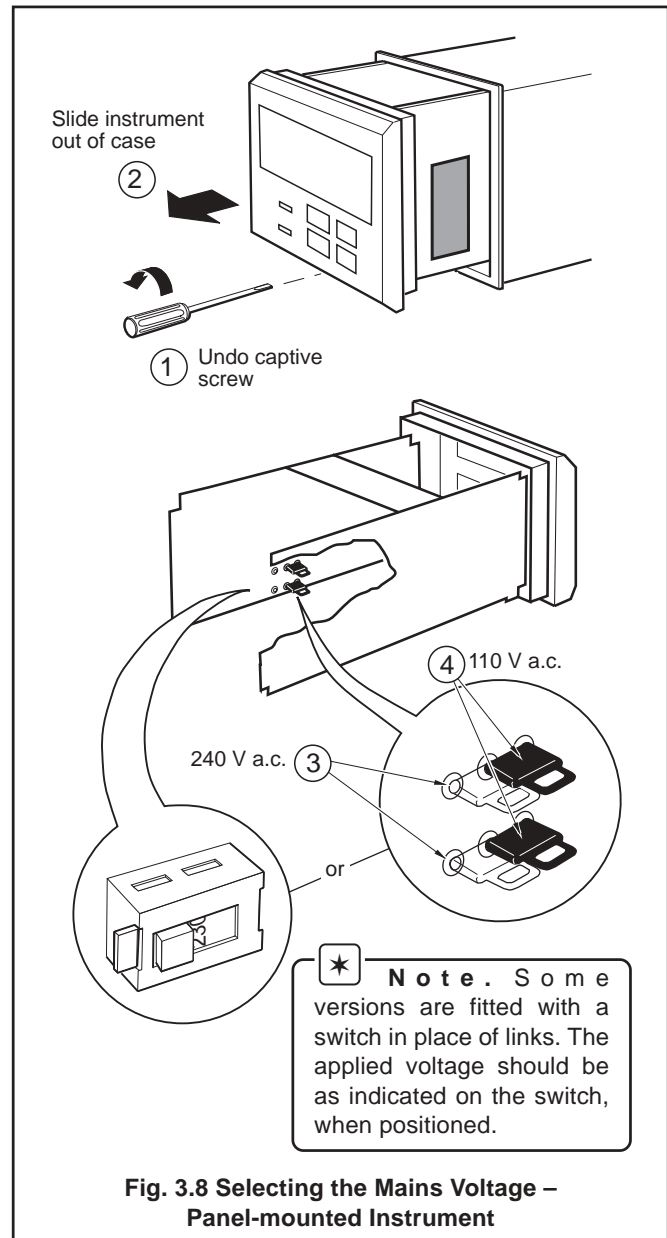

3.6 Flowcell Solenoid Valve Connections – Fig. 3.9

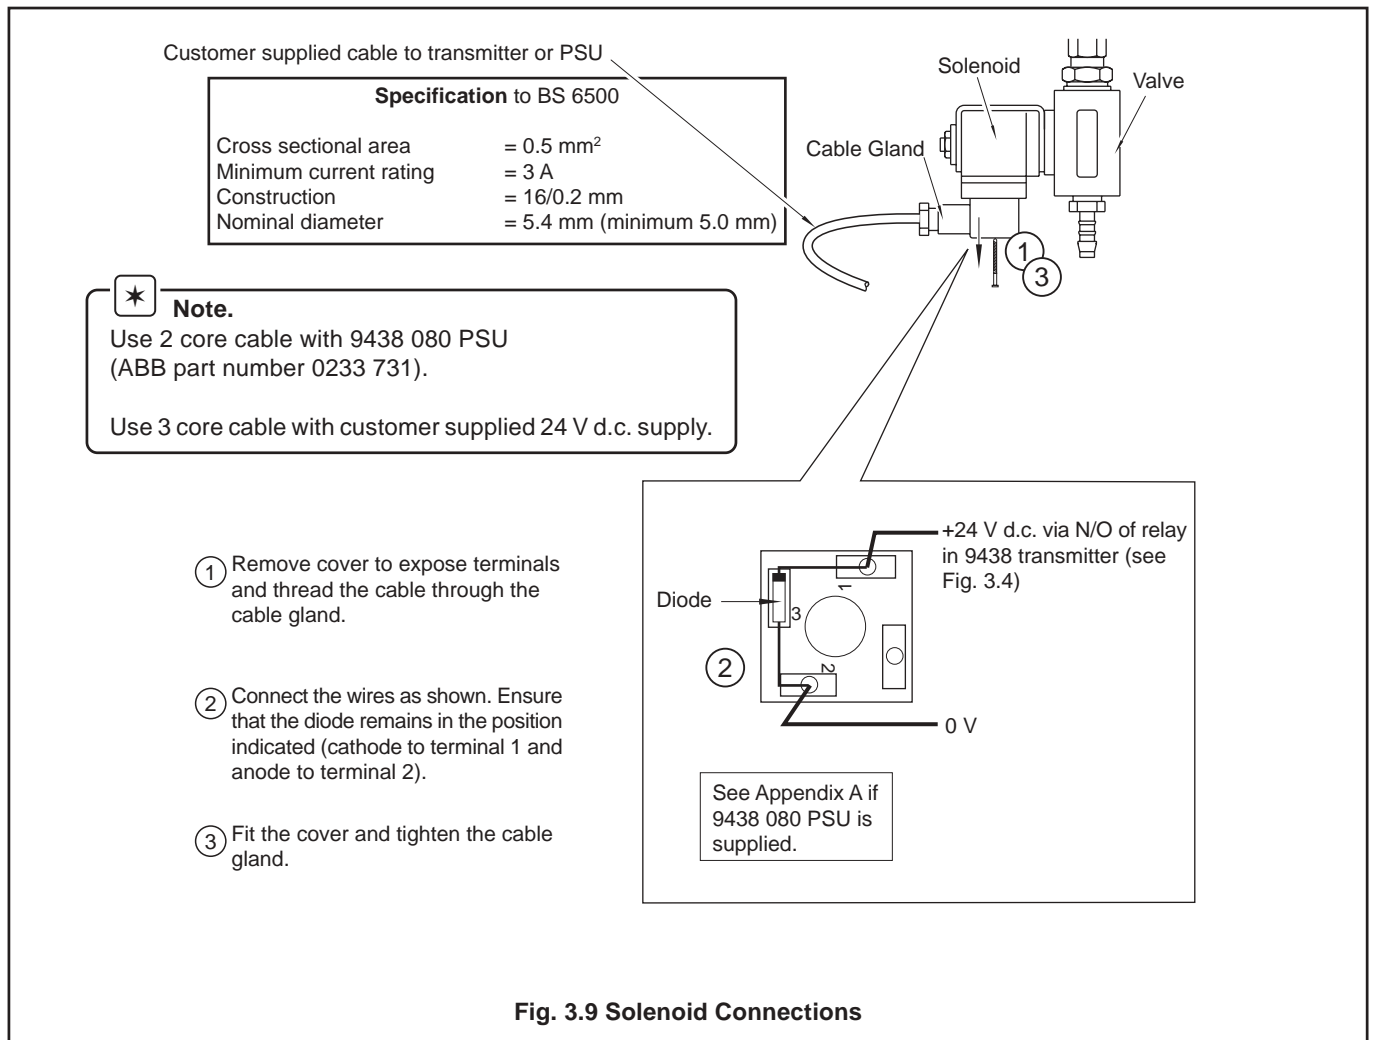

4 SETTING UP

4.1 Fitting the Dissolved Oxygen Sensor – Fig. 4.1



Caution.


- Only install the oxygen sensor immediately prior to use, otherwise leave it stored in its protective container. The sensor has a limited shelf life and should NOT be stored longer than about 6 months. Store under cool conditions.
- Take special care to line up the two pins in the oxygen sensor with their respective sockets before making the connection and tightening.
- Take care not to damage the delicate membrane on the end of the oxygen sensor.
- Ensure that the mating surfaces (carrying the electrical connection) of the oxygen sensor and connector body are clean and **completely dry**.

Optional enclosure not shown for clarity

① Remove the top from the oxygen sensor container.

② Unscrew the protective cap from the rear of the oxygen sensor

Place an O-ring (provided) as shown and locate the connector body on the oxygen sensor.

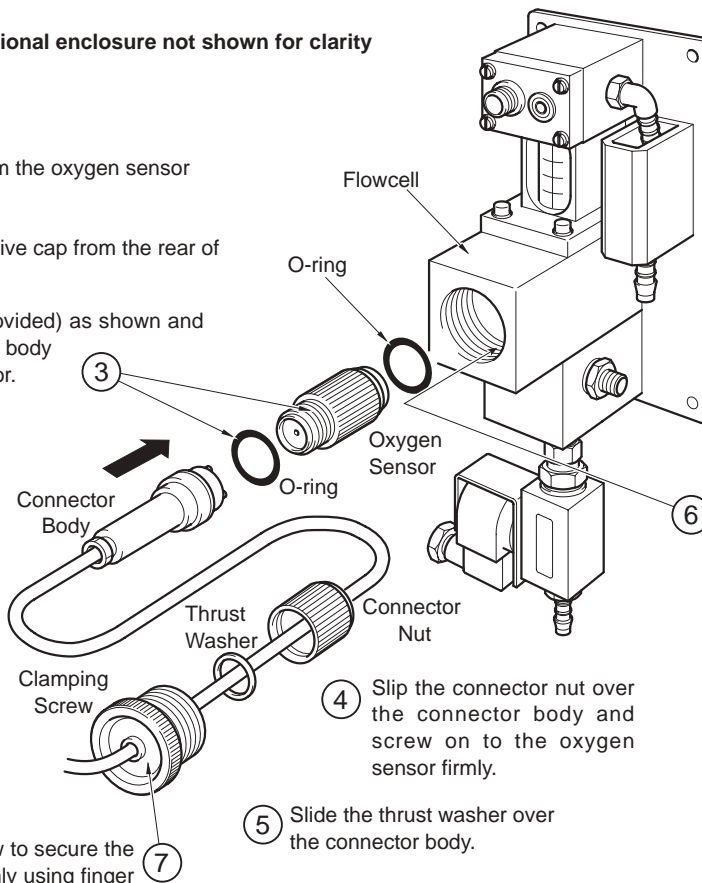

⑥ Insert the complete assembly into the flowcell ensuring that the O-ring is in place.

④ Slip the connector nut over the connector body and screw on to the oxygen sensor firmly.

⑤ Slide the thrust washer over the connector body.

Use the clamping screw to secure the assembly. Screw in firmly using finger pressure only.


⑦



Caution. Do not overtighten the clamping screw.

Fig. 4.1 Fitting the Dissolved Oxygen Sensor

4.2 Connecting the Flowcell – Fig. 4.2

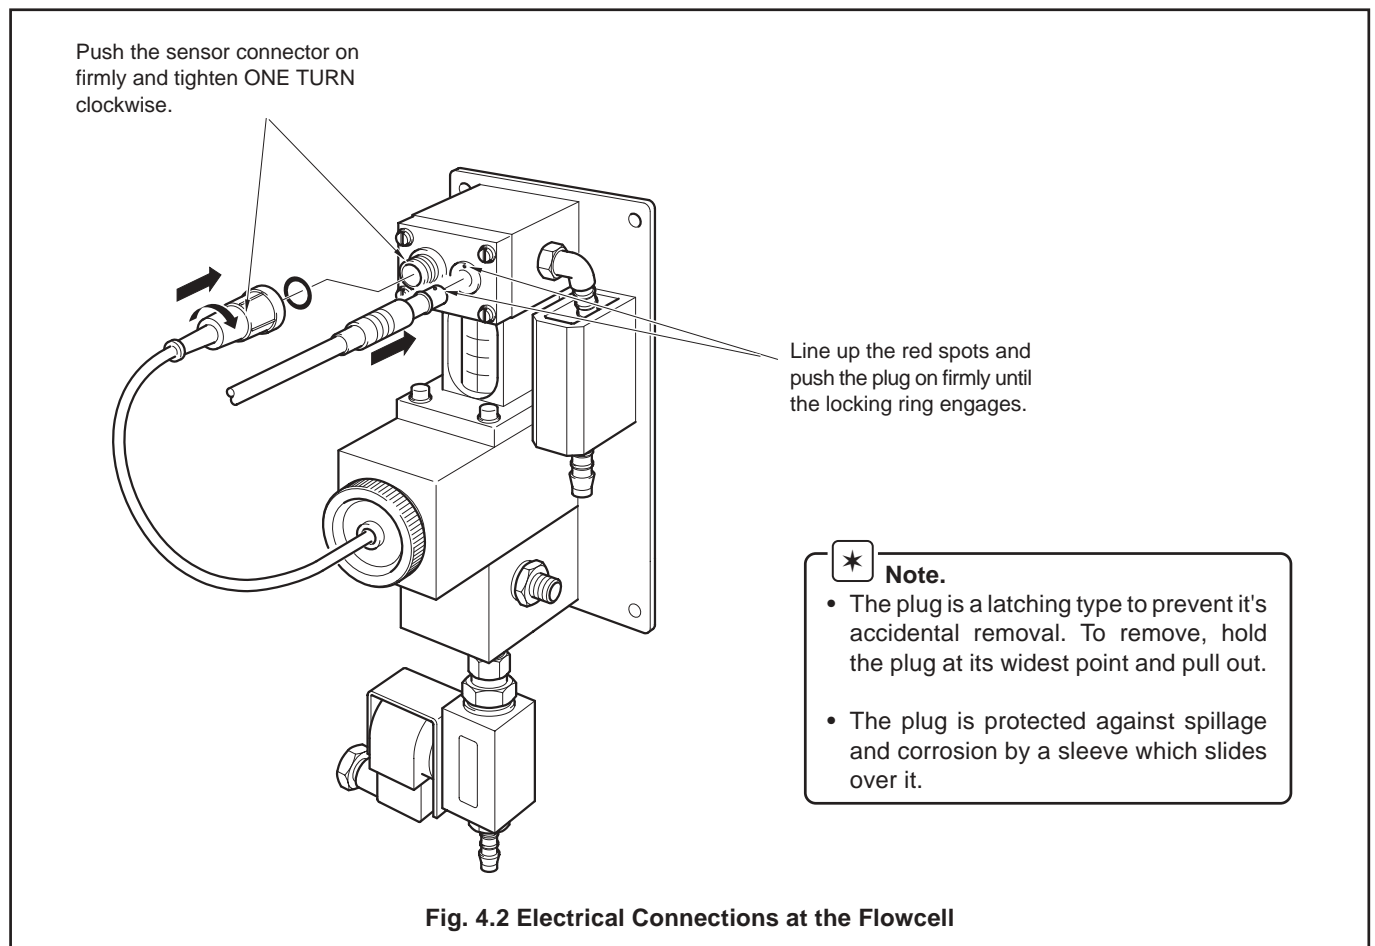


4.3 Checking Sample Flow – Fig. 4.3

Check that the sample flows correctly in both normal operation and during a calibration or thermal overload.

To simulate a calibration manually, open the valve – see Section 6.2.1 **Operating Page**

Carefully remove the dissolved oxygen sensor and check that the flowcell is empty. If sample still flows, check that the installation complies with Section 2.3.3.


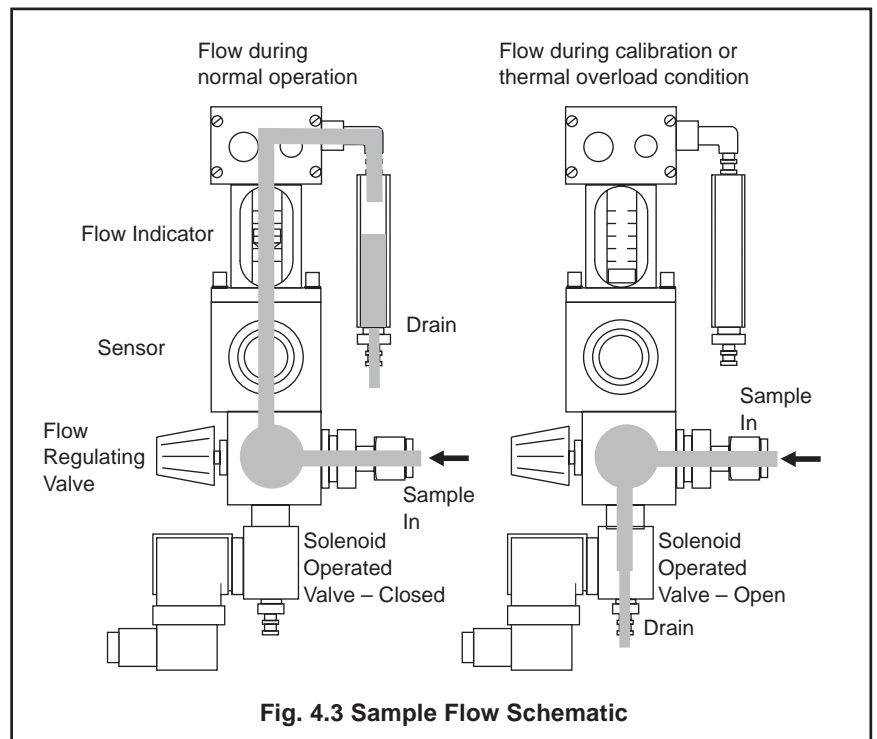


5 CONTROLS AND DISPLAYS

5.1 Displays – Fig. 5.1

The display comprises a 5-digit, 7-segment digital upper display line and a 16-character dot-matrix lower display line. The upper display line shows numerical values of dissolved oxygen concentration, temperature, alarm set points or programmable parameters. The lower display line shows the associated units or programming information.

5.2 Switch Familiarization

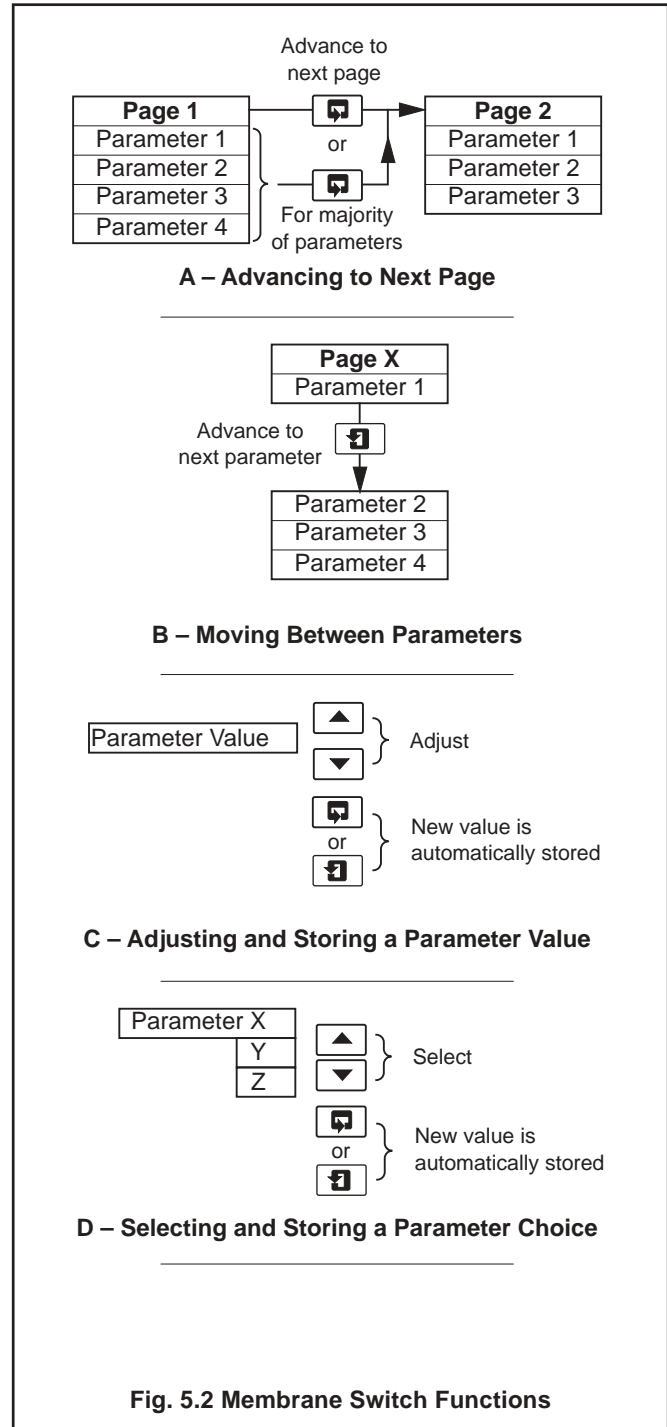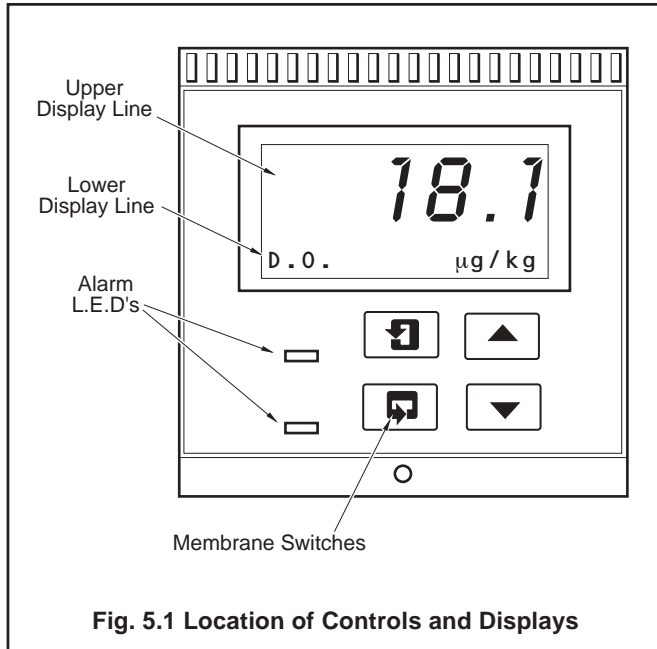

6 START UP AND OPERATION

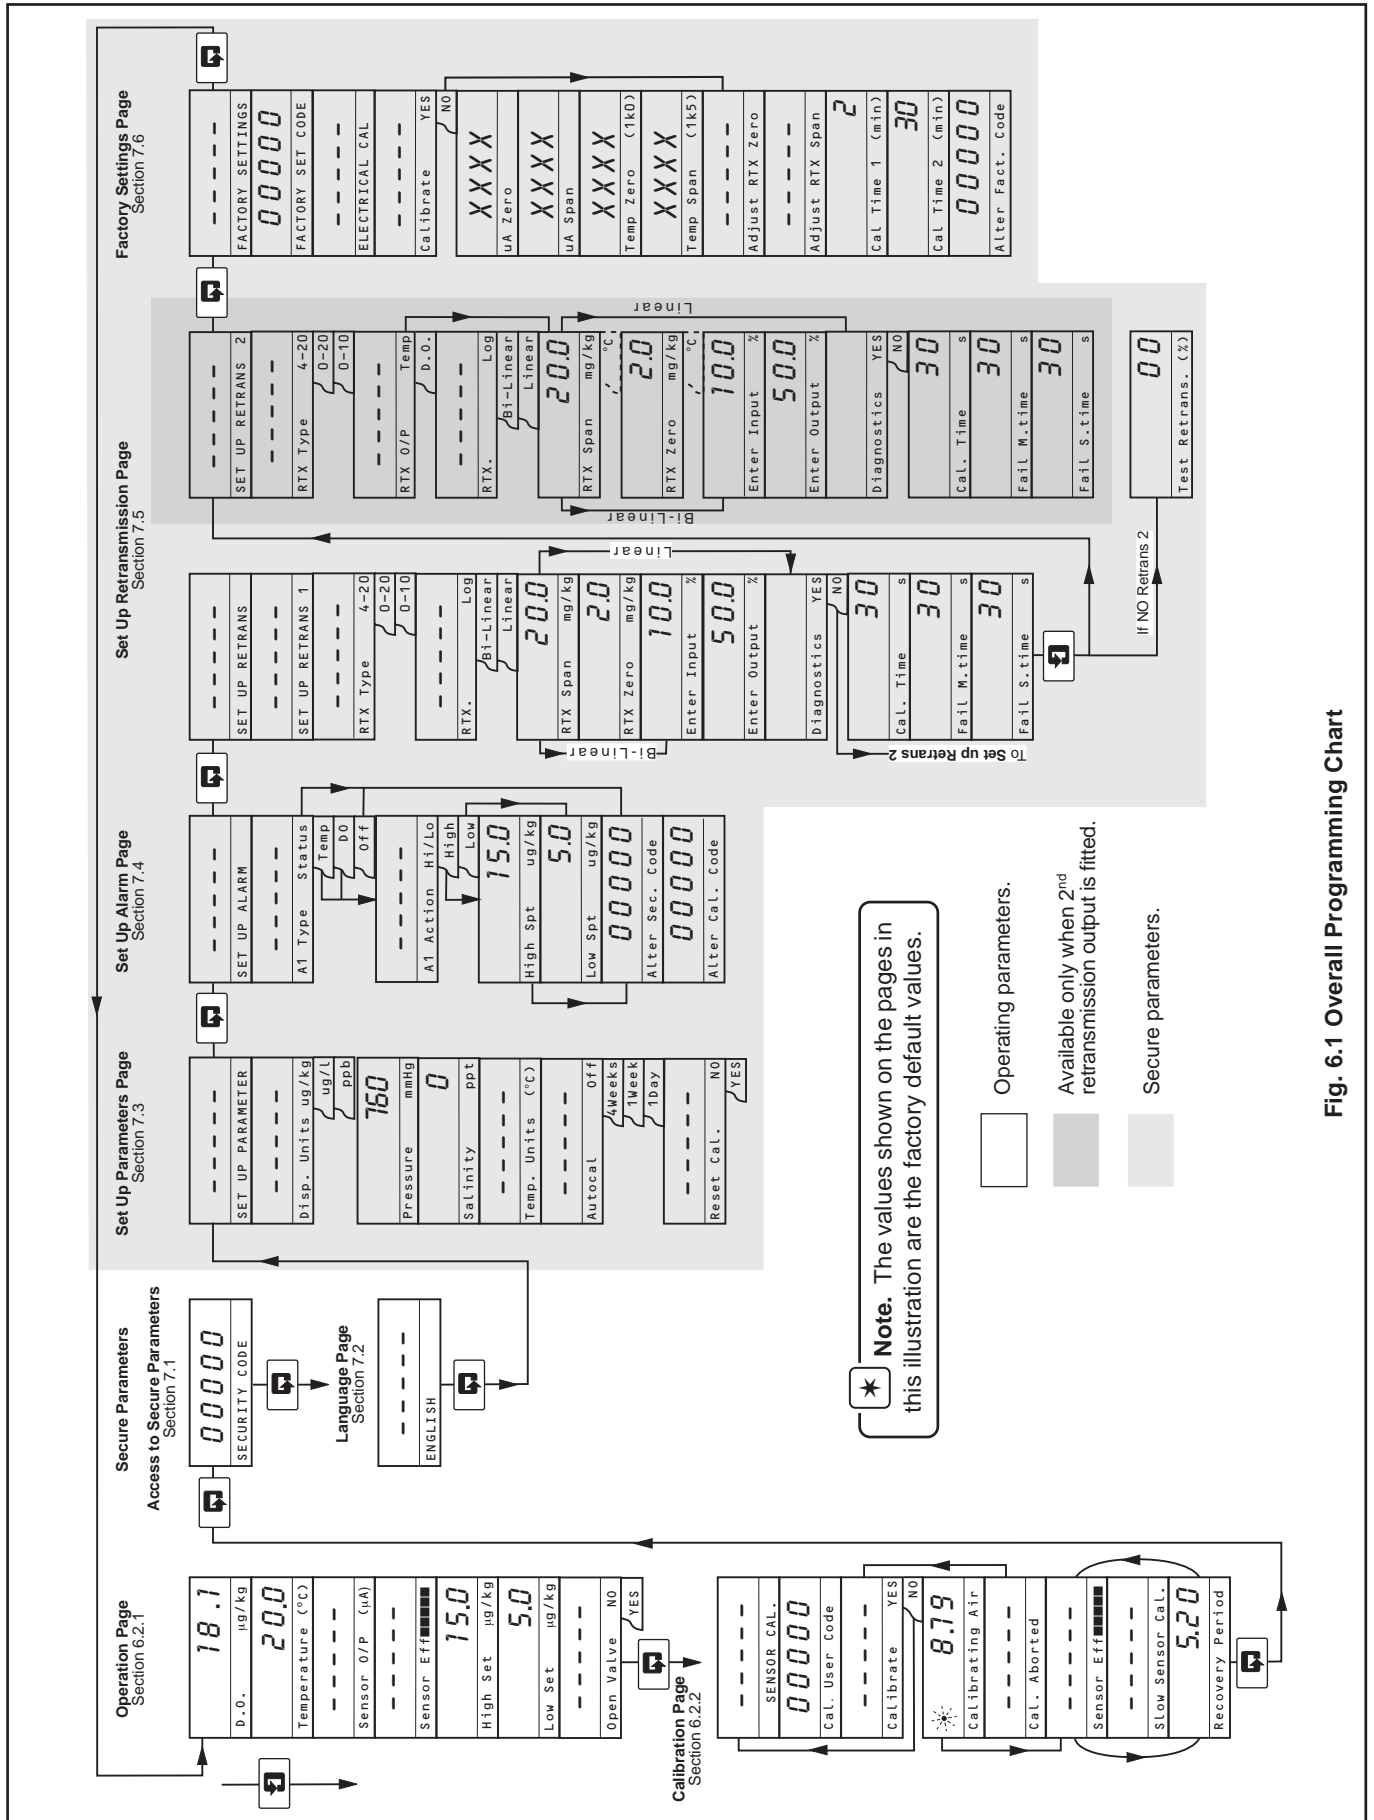


Fig. 6.1 Overall Programming Chart

...6 START UP AND OPERATION

6.1 Instrument Start-up – Fig. 6.1


Ensure all electrical connections have been made and switch on the power supply. If the instrument is being commissioned for the first time, calibration and programming of parameters is required.

The overall operating and programming chart is shown in Fig. 6.1.

6.2 Operation – Dissolved Oxygen Measurement Mode

Operation in the Dissolved Oxygen measurement mode comprises an **Operating Page** and a **Calibration Page**. The **Operating Page** is a general use page in which parameters are viewed only and cannot be altered. To alter or program a parameter, refer to the programming pages in Section 7. The **Calibration Page** allows a calibration to be carried out. A 5-digit calibration code is used to prevent unauthorized access to the sensor calibration page. The value is preset at 00000 to allow access during commissioning, but should be altered to a unique value, known only to authorized operators, in the **Set Up Alarm page** – see Section 7.2

6.2.1 Operation Page

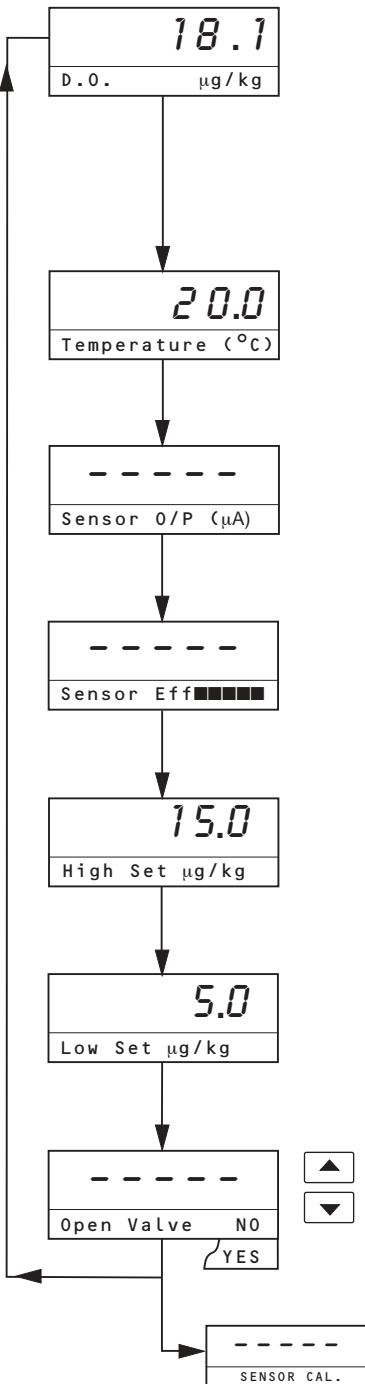

Measured Dissolved Oxygen

The measured dissolved oxygen is displayed in $\mu\text{g/l}$, mg/l , ppb , ppm , mg/kg or $\mu\text{g/kg}$.

Auto ranging: 0.0 to $99.9 \mu\text{g kg}^{-1}$
100 to $999 \mu\text{g kg}^{-1}$
1.00 to 9.99mg kg^{-1}
10.0 to 20.0mg kg^{-1}

Press to advance to next parameter or press to advance to **Calibration Page**, Section 6.2.2.

Sample Temperature

The sample temperature is displayed in either $^{\circ}\text{C}$ or $^{\circ}\text{F}$ – see Section 7.1.

Sensor Output

Raw current signal (μA) generated by the sensor.

Sensor Efficiency

Bar graph indication of the sensor performance, based on last calibration – see Section 6.2.2.

High Setpoint

The **High** alarm setpoint value is only visible if the alarm is programmed for either D.O. or Temperature and is set to **High** or **High/Low**.

Low Setpoint

The **Low** alarm setpoint value is only visible if the alarm is programmed for either D.O. or Temperature and is set to **Low** or **High/Low**.


Open Valve

Manually open the calibration valve to drain the flowcell prior to accessing the sensor. The reading displayed when the valve is open does not represent the dissolved oxygen content of air-saturated water at the prevailing ambient temperature.

Advance to **Calibration Page**, Section 6.2.2.

6.2.2 Calibration Page

Calibration involves standardizing the instrument and the sensor by exposing the sensor to air. During a calibration, retransmission and alarm outputs are automatically held to prevent inadvertent operation of ancillary equipment.

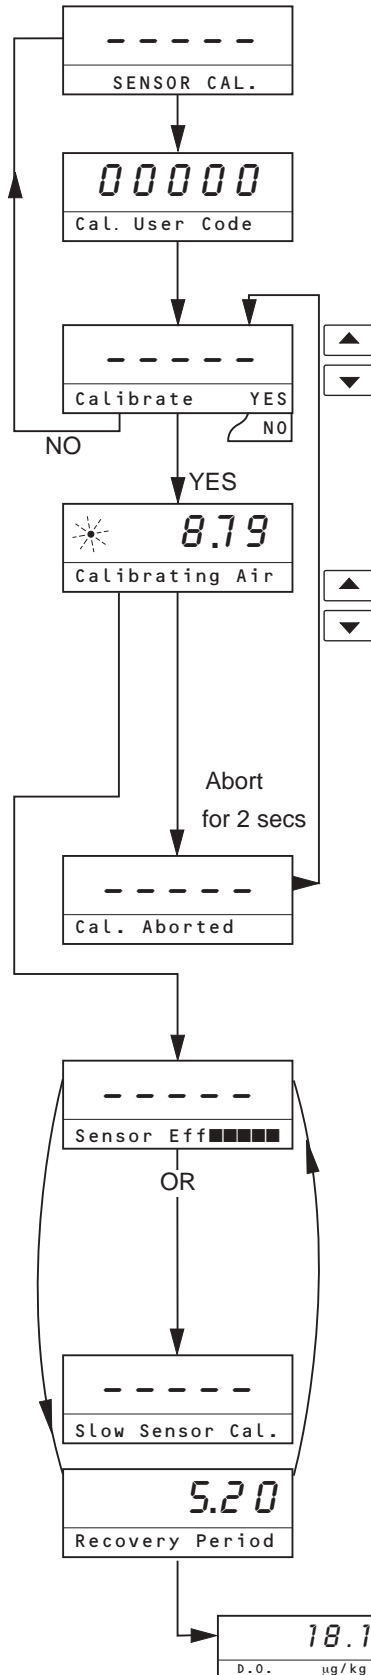

Press **[▶]** to advance to next parameter
or
 Press **[◀]** to return to **Operation Page**, Section 6.1

Calibration Access

Enter the required calibration code number, between 00000 and 19999. If an incorrect value is entered, access to calibration is prevented and **Calibration Page** is displayed.

Select YES to enable manual calibration and press **[▶]** to start the calibration sequence.

Calibrating in Air

The calibration valve opens exposing the sensor to air. A flashing dot indicates that a calibration is in progress and the displayed value is the sensor reading based on the LAST calibration. See timings below.

Wait Period Where the sensor is exposed to air before the stability of the sensor is checked. This is preset at 2 minutes (Cal Time 1).

Stability Period The readings are monitored for between 1 and 5 minutes until a stable response is achieved.

When stability has been achieved the calibration valve closes allowing sample to flow past the sensor.

Abort Calibration

Pressing **[▶]** during **Calibrating in Air** aborts the calibration and the **Cal. Aborted** message is displayed for 2 seconds. The calibration valve closes allowing the sample to flow past the sensor again.

Note that the **A2 LED** continues to indicate that a calibration is in progress, and will do so for the duration of the programmed recovery period.

Sensor Efficiency

A five-bar display provides an indication of the sensor's performance.

■■■■■	>85% efficiency	} Pass
■■■■	>70% "	
■■■	>60% "	
■■	>50% "	
■	>40% "	
✱	<40% "	} Low sensor efficiency

Slow Sensor Response

If the output from the sensor does not stabilize during the 1 to 5 minute stability period the calibration will not be accepted and **Slow Cal.** will be displayed.

Recovery Period


Shows the sample reading as the sensor recovers at the lower sample value. The Recovery Period is preset at 30 minutes (Cal Time 2).

The display automatically returns to the **Operating Page** at the end of this period.

7 PROGRAMMING AND ELECTRICAL CALIBRATION

7.1 Access to Secure Parameters

A 5-digit security code is used to prevent tampering with the secure parameters.

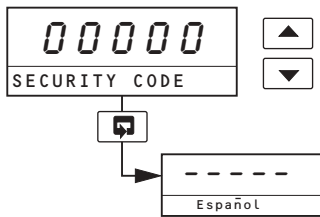


Security Code

Enter the required code number between 00000 and 19999 to gain access to the secure parameters. If an incorrect value is entered, access to subsequent programming pages is prevented and the display reverts to the **Operation Page**.

Advance to **Language Page**, Section 7.2.

7.2 Language Page

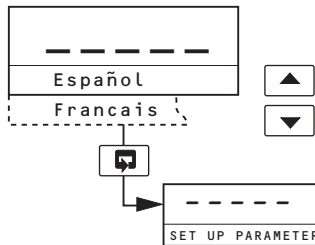


Language Page

Select the language to be displayed on all subsequent pages: Español, Français, Deutsch or English.

Advance to **Set Up Parameters Page**, Section 7.3

7.3 Set Up Parameters Page

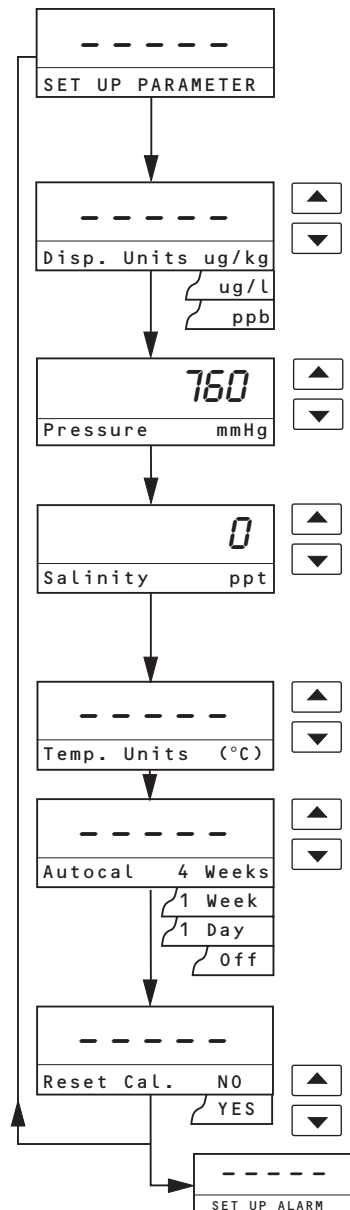

Press to advance to next parameter

or

Press to advance to **Set Up Alarm Page**, Section 7.4.

These two switches are used to advance to all subsequent parameters and pages. If a parameter is changed it is automatically stored on operation of either switch.

Display Units

Select the required display units:
 $\mu\text{g}/\text{kg}$, $\mu\text{g}/\text{l}$, or ppb .

Barometric Pressure Correction

Set the local barometric pressure in mm Hg (between 500 and 800).
If the local barometric pressure is unknown the default value, which is the standard sea-level value of 760 mm Hg, should not be changed.

Salinity Correction

Required when monitoring sea water or other waters containing high concentrations of dissolved salts.

Enter the appropriate value between 0 and 80 parts per thousand (ppt).

Leave at the default value of 0 ppt if correction is not required.

Temperature Units

Select either $^{\circ}\text{C}$ or $^{\circ}\text{F}$.

Auto Calibration


Select the frequency of automatic calibrations: 1 Day, 1 Week or 4 Weeks. Select **Off** to disable automatic calibrations. Only manual calibrations may be carried out.

Reset Auto Calibration

Select **YES** to reset the timing for automatic calibrations. To fix the calibration to a specific time of day select **YES** at the correct time of day. (This will be automatically reset following a power failure.)

Advance to **Set Up Alarm Page**, Section 7.4.

7.4 Set Up Alarm Page

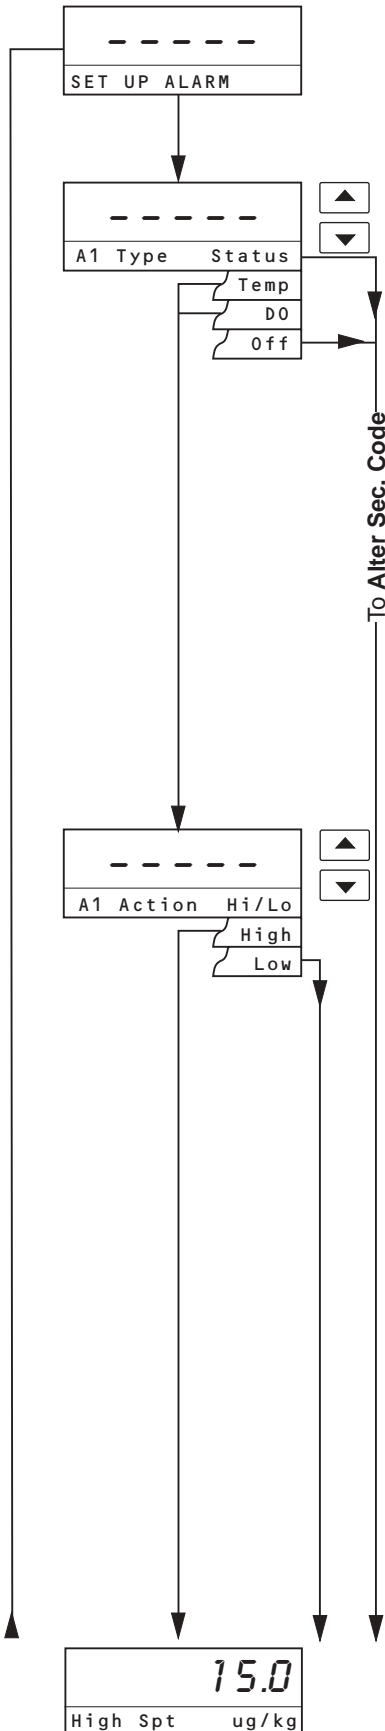

Press **[▶]** to advance to next parameter
 or
 Press **[◀]** to advance to **Set Up Retrans Page**, Section 7.5.

Alarm Type

Select the type of alarm required. For Status, Temp and DO alarm types, the alarm l.e.d. is off and the relay energized during normal conditions. In a fail condition, the l.e.d. is on and the relay de-energized.

Status The instrument alerts the operator to a power failure, a condition that causes any of the error messages listed in Table 9.1 to be displayed, or the status of a calibration.

Calibration Fail will cause the Relay and LED to pulse every second.

Temp The instrument alerts the operator if the temperature of the process fluid exceeds or drops below the set point value parameter, depending on the type of Alarm Action selected below.

D.O. The instrument alerts the operator if the Dissolved Oxygen value of the sample exceeds or drops below the set point value parameter, depending on the type of Alarm Action selected below.

Off If selected, no alarm is set and the alarm l.e.d. is off and the relay de-energized at all times.

Alarm Action

For 'Fail-safe' alarm operation the relay's alarm state must be the same as the power-down state, i.e. the relay is de-energized.

For **High** alarm operation the relay must be energized below the alarm set point.

For **Low** alarm operation the relay must be energized above the alarm set point.

The alarm l.e.d.s are illuminated in the alarm condition.

Alarm Action	L.E.D. Action for Input Above Set Point	L.E.D. Action for Input Below Set Point	Relay Action for Input Above Set Point	Relay Action for Input Below Set Point
High	ON	OFF	De-energized	Energized
Low	OFF	ON	Energized	De-energized

Hi/Lo Alarm activates above the **High Set Point** or below the **Low Set Point**.

High Alarm activates above the **High Set Point**.

Low Alarm activates below the **Low Set Point**.


The set point band is defined as the actual value of the set point plus or minus the hysteresis value. The hysteresis value is $\pm 1\%$ of the **Alarm 1 Set Point**. Alarm action occurs if the input value is above or below the set point band. If the input moves within the set point band, the last alarm action is maintained.

Continued on next page...

...7 PROGRAMMING AND ELECTRICAL CALIBRATION

...7.4 Set Up Alarm Page

...Continued from A1 Action

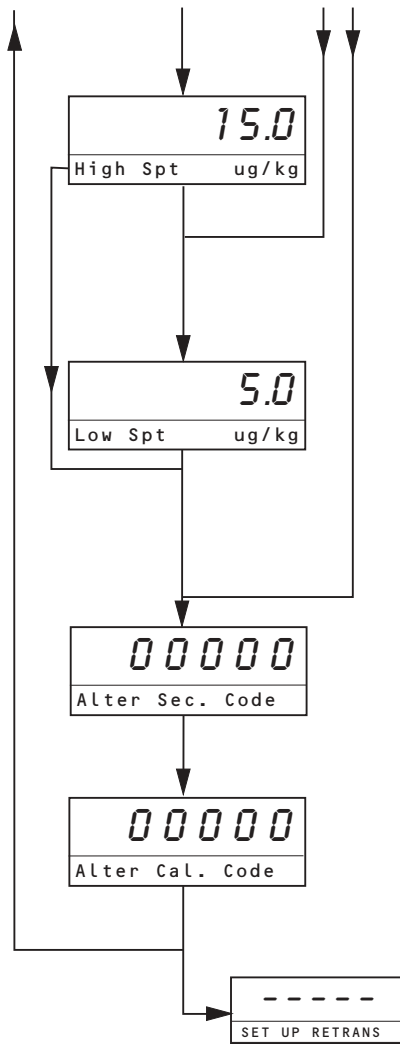

High Set Point

The **High** set point can be set to any value within the full measurement range, with the units automatically changing.

The set point value is subject to hysteresis as detailed above.

Set the alarm set point to the required value.

Displayed only if **Alarm Action** is set to **High** or **Hi/Lo**.

Low Set Point

The **Low** set point can be set to any value within the full measurement range, with the units automatically changing.

The set point value is subject to hysteresis as detailed above.

Set the alarm set point to the required value.

Displayed only if **Alarm Action** is set to **High** or **Hi/Lo**.

Alter Secure Parameters Security Code

Set the secure parameters security code to a value between 00000 and 19999.

IMPORTANT – YOU MUST MEMORIZE THE NEWLY SET SECURITY CODE. If it is forgotten contact the Company for advice.

Alter D.O. Sensor Calibration Security Code


Set the pH calibration security code to a value between 00000 and 19999.

IMPORTANT – YOU MUST MEMORIZE THE NEWLY SET SECURITY CODE. If it is forgotten contact the Company for advice.

Advance to **Set Up Retransmission Page**, Section 7.5.

7.5 Set Up Retransmission Page

In this section the actual values denoted by 'xxxxx' are unimportant and are used to determine display reading stability when carrying out the electrical calibration procedure.

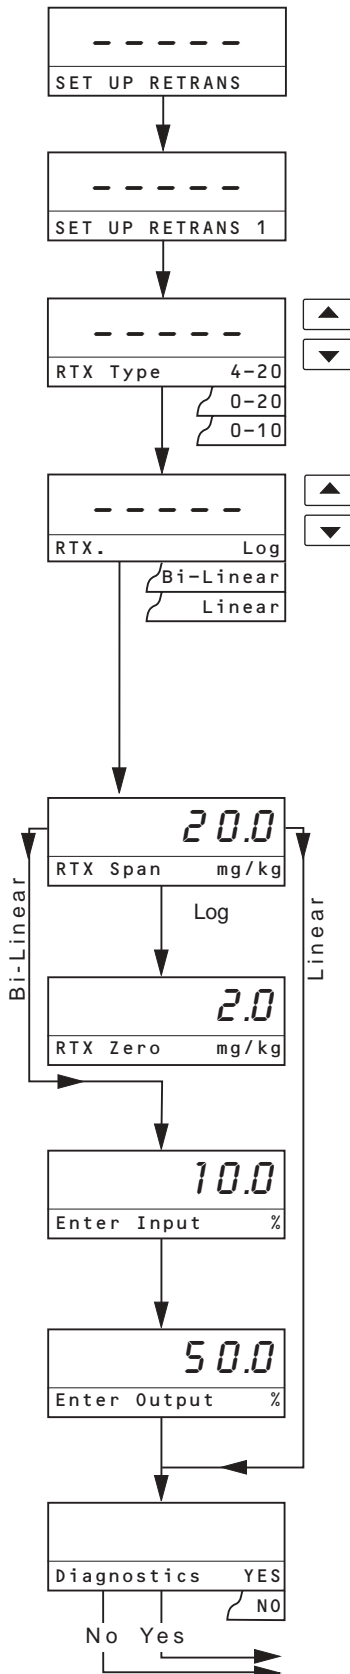

Press **[▶]** to advance to next parameter

or

Press **[⏪]** to advance to **Factory Settings Page**, Section 7.7.

Set Up Retransmission 1

Retransmission 1 Output Range

The retransmission 1 output can be selected from three mA current ranges to ensure compatibility with the peripheral device connected.

Select the current range required for retransmission 1 output.

Retransmission 1 Output Scale

Select the retransmission output scale required.

Log (logarithmic) – see Fig. 7.2.

Bi-Linear – see Fig. 7.1.

Linear



Note for Bi-linear and log scales. The accuracy specification of the instrument should always be given consideration when setting the scale limits to avoid impractical discrimination on the retransmission output.

Retransmission 1 Span

The span current output can be set to any value between:

Linear 20 mg kg⁻¹ and 20 mg kg⁻¹

Bi-Linear 20 mg kg⁻¹ and 20 mg kg⁻¹

Log 100 mg kg⁻¹ and 20 mg kg⁻¹

Retransmission 1 Zero

The zero current output can be set to any value between 1.0 mg kg⁻¹ and 200 mg kg⁻¹. This is available only for logarithmic output.



Note. For linear output, the zero value is always 0 mg kg⁻¹

Enter Input %

Set the percentage of the display span at which the breakpoint occurs: 1.0 to 100% in 0.1% increments. This is point A on Fig. 7.1.

Enter Output %

Set the percentage output at which the breakpoint occurs: 0.0 to 100% in 0.1% steps. This is point B on Fig. 7.1.


Diagnostics

Select whether the current output diagnostics are required. See Appendix B.

Continued on next page...

...7 PROGRAMMING AND ELECTRICAL CALIBRATION

...7.5 Set Up Retransmission Page

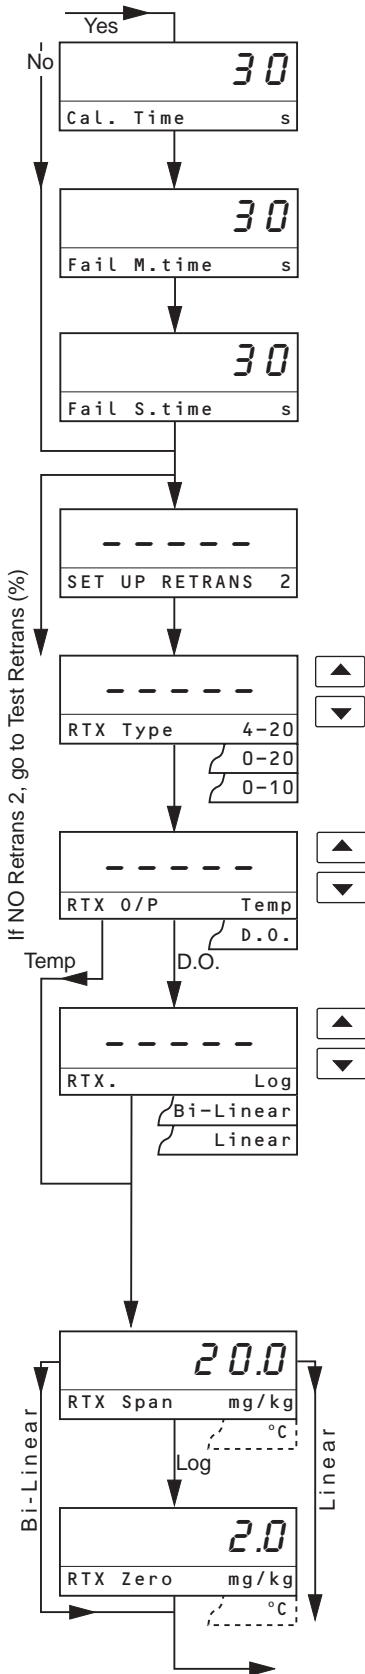

Calibration Pulse time

Set the frequency of the calibration pulse signal. Programmable frequency of 15, 30, 45 seconds, 1, 2, 3, 4, 5 minutes.

See Appendix B.

Calibration Fail Mark Time

Set the mark time period for the current output to be driven hard upscale. Programmable period of 30 seconds, 1, 2, 3, 4, 5, ..., 10 minutes.

See Appendix B.

Calibration Fail Space Time

Set the space time period for the current output to be driven to 0%. Programmable period of 30 seconds, 1, 2, 3, 4, 5, ..., 10 minutes.

See Appendix B.

Set Up Retransmission 2 – see also Table 7.1.



Note. Available only on 9438 800 series instruments.

Retransmission 2 Output Range

The retransmission 2 output can be selected from three mA current ranges to ensure compatibility with the peripheral device connected.

Select the current range required for retransmission 2 output.

Retransmission 2 Output Assignment

Select the Retransmission output required:

Temp – Temperature

D.O. – Dissolved Oxygen

Retransmission 2 Output Scale

Select the retransmission output scale required. Only available if D.O. selected.

Log (Logarithmic) – see Fig. 7.2.

Bi-Linear – see Fig. 7.1.

Linear



Note for Bi-linear and log scales. The accuracy specification of the instrument should always be given consideration when setting the scale limits to avoid impractical discrimination on the retransmission output.

Retransmission 2 Span


Set the span to the required value. See Table 7.1 for details.

Retransmission 2 Zero

Set the zero to the required value. See Table 7.1 for details.

Continued on next page...

...7.5 Set Up Retransmission Page

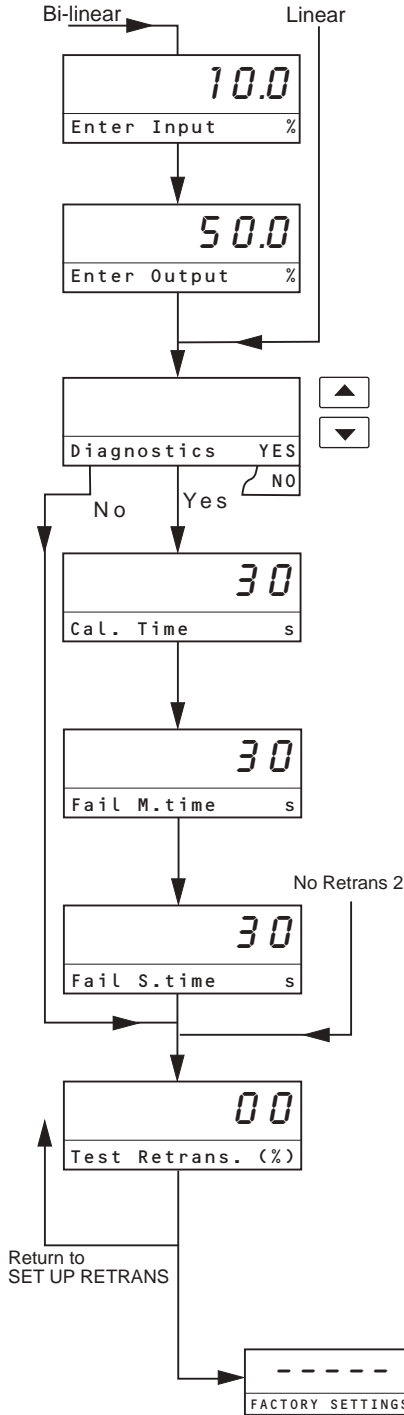

Enter Input %

Set the percentage of the display span at which the breakpoint occurs: 1.0 to 100% in 0.1% increments. This is point A on Fig. 7.1.

Enter Output %

Set the percentage output at which the breakpoint occurs: 0.0 to 100% in 0.1% steps. This is point B on Fig. 7.1.

Diagnostics

Select whether the current output diagnostics are required. See Appendix B.

Calibration Pulse Time

Set the frequency of the calibration pulse signal. Programmable frequency of 15, 30, 45 seconds, 1, 2, 3, 4, 5 minutes. See Appendix B.

Calibration Fail Mark Time

Set the mark time period for the current output to be driven hard upscale. Programmable period of 30 seconds, 1, 2, 3, 4, 5, ...,10 minutes. See Appendix B.

Calibration Fail Space Time

Set the space time period for the current output to be driven to 0%. Programmable period of 30 seconds, 1, 2, 3, 4, 5, ...,10 minutes. See Appendix B.

Test Retransmission Output

The instrument automatically transmits a test signal of 0, 25, 50, 75 or 100% of the retransmission range selected above. The % test signal selected is shown on the upper display.

Example – for a selected range of 0 to 20 mA and 50% retransmission test signal, 10 mA is transmitted.

Select the required retransmission test signal.

Advance to **Factory Settings Page**, Section 7.7.

Retransmission 2 Output Assignment	Retransmission 2 Zero	Retransmission 2 Span
Dissolved Oxygen	Linear = 0 mg kg ⁻¹ Bi-Linear = 0 mg kg ⁻¹ Log = 1.0 mg kg ⁻¹ and 200 mg kg ⁻¹	Linear 20 mg kg ⁻¹ and 20 mg kg ⁻¹ Bi-Linear 20 mg kg ⁻¹ and 20 mg kg ⁻¹ Log 100 mg kg ⁻¹ and 20 mg kg ⁻¹
Temperature (°C) (Subject to minimum range of 20°C)	5 (minimum)	55 (maximum)
Temperature (°F) (Subject to minimum range of 36°F)	41 (minimum)	131 (maximum)

Table 7.1 Retransmission 2

...7 PROGRAMMING AND ELECTRICAL CALIBRATION

7.6 Electrical Calibration

***** **Note.** The instrument is calibrated by the company prior to despatch and an electrical calibration should be carried out **only** if the accuracy of the instrument is suspect **and** suitably calibrated test equipment is available.

7.6.1 Equipment Required

- Current source: 0 to +100 μ A.
- Decade resistance box (temperature input simulator): 0 to 1k5 Ω .
- Digital milliammeter (current output measurement): 0 to 20 mA.

***** **Note.** Resistance boxes have an inherent residual resistance which may range from a few milliohms up to 1 ohm. This value must be taken into account when simulating input levels, as should the overall tolerance of the resistors within the boxes.

7.6.2 Preparation


- Switch off the supply and disconnect the sensor, temperature compensator and current output from the electronics unit terminal block – see Fig. 3.5 or Fig. 3.6.
- Connect the current source / resistance box to the appropriate terminals – see Table 7.2.
Connect the milliammeter to the retransmission output terminals – see Fig. 3.5 or 3.6.
- Switch on the supply and allow ten minutes for the circuits to stabilize.
- Select the **Factory Settings Page** and carry out the procedure in Section 7.7.

Instrument Type	Terminal						
	1	2	3	4	5	6	7
Wall Mounted	1	2	3	4	5	6	7
Panel Mounted	12	11	10	9	8	7	6
	+ve current input		-ve current input		PT1000 input	Link to terminal 7 (6)	PT1000 input

Table 7.2 Transmitter Terminal Functions

7.7 Factory Settings Page

When carrying out the electrical calibration procedure, the actual values denoted by **X X X X X** are unimportant and are used only to determine display reading stability.

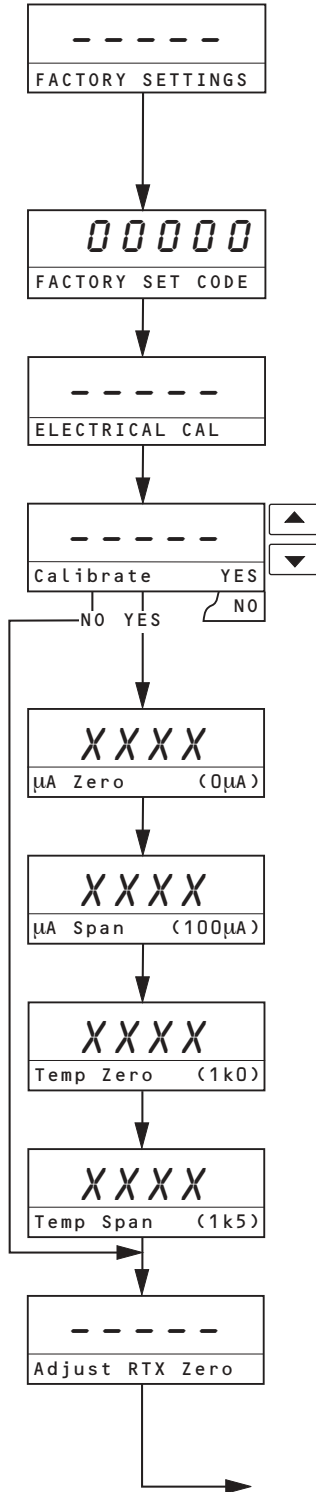

Press to advance to next parameter

or

Press to return to **Operating Page**, Section 6.2.1.

Parameters in these pages are factory set and should not normally require adjustment. They can be set up only if the necessary equipment is available.

Factory Settings Access Code

Enter the required code number. If an incorrect value is entered, access to subsequent parameters is prevented and the display reverts to the top of the page.

Select YES to access the electrical calibration sequence. Select NO to advance to **Cal Time 1**.



Caution. Do not select YES unless instrument calibration is required.

Microamp Zero

Set the current source to 0 μA and allow the instrument display to stabilize.

Microamp Span

Set the current source to +100 μA and allow the instrument display to stabilize.

Calibrate Temperature Zero

Set the temperature simulator resistance box to 1000 Ω and allow the instrument display to stabilise.

Calibrate Temperature Span

Set the temperature simulator resistance box to 1500 Ω and allow the instrument display to stabilise.

Adjust Retransmission Zero

Set the milliammeter reading to 4.00 mA.




Note. Retransmission signal span is calibrated using 20.00 mA. The correct value transmitted depends on the range selected in the **Set Up Outputs Page**.

Continued on next page...

...7 PROGRAMMING AND ELECTRICAL CALIBRATION

...7.7 Factory Settings Page

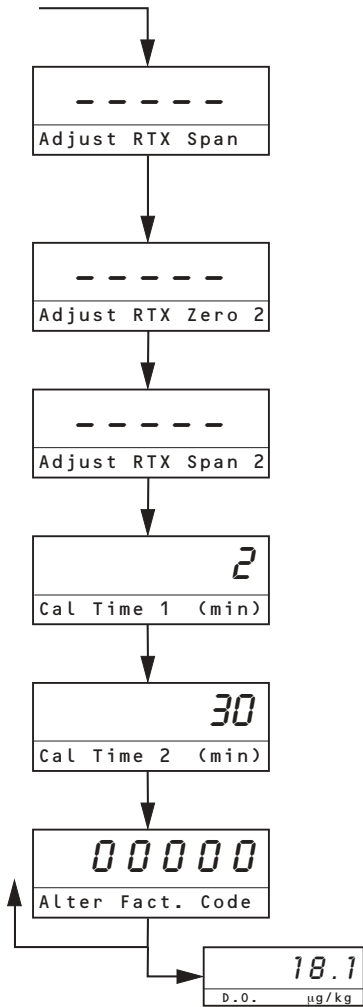

Adjust Retransmission Span

Set the milliammeter reading to 20.00 mA.



Note. Retransmission signal span is calibrated using 20.00 mA. The correct value transmitted depends on the range selected in the **Set Up Outputs Page**.

Adjust Retransmission Zero 2

See **Adjust Retransmission Zero**.

Adjust Retransmission Span 2

See **Adjust Retransmission Span**.

Calibration Time 1

Wait period before the stability of the sensor is checked during the calibration sequence. Programmable from 1 to 10 minutes (default = 2 minutes). See Section 7.5.



Calibration Time 2

Recovery period where the sample is allowed to flow and the instrument settles on reading, before the instrument is brought back on-line (default = 30 minutes). See Section 7.5.

Alter Factory Setting Security Code

Set the security code to a value between 00000 and 19999.

Return to **Operating Page**, Section 6.2.1.

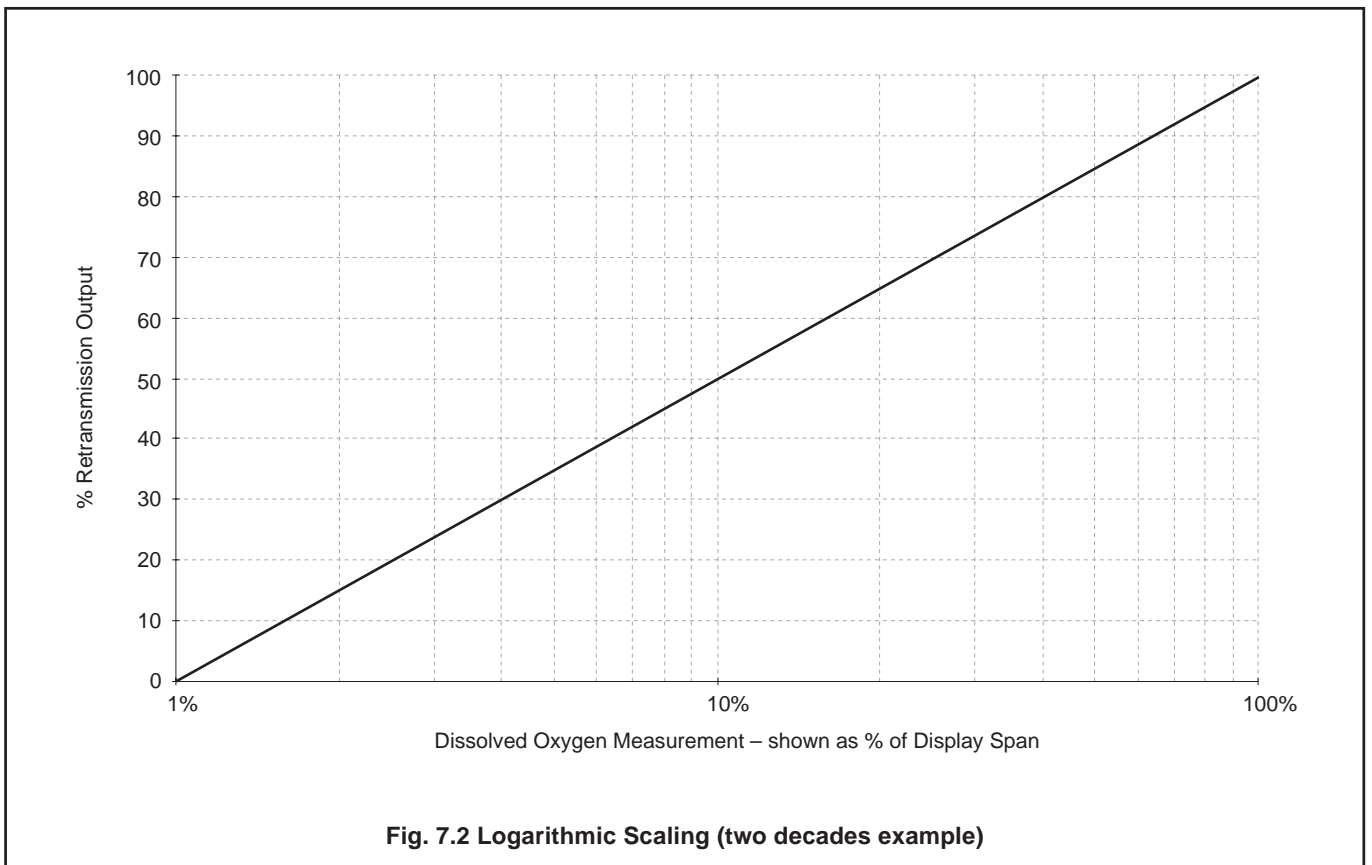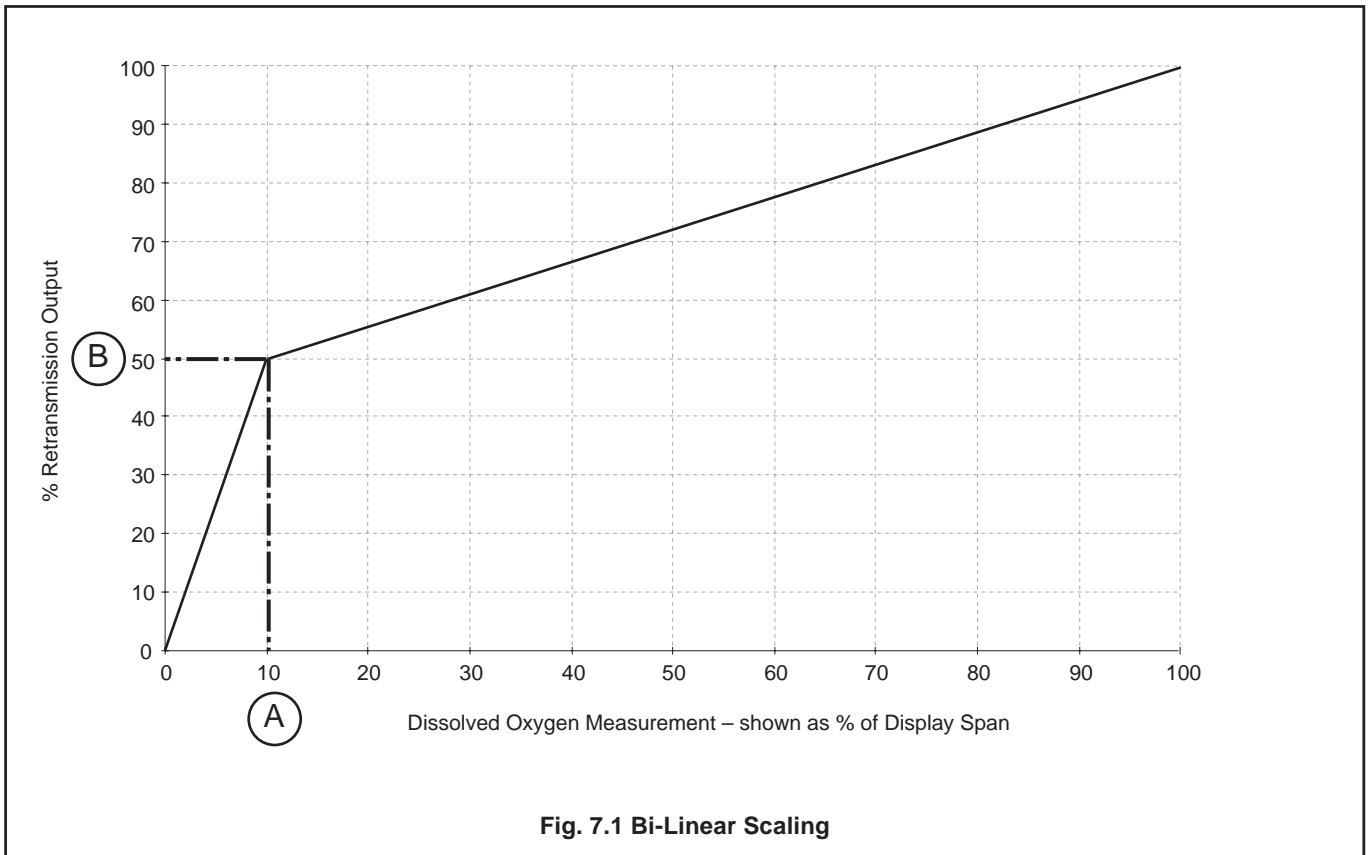

8 MAINTENANCE

8.1 Introduction

No routine maintenance is required for this instrument other than periodic calibration – see Section 6.2.2. However, if following a calibration the sensor output shows one flashing bar, the sensor capsule has therefore become exhausted and needs replacing immediately.

If the output shows two bars, replace the sensor capsule in the near future.

A dirty membrane may also be the cause of the low sensor output. To clean the sensor proceed with the following.



Caution.

- Only install the oxygen sensor immediately prior to use, otherwise leave it stored in its protective container.
- Take special care to line up the two pins in the oxygen sensor with their respective sockets before making the connection and tightening.
- Take care not to damage the delicate membrane on the end of the oxygen sensor.
- Ensure that the mating surfaces (carrying the electrical connection) of the oxygen sensor and connector body are clean and **completely** dry.

8.2 Cleaning/Changing the Sensor

8.2.1 Cleaning

- 1) Drain the flowcell, by manually opening the solenoid valve - Select YES to 'Open Valve' on the main operating page of the transmitter. See Section 6.2.1.
- 2) Unscrew the clamping screw and carefully remove the sensor assembly from the flowcell. Check that O-ring does not fall out.
- 3) Inspect the sensor. If the membrane is clean, refit the sensor as in 5) below.

If deposits are visible on the membrane, remove by gently wiping the membrane with a moist paper tissue; for oily or greasy deposits, the tissue may be moistened with a mild detergent or, if necessary with iso-propyl alcohol (propan-2-ol). After cleaning, dry the interior of the flowcell with a paper tissue or soft cloth, ensure that the O-ring is correctly positioned.

- 4) Insert the sensor assembly into the flowcell.
- 5) Use the clamp screw to secure the assembly. Screw in firmly using finger pressure only.



Caution. Do not overtighten the clamping screw.

- 6) Close the solenoid valve – Select NO to 'Open Valve' on the main operating page of the transmitter. See Section 6.2.1.
- 7) Carry out a calibration – see Section 6.2.2. If a low sensor efficiency is displayed, see Section 9.2.

8.2.2 Changing the Sensor

- 1) Drain the flowcell, by manually opening the solenoid valve – Select YES to 'Open Valve' on the main operating page of the transmitter. See Section 6.2.1.
- 2) Unscrew the clamping screw and remove the sensor assembly from the flowcell.
- 3) Disconnect the sensor capsule and discard both the sensor and sealing washer.
- 4) Take out the O-ring from the flowcell; dry the interior of the flowcell with a tissue or soft cloth and insert the new O-ring supplied with the replacement capsule. Ensure that the O-ring is correctly located on the shoulder near the end of the cavity.
- 5) Remove the new sensor from its container, taking care not to damage the membrane. Unscrew the protective cap from the rear of the sensor.
- 6) Fit the new sealing washer (supplied) as shown in Fig 4.1 and locate and secure the connector body on the sensor.
- 7) Insert the complete assembly into the flowcell.
- 8) Use the clamping screw to secure the assembly. Screw in firmly using finger pressure only.



Caution. Do not overtighten the clamping screw.

- 9) Close the solenoid valve – Select NO to 'Open Valve' on the main operating page of the transmitter. See section 6.2.1.
- 10) Carry out a calibration – see Section 6.2.2. If a low sensor efficiency is displayed, see Section 9.2.

9 SIMPLE FAULT FINDING

9.1 Diagnostic Messages

If erroneous or unexpected results are obtained the fault may be indicated by an error message.

If Alarm A1 has been selected as a STATUS alarm, then the LED and relay operation can be seen in Table 9.1.

The STATUS alarm operates as a FAILSAFE alarm (during an alarm condition the relay state is the same as the power-down state, i.e. de-energized).

Diagnostic Message	STATUS Alarm A1		Possible Cause	Remedy
	LED Action	Relay Action (Failsafe)		
Flashing Display	OFF	Energized	Reading is outside of the measuring range 0 to 20 mg Kg ⁻¹ .	See Sections 9.2 & 9.3.
LOW SENSOR EFF.	ON/OFF (1s period)	De-energized/energized (1s period)	Output from D.O. sensor during calibration less than 40% of expected output.	See Section 9.2.
SLOW SENSOR CAL.	ON/OFF (1s period)	De-energized/energized (1s period)	Output from D.O. sensor during calibration not achieving required stability.	See Section 9.2.
Calibrating in Air	ON	De-energized	Displayed during calibration when sensor is exposed to air.	—
Recovery Period	ON	De-energized	Displayed after calibration whilst waiting for sensor to stabilize on sample. Duration of 30 minutes (Cal Time 2).	—
COLD (Solution too cold)	ON	De-energized	Sample temperature <5°C.	If sample temperature is not <5°C, check the temperature input of the transmitter – see Section 9.3. If fault persists contact the Company.
HOT (Solution too hot)	ON	De-energized	Sample temperature >55°C. This causes the calibration valve to open and drain the flowcell to prevent damage to the sensor. After 30 minutes the valve closes and the sample temperature is measured again. This process continues until the sample temperature is <55°C.	If sample temperature is not >55°C, check the temperature input of the transmitter – see Section 9.3. If fault persists contact the Company.
FAULTY PT1000	ON	De-energized	Temperature compensator/ associated connections are either open or short circuit.	Check that all signal connections are made. If fault persists, check for a response to a temperature input – see Section 9.3.
INVALID INPUT	ON	De-energized	Input signal is outside of measuring range of the electronics.	Check that instrument responds to an input signal by carrying out an electrical calibration as described in Section 7.6.
NV MEMORY ERROR	ON	De-energized	Contents of non-volatile memory have not been read correctly during power up.	Switch off transmitter, wait 10 seconds and switch on again. If fault persists contact the Company.

Table 9.1 Diagnostic Messages

...9 SIMPLE FAULT FINDING

9.2 Low Sensor Efficiency/Slow Sensor Cal. or no Response to D.O. Changes

- a) Check that the sample drains fully from flowcell. If the sample does NOT drain fully check:
 - i) Operation of solenoid valve.
 - ii) Sample inlet flow rate does not exceed 500 ml min⁻¹ maximum.
 - iii) Sample fluid paths are free flowing and clear of partial blockages.
 - iv) Solenoid valve drain tube is not kinked, blocked, excessively long, does not rise along its length.
 - v) Flow gauge is not blocked or dirty.
- b) Replace the sensor (see Section 8.2.2) as an initial check. It is also important that all program parameters have been set correctly and have not been altered inadvertently – see Section 7.

If the fault persists:

- c) Carry out an electrical calibration as detailed in Section 7.6 and check that the instrument responds correctly to the current input.

Failure to respond to the input usually indicates a fault with the transmitter, which must be returned to the Company for repair.

- d) If the response in a) is correct, select the **Operating Page** and set the current source to a value which gives an on-scale D.O. reading on the transmitter. Make a note of the current source setting and the D.O. reading. Reconnect the sensor cable and connect the current source to the sensor end of the cable. Set the same current value on the source and check that the transmitter displays the noted reading in this configuration.

If check a) is correct but check b) fails, check the cable connections and condition. If the response for both checks is correct, fit a new sensor and calibrate it.

9.3 Checking the Temperature Input

Check that the instrument responds to a temperature input. Disconnect the PT1000 leads and connect a suitable resistance box directly to the transmitter inputs – see Section 7.6. Check that the transmitter displays the correct values as set on the resistance box – see Table 9.2.

Incorrect readings usually indicate an electrical calibration problem. Recalibrate the instrument – see Section 7.6.

9.4 High Sample Readings

If the sample reading is higher than expected, the most likely reason is air ingress into the main sample line.

Check and tighten ALL sample connections as it is possible to have an air leak into the sample without sample leaking.

Temperature (°C)	Input Resistance (Ω)
0	1000.0
10	1039.0
20	1079.3
30	1116.7
40	1155.4
50	1194.0
60	1232.4
70	1270.7
80	1308.9
90	1347.0
100	1385.0
130.5	1500.0

Table 9.2 Temperature Readings for Resistance Inputs

10 SPECIFICATION

SYSTEM

Measuring ranges

Programmable within the ranges 0 to 20.0 $\mu\text{g kg}^{-1}$ and 0 to 20 mg kg^{-1}

Scaling

$\mu\text{g kg}^{-1}$, mg kg^{-1} or ppb, ppm

Accuracy

$\pm 5\%$ of reading or $\pm 1 \mu\text{g kg}^{-1}$, whichever is the greater

Response time

90% of a step change in 1 minute

Resolution

0.1 $\mu\text{g kg}^{-1}$

Stability

$\pm 5\%$ of reading or $\pm 1 \mu\text{g kg}^{-1}$ per week, whichever is the greater
Not applicable when autocalibration is in operation

Temperature compensation

5 to 55°C (41 to 131°F) automatic using Pt1000 resistance thermometer

Salinity correction

Preset within the range 0 to 80 ppt

Barometric pressure correction

Preset within the range 500 to 800 mm Hg

Sample flow

100 to 400 ml min^{-1}

Sample pressure

Maximum 2 bar

Sample temperature

5 to 55°C (41 to 131°F)

Sensor ambient temperature

0 to 55°C (32 to 131°F)

Environmental Data

Operating temperature limits

-20 to 55°C (-4 to 131°F)

Operating humidity limits

Up to 95% RH non-condensing

Storage temperature limits

Liquid handling panel:	-25 to 70°C (-13 to 158°F)
Sensor:	0 to 55°C (32 to 131°F)
Transmitter:	-25 to 70°C (-13 to 158°F)
Solenoid valve power supply (optional):	-25 to 70°C (-13 to 158°F)

Protection

Liquid handling panel

IP65
IP54 – Liquid handling panel enclosure
Solenoid valve power supply (optional): IP65 (optional)

Transmitter

Panel-mounting, IP66/NEMA4X
Wall-mounting, IP66/NEMA4X front

Power Requirements

System

Power consumption, <21 VA

Transmitter

Power supply, 100 to 130 V or 200 to 260 V 50/60 Hz
Power consumption, <10 VA

Error due to power supply variations

Less than $\pm 2\%$ for +6% –20% variation from nominal supply voltage

Insulation, mains to earth

2 kV r.m.s.

Solenoid valve

Power supply, 90 to 132 V or 180 to 264 V 47/63 Hz
Power consumption, <11 VA

Mechanical Data

Mounting

Transmitter, Wall- or Panel-mounting
Liquid handling panel/enclosure, Wall-mounting
Solenoid valve power supply, Wall-mounting

Overall dimensions

Liquid handling panel

without unions and without environmental enclosure: 100 approx. x 310 x 118 mm (3.94 approx. x 12.2 x 4.65 in.)

with environmental enclosure: 250 x 440 x 160 mm (9.84 x 17.32 x 6.3 in.)

Transmitter

Wall-mounting: 160 x 214 x 68 mm (6.29 x 8.43 x 2.68 in.)

Panel-mounting: 96 x 96 x 191 mm (3.78 x 3.78 x 7.52 in.)

Panel cutout: 92 x 92 mm (3.62 x 3.62 in.)

Weights

Liquid handling panel

With sensor fitted, without environmental enclosure: 1.3 kg (2.86 lb)

With sensor fitted and with environmental enclosure: 3.9 kg (8.58 lb)

Transmitter

Wall-mounting: 2 kg (4.41 lb)

Panel-mounting: 1.5 kg (3.31 lb)

Solenoid valve power supply: 0.7 kg (1.54 lb)

Sample connections

Compression fitting to accept either 6 mm or 1/4 in. O.D. tubing – to be specified when ordering

...10 SPECIFICATION

SPECIFICATION – TRANSMITTER

Transmitter Display

Measured value

5-digit x 7-segment back-lit I.c.d.

Information

16-character, single line, dot matrix, back-lit I.c.d.

Insulation, contacts to earth

2 kV r.m.s.

Set Point and Relay

No. of set points

One

Set point adjustment

Programmable as a concentration or diagnostics alarm

Set point hysteresis

±1% of f.s.d. (fixed)

Local set point annunciation

Red I.e.d.

Number of relays

One

Relay contacts

Single pole changeover

Rating: 250 V a.c. 250 V d.c. maximum
3 A a.c. 3 A d.c. maximum

Loading: (non-inductive) 750 VA 30 W maximum
(inductive) 75 VA 3 W maximum

Retransmission

Number of retransmission signals

One, fully isolated

Optional second current output

Output current

0 to 10, 0 to 20 or 4 to 20 mA programmable

Maximum load resistance

500 Ω (20 mA maximum)

Serial communication

RS422/RS485 (optional, with one current output signal)

11 SPARES

Normal, replacement spares are shown in Fig. 11.1. Strategic spares are listed below.

11.1 Strategic Spares

Part No.	Description	Qty
9438 080	24V Power Supply Unit	1
0234 037	Solenoid Valve assembly	1
0216 574	Flow Gauge assembly	1
0216 575	Needle Valve Cartridge assembly	1

PCB Assemblies, Wall Mounted

9438 070	Complete Main PCB assembly, for single current o/p	1
9438 071	Complete Main PCB assembly, for single current o/p + Serial/Modbus	1
9438 072	Complete Main PCB assembly, for 2 current o/p version	1
4600 0295	Display PCB assembly	1
4600 0335	Low Level D.O. Module assembly	1
4600 0405	2nd Retransmission output module assembly	1

PCB Assemblies, Panel Mounted

9438 075	Complete Main PCB assembly (cropped), for single current o/p	1
9438 076	Complete Main PCB assembly (cropped), for single current o/p + Serial/Modbus	1
9438 077	Complete Main PCB assembly (cropped), for 2 current o/p version	1
4600 0246	Power supply PCB assembly (cropped)	1
4600 0285	Mother PCB assembly	1
4600 0335	Low Level D.O. Module assembly	1
4600 0405	2nd Retransmission output module assembly	1

Test Equipment

9439 950	Dissolved Oxygen Test Simulator	1
9439 035	Test Simulator lead	1

Note. Ensure that the correct O-rings are fitted in the appropriate positions as shown.
Fit new O-rings when a new sensor is fitted.

Replacement Seals Pack (9437016)
comprising:
2 x large O-rings
2 x small O-rings
2 x nylon seals
2 x end caps*
1 x protective cover

*The end cap is used to blank off this connector when the plug is not fitted.

Oxygen Sensor 9435 300
(including O-rings)

O-ring
(3/4 in. I.D. x 0.070 in cord)

O-ring
(7/8 in. I.D. x 0.070 in. cord)

Connector Body

Connector Nut

Thrust Washer

Clamping Screw

Plug

Handle Assembly 9437025
which includes:
Connector Body
Sensor Connector Cable Assembly
Connector Nut
Thrust Washer
Clamping Screw
Plug

Sensor Connector Cable Assembly: 9437 029/031/032/034
(1 m/5 m/10 m/30 m respectively)

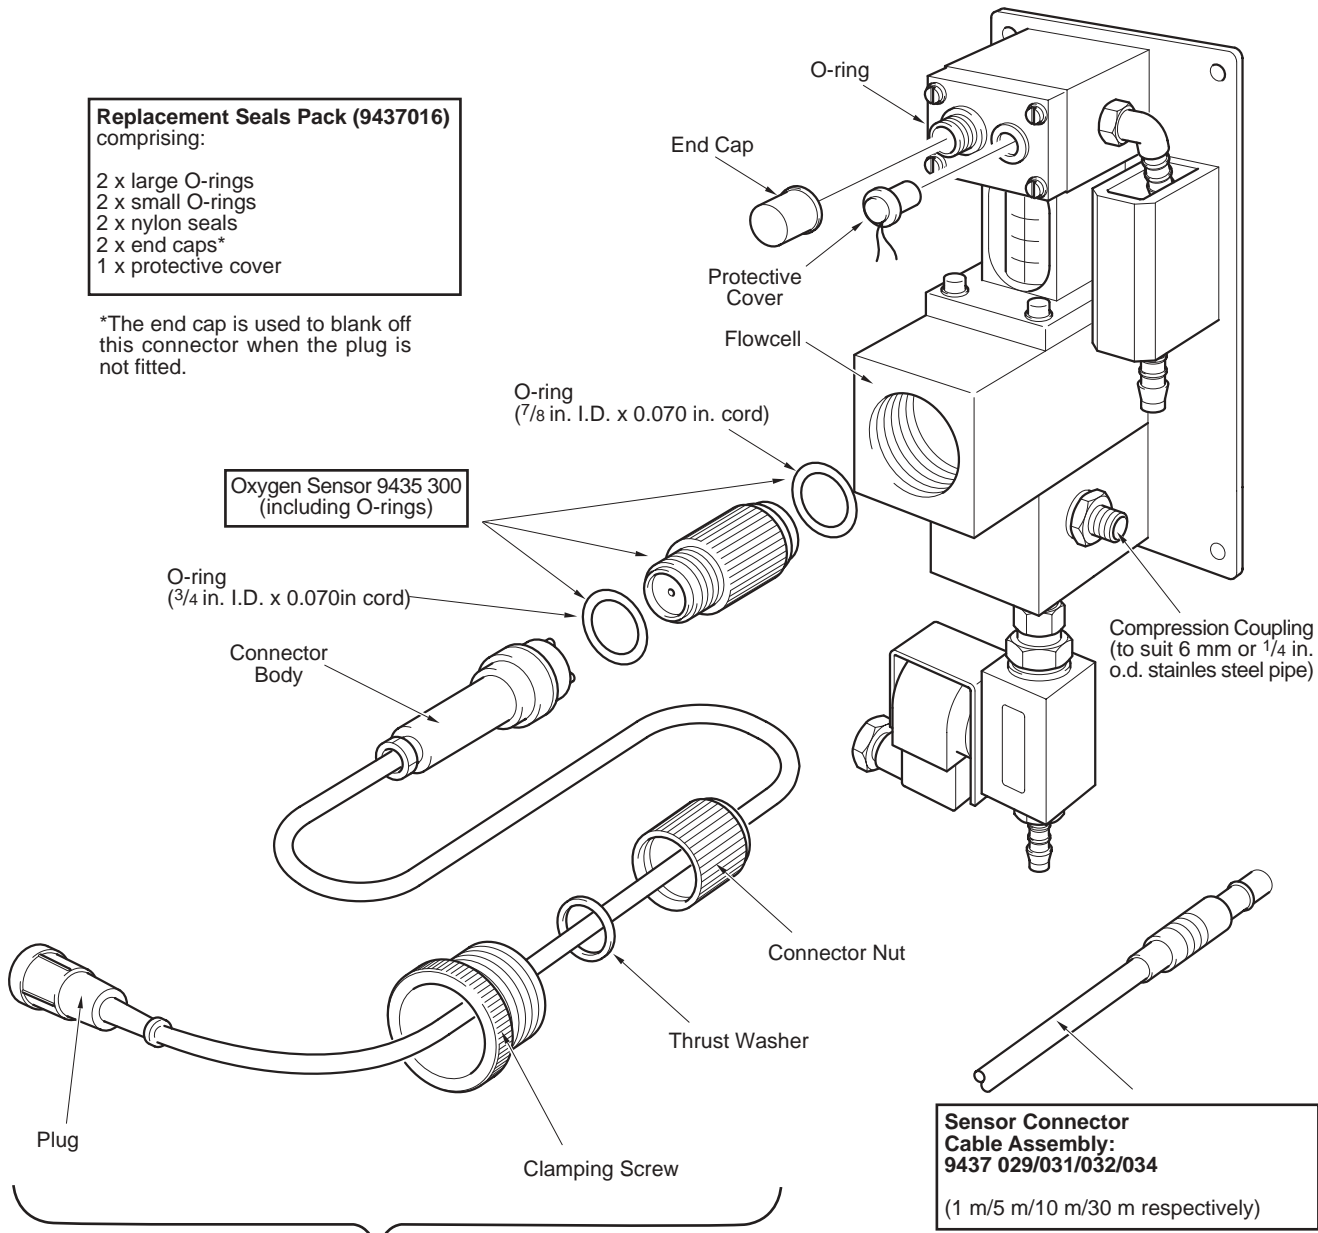


Fig. 11.1 Replacement Spares

APPENDIX A – 9438 080 24 V D.C. POWER SUPPLY UNIT (OPTIONAL)

A.1 Description

The 24 V d.c. switch mode power supply unit is capable of powering up to four separate 9438 dissolved oxygen system solenoids. The 24 V is switched to the solenoid when required by the operation of the calibration relay in the main 9438 transmitter.

Fig. A.3 shows the connection details in the PSU.


Fig. A.4 shows the interconnection between the PSU and a single 9438 transmitter.

A.2 PSU Dimensions – Fig. A.1




Warning.


- Before making any connections, ensure that the power supply, any high voltage-operated control circuits and high common mode voltage are switched off.
- Although certain instruments are fitted with internal fuse protection, a suitably rated external protection device, e.g. fuse or miniature circuit breaker (m.c.b.), must also be fitted by the installer.

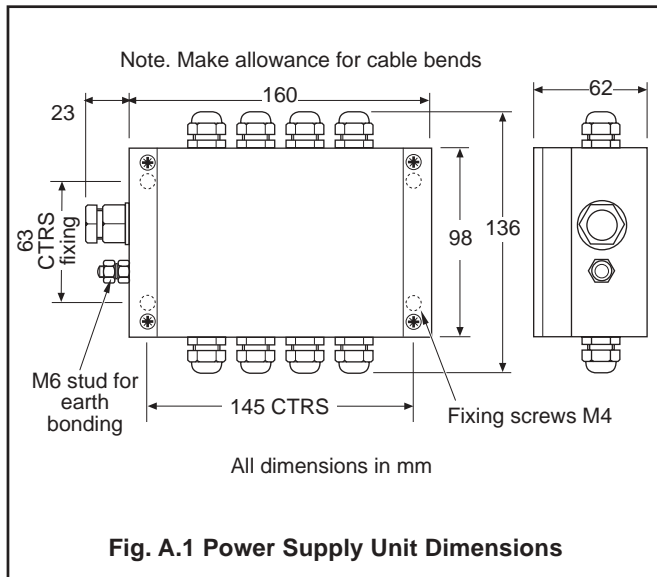


A.3 Accessing PSU Terminals – Fig. A.2

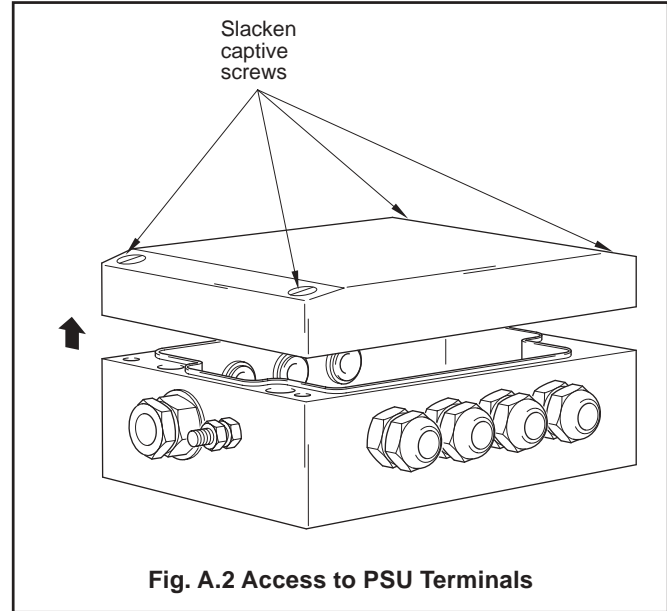

A.4 PSU Connections – Fig. A.3

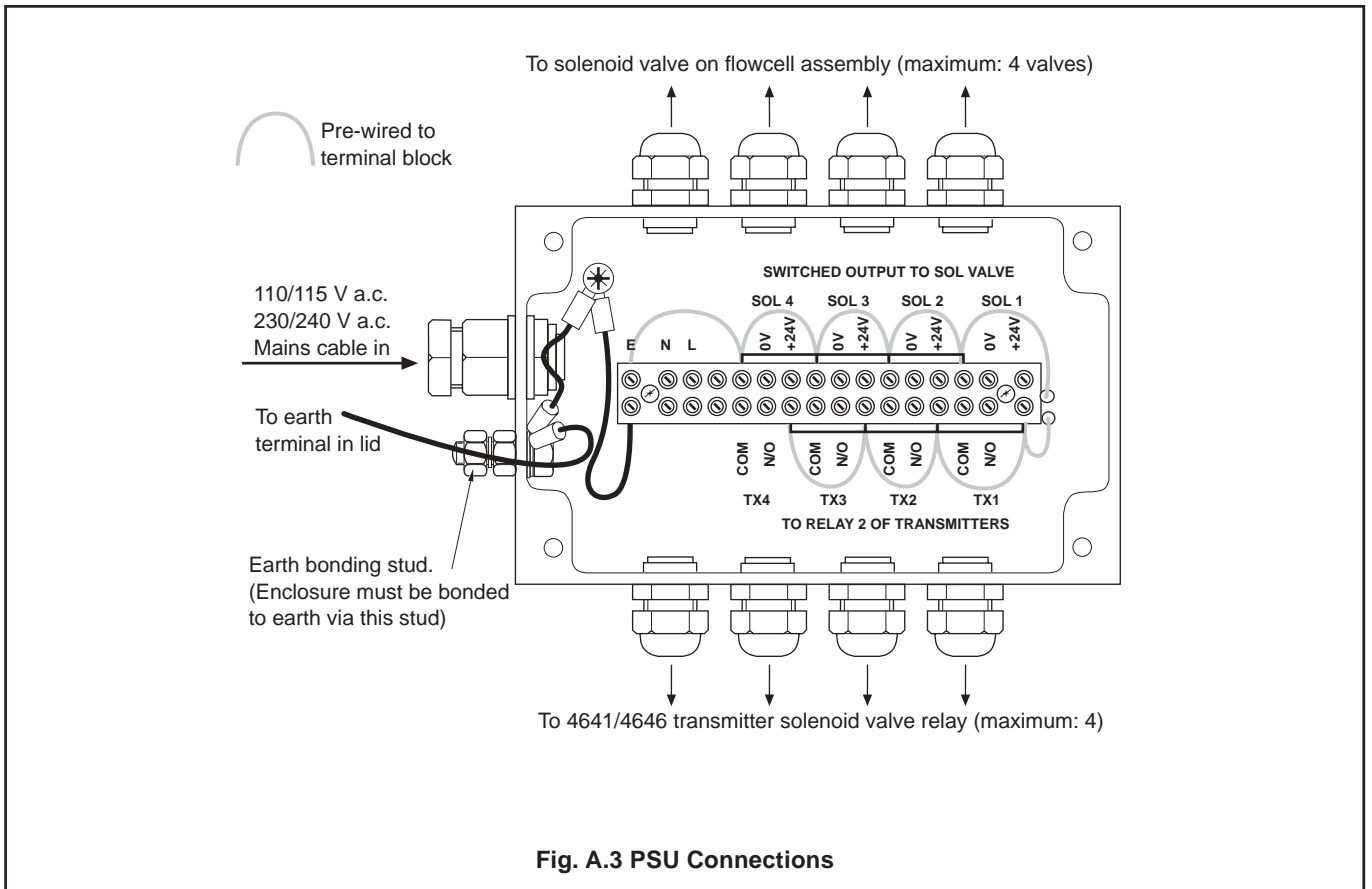

A.5 Wiring Schematic – Fig. A.4

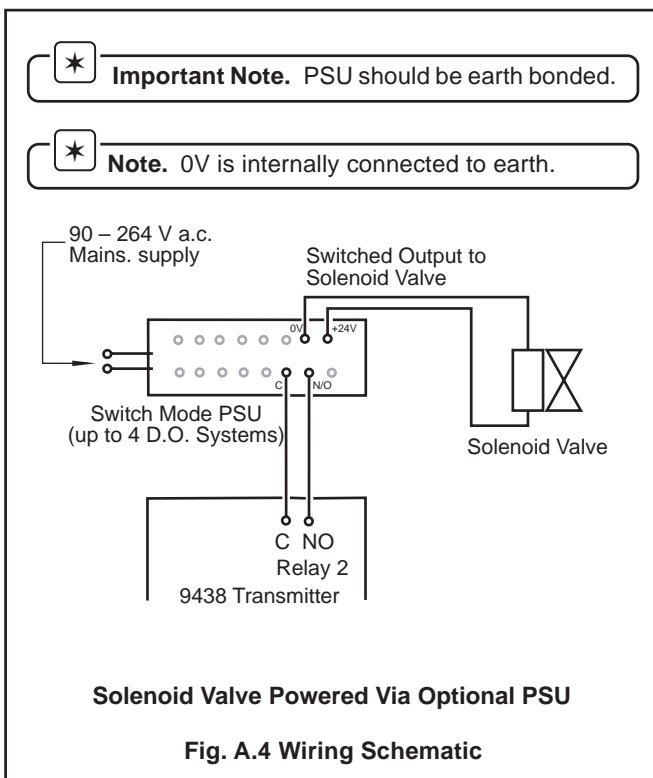

A.6 Specification

Overall dimensions

160 x 98 x 62 mm
(6.3 x 3.86 x 2.44 in.)

Output power

24 V @ 2.5 A, 60 W maximum from all outputs

Holdup time

6 ms at full load 115/230 V a.c.

Line regulation

0.3% over operating range

Load regulation

0.5% from minimum load to full load

Power supply

Voltage requirements

90 to 264 V a.c., 47 to 63 Hz

APPENDIX B – CALIBRATION DIAGNOSTICS

The transmitter can be configured to enable the current output signal to indicate certain calibration diagnostic information. If the option for diagnostics is selected within the Set Up Retransmission scrolls, then the current output will indicate when a calibration is taking place, and also will indicate if the sensor is giving Low Sensor Efficiency.


B.1 During Calibration

The current output value will be maintained during a calibration, but the output will pulse from the maintained value to 0%, depending upon a programmable Cal Pulse period.

The Calibration Pulse period can be programmed 15, 30, 45 seconds, 1, 2, 3, 4, 5 minutes.

This will continue for the full duration of the *calibration, exposing the sensor to air, and the recovery period.*


At the end of the recovery period, if the response is good, the instrument will go back on line and the current output will become live.

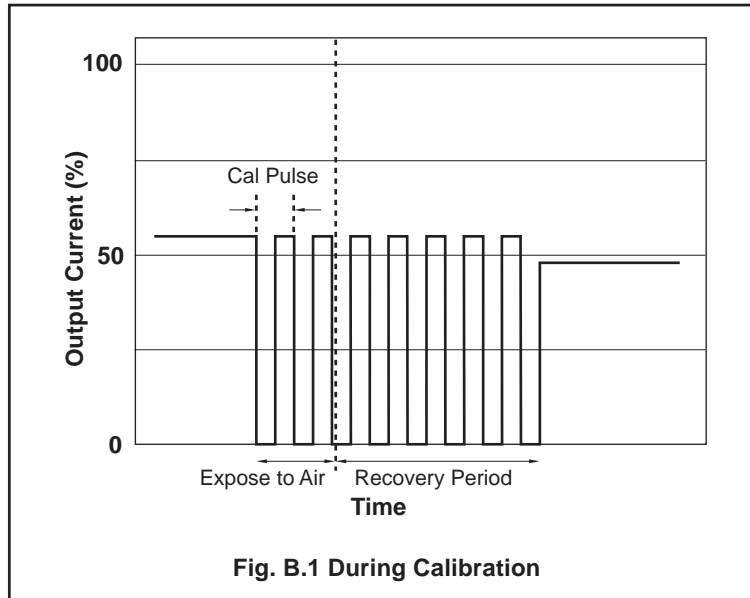

B.2 Low Sensor Efficiency

If the output from a sensor is found to be below a predetermined level during a calibration (i.e. Low Sensor Efficiency) the calibration will not be accepted. The current output immediately goes above the full scale value, and will continue to pulse on a programmable Mark/Space basis.

The time for the Mark and Space periods can be programmed separately to 30 seconds, 1, 2, 3.....10 minutes.

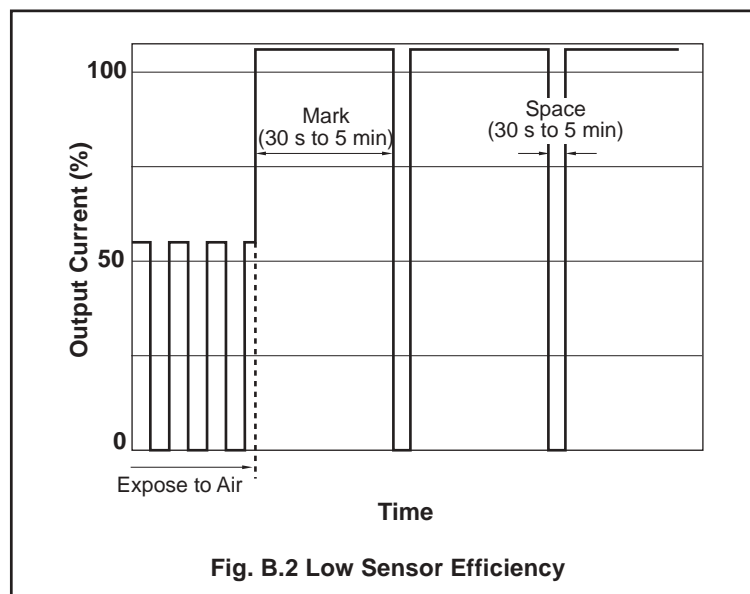

PRODUCTS & CUSTOMER SUPPORT

Products

Automation Systems

- *for the following industries:*
 - Chemical & Pharmaceutical
 - Food & Beverage
 - Manufacturing
 - Metals and Minerals
 - Oil, Gas & Petrochemical
 - Pulp and Paper

Drives and Motors

- *AC and DC Drives, AC and DC Machines, AC motors to 1kV*
- *Drive systems*
- *Force Measurement*
- *Servo Drives*

Controllers & Recorders

- *Single and Multi-loop Controllers*
- *Circular Chart, Strip Chart and Paperless Recorders*
- *Paperless Recorders*
- *Process Indicators*

Flexible Automation

- *Industrial Robots and Robot Systems*

Flow Measurement

- *Electromagnetic Magnetic Flowmeters*
- *Mass Flow Meters*
- *Turbine Flowmeters*
- *Wedge Flow Elements*

Marine Systems & Turbochargers

- *Electrical Systems*
- *Marine Equipment*
- *Offshore Retrofit and Refurbishment*

Process Analytics

- *Process Gas Analysis*
- *Systems Integration*

Transmitters

- *Pressure*
- *Temperature*
- *Level*
- *Interface Modules*

Valves, Actuators and Positioners

- *Control Valves*
- *Actuators*
- *Positioners*

Water, Gas & Industrial Analytics Instrumentation

- *pH, conductivity, and dissolved oxygen transmitters and sensors*
- *ammonia, nitrate, phosphate, silica, sodium, chloride, fluoride, dissolved oxygen and hydrazine analyzers.*
- *Zirconia oxygen analyzers, katharometers, hydrogen purity and purge-gas monitors, thermal conductivity.*

Customer Support

ABB Automation provides a comprehensive after sales service via a Worldwide Service Organization. Contact one of the following offices for details on your nearest Service and Repair Centre.

United Kingdom

ABB Automation Ltd
Tel: +44 (0)1453-826-661
Fax: +44 (0)1453-827-856

United States of America

ABB Automation Inc.
Tel: +1 775-883-4366
Fax: +1 775-883-4373

Client Warranty

Prior to installation, the equipment referred to in this manual must be stored in a clean, dry environment, in accordance with the Company's published specification. Periodic checks must be made on the equipment's condition.

In the event of a failure under warranty, the following documentation must be provided as substantiation:

1. A listing evidencing process operation and alarm logs at time of failure.
2. Copies of operating and maintenance records relating to the alleged faulty unit.



The Company's policy is one of continuous product improvement and the right is reserved to modify the information contained herein without notice.

© ABB 2001

Printed in UK (11.01)

ABB Automation Ltd
Oldends Lane, Stonehouse
Gloucestershire, GL10 3TA
UK
Tel: +44 (0)1453-826-661
Fax: +44 (0)1453-827-856

ABB Automation Inc.
2175 Lockheed Way
Carson City, NV 89706
USA
Tel: +1 775-883-4366
Fax: +1 775-883-4373

ABB has Sales & Customer Support expertise
in over 100 countries worldwide

www.abb.com